## **INSTALLATION MANUAL**


#### **MITSUBISHI HEAVY INDUSTRIES**

Air to Water Heat Pump

**Hydrolution (HM)** 

HSB60/HMA60-S/FDCW60VNX-A


PT300/RC-HY20/40

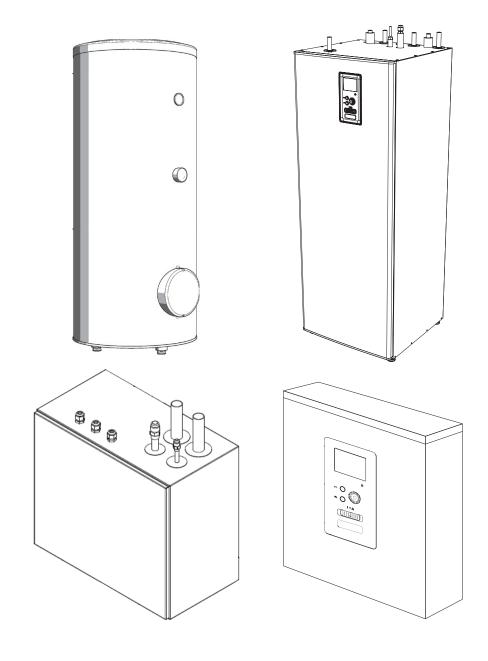

This heat pump complies with EMC Directive 2004/108/ EC (replaced by 2014/30/EU on 20/4/2016), LV Directive 2006/95/EC (replaced by 2014/35/EU on 20/4/2016). CE marking is applicable to the area of 50 Hz power supply.

English: Original instruction

PSC012D085CC

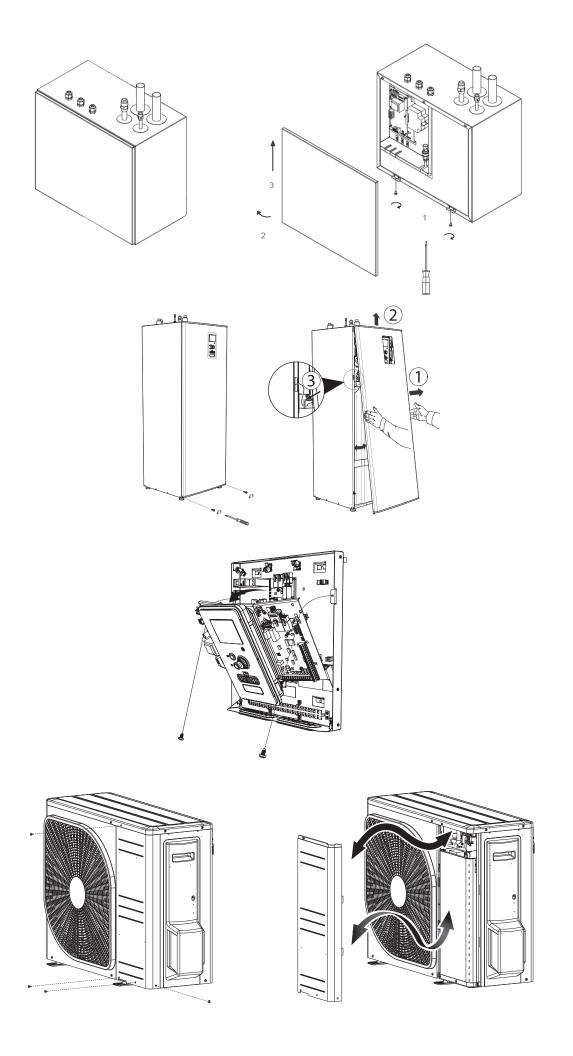

Safety precautions	2	Power supply	
		Connection between indoor unit and controller -	_ 44
General information for installer	7	Circulation pump (GP12)3-way valve (QN10/QN12)	_ 44
Over view and design	7	3-way valve (QN10/QN12)	_ 45
Transport and storage	_ 11	Sensor	_ 45
Supplied components	_ 11	Optional connection	_ 46
Assembly	_ 11	Load monitor	_ 46
Hanging indoor unit	_ 13	Room sensor BT50	_ 41
Hanging control unit	_ 13	Step controlled additional heat	_ 4/
Dimensioning expansion vessel	_ 14	<ul> <li>Relay output for emergency mode</li> </ul>	_ 41
Recommended installation order	_ 14	Emergency mode thermostat	_ 4/
D:	4-	External circulation pump	
Pipe installation	_ 15	AUX inputs	_ 41
General	_ 15	AUX outputs	_ 48
Installation diagram	_ 15	• myUpway™ HMA60-S	_ 48
HSB60	_ 10	Circuit breaker	_ 48
System requirements		Recommended fuse size	
Overflow valve	_ 18	Recommended cable size ————————————————————————————————————	_ 5(
Pump capacity diagram	_ 10	Connection between indoor and outdoor unit —	– S(
Pressure drop in indoor unit			
Dimensions and pipe connections ————————————————————————————————————		Emergency mode thermostat     External temperature sensor	_ D(
HSB60 HMA60-S	_ 19	External temperature sensor	_ ວເ
	_ 19	O a manufaction in an anal adjusting	
PT300 Water circuit	_ 20	Commissioning and adjusting	- <b>5</b> 1
Connection to heating system	_ ZI	PreparationsFilling and venting	_ 5
Connection to heating system	_ ZI	Hot water tank	_ 5
Housing disassembly of tank unit	_ ZI	Climate system	
Connecting hot water tank to indoor unit	_ ZI	Emptying the heating system	_ 5
Connecting not water tank to indoor unit ————————————————————————————————————	_ <u> </u>	Inspection of installation	_ 5
Hot water circulation circuit	_ 23	Start-up and inspection	_ 5
Connection of external heat source		Before start-up	_ 52
Refrigerant circuit		Commissioning with heat pump	- 52
Connecting refrigerant pipes	_ 25 25	Commissioning with real pump ——————————————————————————————————	_ 52
Piping insulation	_ 25 25	3-way valve operation check	- 52 52
Drain connection		AUX function check	- 52 52
Dockings ————————————————————————————————————		Cooling mode	- 52 52
Dookings	_ 20	Cleaning particle filter	- 52 52
Electrical installation	31	Secondary adjustment	- 52 52
General ————————————————————————————————————	- 31	Start guide	- 52 53
Electrical components	_ 32	Heating/cooling curve setting	_ 65
Accessibility, electrical connection for controller	_ 35	Hot water circulation setting	_ 67
Cable lock		SG Ready	_ 67
System connection			
HSB60	_ 37	Control	_ 68
Recommended fuse size	_ 37	Display unit	_ 68
Recommended cable size	_ 37	Menu system Menu list	_ 69
Power supply	_ 37	Menu list	_ 72
Connection between indoor and outdoor unit	_ 37	Menu 1 – INDOOR CLIMATE ————————————————————————————————————	_ 72
Connection between indoor unit and controller -	_ 37	Menu 2 – HOT WATER	
Cascade connection setting	_ 38	Menu 3 – INFO	_ 72
RC-HY20Recommended fuse size	_ 38	Menu 4 – MY SYSTEM	_ 72
Recommended fuse size	_ 38	Menu 5 – SERVICE	_ 73
Recommended cable size	_ 38		
Power supply	_ 38	Service	_ 81
Connection between indoor unit and controller -			
Circulation pump (GP12)	_ 38	Disturbances in comfort	_ 85
Circulation pump (GP12)	_ 39	Manage alarm	_ 85
Sensor	_ 39	Troubleshooting	_ 85
Optional connections	_ 40	Additional heating only	_ 86
Room sensor BT50		Alarm list	_ 87
Step controlled additional heat	_ 41		
Relay output for emergency mode	_ 41	Accessories	_ 90
External circulation pump	_ 42		
AUX inputs	_ 42	Technical data	_ 91
AUX outputs	_ 43	Dimensions and setting-out coordinates	_ 91
• myUpway™ RC-HY40	_ 43	Electrical circuit diagram	_ 92
RC-HY40	_ 44		
Recommended fuse size			
Recommended cable size	_ 44		

1

#### Safety precautions

When installing the unit, be sure to check whether the selection of installation place, power supply specifications, usage limitation (piping length, height differences between indoor and outdoor units, power supply voltage and etc.) and installation spaces.

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before installation in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into ⚠WARNING and ⚠CAUTION. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the ⚠WARNING and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in ⚠CAUTION. These are very important precautions for safety. Be sure to observe all of them without fail.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.

This heat pump complies with EMC Directive 2014/30/EU.

This appliance is designed for use in a home environment and can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children

shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This in accordance to applicable parts of the low voltage directive 2014/35/EU, LVD. This appliance is also intended for use by

This appliance is also intended for use by experts or trained users in shops, hotels, light industry, on farms and in similar environments. This in accordance to applicable parts of the machinery directive 2006/42/EC.

CE marking is applicable to the area of 50 Hz power supply.

The emission sound pressure level from each Indoor and Outdoor unit is under 70 dB(A).

#### **⚠ WARNING**

## Installation must be carried out by the qualified installer.



If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction.

## Install the system in full accordance with the instruction manual.



Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire.

## Use the original accessories and the specified components for installation.



If parts other than those prescribed by us are used, It may cause water leaks, electric shocks, fire and personal injury.

# When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage.



Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.

# Ventilate the working area well in the event of refrigerant leakage during installation.



If the refrigerant comes into contact with naked flames, poisonous gas is produced.

## After completed installation, check that no refrigerant leaks from the system.



If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced.

Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support.

An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit.

## Install the unit in a location with good

Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.

#### Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.

Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.

#### Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.

If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.

#### The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.

Power supply with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.

#### Be sure to shut off the power before starting electrical work.

Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.

#### Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.

Unconformable cables can cause electric leak, anomalous heat production or fire.

#### Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.

Loose connections or cable mountings can cause anomalous heat production or fire.

Arrange the wiring in the control box so that it cannot be pushed up further into



#### the box. Install the service panel correctly.

Incorrect installation may result in overheating and fire.

#### Do not perform brazing work in the airtight room.

It can cause lack of oxygen.

#### Use the prescribed pipes, flare nuts and tools for R410A.

Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.

#### Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much.

Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.

#### Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.

If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause bust or personal injury due to anomalously high pressure in the refrigerant.

#### Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulphide gas can occur.

Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety.

#### Only use prescribed optional parts. The installation must be carried out by the qualified installer.

If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.

#### Do not run the unit with removed panels or protections

Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.

## Be sure to fix up the service panels.

Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.

#### Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.

If you repair or modify the unit, it can cause water







leaks, electric shocks or fire.

#### Do not perform any change of protective device itself or its setup condition



The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.

#### Be sure to switch off the power supply in the event of installation, inspection or servicing.



If the power supply is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.

#### Consult the dealer or an expert regarding removal of the unit.



Incorrect installation can cause water leaks, electric shocks or fire.

#### Stop the compressor before disconnecting refrigerant pipes in case of pump down operation.



If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.

#### **⚠** CAUTION

#### Carry out the electrical work for ground lead with care.



Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to shortcircuiting.

#### Use the circuit breaker with sufficient breaking capacity.



If the breaker does not have sufficient breaking capacity, it can cause the unit malfunction and fire.

## Earth leakage breaker must be insta-



If the earth leakage breaker is not installed, it can cause electric shocks.

#### Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.



Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.

#### Do not install the unit near the location where leakage of combustible gases can occur.



If leaked gases accumulate around the unit, it can

cause fire.

Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.

Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.

#### Secure a space for installation, inspection and maintenance specified in the manual.



Insufficient space can result in accident such as personal injury due to falling from the installation place.

When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit.

If safety facilities are not provided, it can cause personal injury due to falling from the installation

#### Do not use the indoor unit at the place where water splashes may occur.



Since the indoor unit is not waterproof, it can cause electric shocks and fire.

#### Do not install or use the system close to the equipment that generates electromagnetic fields or high frequency harmonics.



Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.

#### Do not install the outdoor unit in a location where insects and small animals can inhabit.



Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.

#### Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation.



Using an old and damage base flame can cause the unit falling down and cause personal injury.

#### Do not install the unit in the locations listed below.



Locations where carbon fiber, metal powder or

any powder is floating.

- Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur.
- Vehicles and ships.
- Locations where cosmetic or special sprays are often used.
- Locations with direct exposure of oil mist and steam such as kitchen and machine plant.
- Locations where any machines which generate high frequency harmonics are used.
- Locations with salty atmospheres such as coastlines.
- Locations with heavy snow (If installed, be sure to provide base flame and snow hood mentioned in the manual).
- Locations where the unit is exposed to chimney
- Locations at high altitude (more than 1000m
- Locations with ammonic atmospheres.
- Locations where heat radiation from other heat source can affect the unit.
- Locations without good air circulation.
- Locations with any obstacles which can prevent inlet and outlet air of the unit.
- Locations where short circuit of air can occur (in case of multiple units installation).
- Locations where strong air blows against the air outlet of outdoor unit.

It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.

#### Do not install the outdoor unit in the locations listed below.



- Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood.
- Locations where outlet air of the outdoor unit blows directly to plants.
- Locations where vibration can be amplified and transmitted due to insufficient strength of structure.
- Locations where vibration and operation sound generated by the outdoor unit can affect seriously. (on the wall or at the place near bed
- Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
- Locations where drainage cannot run off safely. It can affect surrounding environment and cause a claim.

#### Do not install the remote controller at the direct sunlight.



It can cause malfunction or deformation of the remote controller.

#### Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.



It can cause the damage of the items.

## Take care when carrying the unit by



If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.

#### Dispose of any packing materials correctly.



Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.

#### Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit.



If weld spatter entered into the indoor unit during welding work, it can cause pin-hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or

#### Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.



Insufficient insulation can cause condensation. which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.

#### Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.



If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.

#### Do not touch any buttons with wet hands. It can cause electric shocks.



#### Do not shut off the power supply immediately after stopping the operation.



Wait at least 5 minutes, otherwise there is a risk of water leakage or breakdown.

#### Do not control the system with main power switch.



It can cause fire or water leakage. In addition, the

fan can start unexpectedly, which can cause personal injury.

## Do not touch any refrigerant pipes when the system is in operation.

During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.

#### Notabilia for units designed for R410A

Only use R410A refrigerant. R410A is the refrigerant whose pressure is 1.6 times as high as that of conventional refrigerant.

The size of charging port of service valve and check joint for R410A are altered from that for conventional refrigerant in order to prevent the system being charged with the incorrect refrigerant by mistake. And the protruding dimension of pipe for flare processing and flare nut size for R410A are also altered from that for conventional refrigerant in order to reinforce strength against the pressure for R410A. Accordingly the dedicated tools for R410A listed in the below mentioned table should be prepared for installation and servicing.

	Dedicated tools for R410A
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charge
d)	Torque wrench
e)	Flare tool
f)	Protrusion control gauge for copper pipe
g)	Vacuum pump adapter
h)	Gas leak detector

Do not use charging cylinder. Using charging cylinder may alter the composition of refrigerant, which results in making the performance of the system worse.


Refrigerant must be charged always in liquid state from the bottle.

#### **General information for installer**

For outdoor unit installation information, see Installation manual for Outdoor unit.

#### Over view and design

#### HSB60

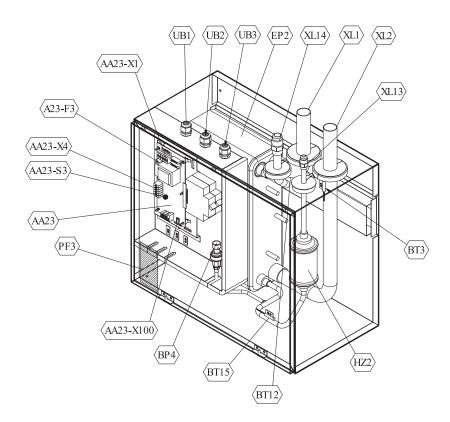

#### Pipe connections

XL1(Red mark)	Climate system supply
XL2 (Blue mark)	Climate system return
XL14	Connection, gas line
XL13	Connection, liquid line

#### Valves etc.

EP2	Heat exchanger
HQ1	Particle filter (supplied)
HZ2	Drying filter

#### **Electrical components**

AA23	Communication board
AA23-F3	Fuse for external heating cable
AA23-S3	DIP switch, addressing of outdoor unit
AA23-X1	Terminal block, incoming supply, connection
	of KVR
AA23-X4	Terminal block, communication with indoor
	module / control module
AA23-X100	Terminal block, communication outdoor
	module


#### Sensor, thermostats

BP4	Pressure sensor, high pressure
BT3	Temperature sensor, heating medium, return
BT12	Temperature sensor, condenser, supply
BT15	Temperature sensor, fluid pipe

#### Miscellaneous

UB1	Cable gland
UB2	Cable gland
UB3	Cable gland

#### HMA60-S

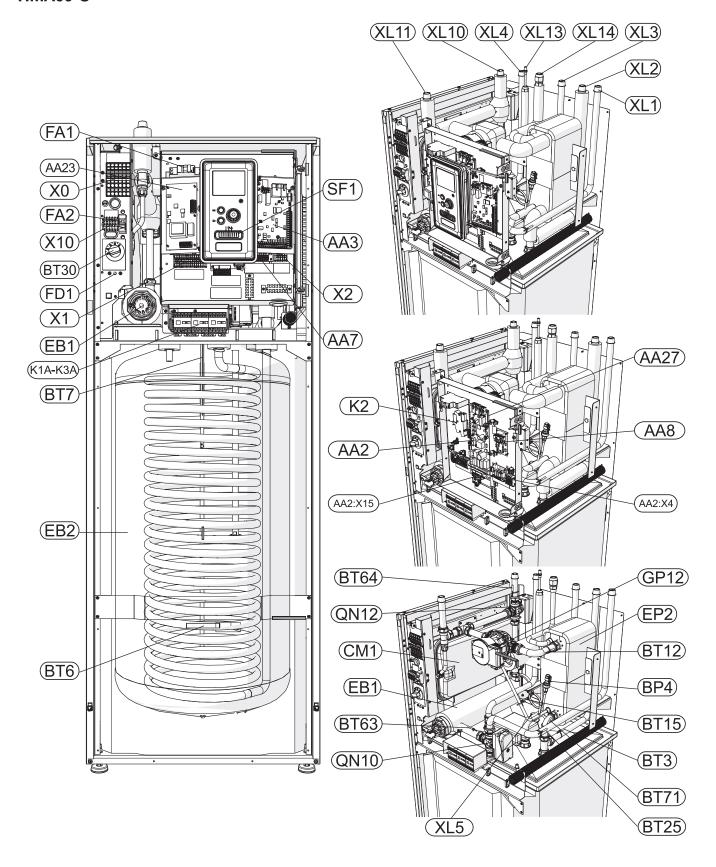

#### Pipe connections

XL1 ( →)	Connection, heating medium, supply
XL2 ( )	Connection, heating medium, return
XL3	Connection, cold water
XL4	Connection, hot water
XL5	Connection, hot water circulation
XL10	Connection, cooling
XL11	Connection, safety group, manometer
XL13	Connection, liquid cooling medium
XL14	Connection, gas cooling medium

#### **HVAC** elements

CM1	Diaphragm expansion vessel, closed
QN10	Isolation valve, domestic hot water / central heating
QN12	Isolation valve, cooling/heating
GP12	Circulation pump
EP2	Heat exchanger

#### Sensors

BP4	Pressure sensor, high pressure
BT3	Temperature sensor, heating medium return
BT6	Temperature sensor, hot water loading
BT7	Temperature sensor, top of the hot water heater
BT12	Temperature sensor, condenser outlet
BT15	Temperature sensor, liquid
BT25	Temperature sensor, heating medium supply
BT63	Temperature sensor, heating medium supply downstream the submersible heater
BT64	Temperature sensor, cooling medium supply
BT71	Temperature sensor, heating medium return


#### **Electrical elements**


X0	High voltage terminal block 400V/230V~
X1	Low voltage terminal block 230V $\sim$
X2	Low voltage terminal block 230V $\sim$
X10	Low voltage terminal block 230V $\sim$
AA2:X4	Low voltage terminal block
AA2: X15	Low voltage terminal block
K1A-K3A	Submersible heater switch
K2	Alarm relay
BT30	Thermostat - emergency mode
AA2	Main card
AA3	Sensor card
AA23	Communication card
AA7	Relay card
AA8	Titanium anode card
AA27	Relay card
FD1	Temperature limiter
FA1	Circuit breaker (to internal module)
FA2	Circuit breaker (to external module)
EB1	Submersible heater

#### Other

SF1	Controller switch
EB2	Domestic hot water tank

#### **PT300**

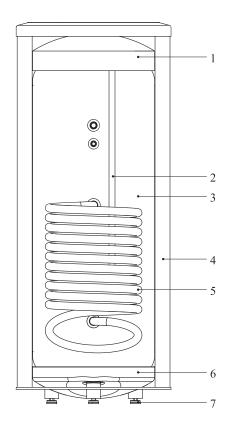

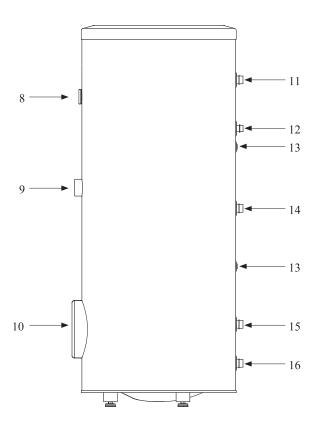

#### Section of the PT300 storage tanks.

- 1. Upper insulation of the storage tank
- 2. Protective magnesium anode
- 3. Enamelled tank
- 4. Side insulation of the storage tank
- 5 Coil
- 6. Lower insulation of the storage tank
- 7. Adjustable foot

#### Side view of the PT300 storage tanks.

- 8. Thermometer
- 9. Connector pipe for mounting electric heating unit
- 10. Inspection opening
- 11. Hot water intake connector pipe
- 12. Hot water circulation connector pipe
- 13. Temperature sensor cover
- 14. Coil supply connector pipe
- 15. Connection of return line from the coil
- 16. Cold water supply connector pipe

#### **Transport and storage**


Indoor unit and tank unit must be transported and stored vertically in dry conditions.

#### **Supplied components**

# HSB60 Indoor unit Particle filter R25 (HQ1). Brackets kit

HMA60-S Indoor unit with tank



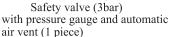

air vent (1 piece)
\*The opening pressure of the safety valve is 3 bar.

- Strap for single-phase connection.
- Particle filter R25 (HQ1).



Temperature sensor (2 items)



RC-HY20/40 Control unit



Outside sensor



Insulation tape



Aluminium tape



Room sensor (RC-HY40 only)



Temperature sensor




Current sensor (RC-HY40 only)


#### **Assembly**

- It is recommended that indoor unit is installed in a room with existing floor drainage, most suitably in a utility room or boiler room.
- For indoor unit and control unit, the mounting surface must be firm, flat and vertical, preferably a concrete wall.
- Indoor unit with tank and tank unit must be set on a solid waterproof base that would keep the weight of the unit. The height-adjusting legs allow for levelling and stable setting.

#### HMA60-S

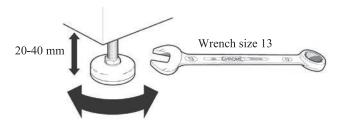

#### PT300

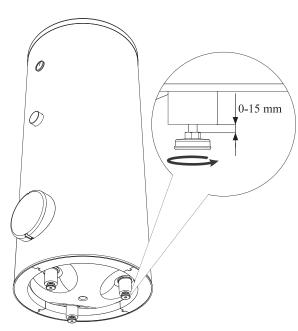


- For indoor unit with tank, floor drain port is required to connect drain hose in case cooling function is used.
- Install indoor unit with its back to an outside wall, ideally in a room where noise does not matter. If this is not possible, avoid placing it against a wall behind a bedroom or other room where noise may be a problem.
- Route pipes so they are not fixed to an internal wall that backs on to a bedroom or living room.
- Install indoor unit with tank, tank unit and its pipings to indoor unit indoors in order to avoid icing.
- Ensure free space described in the following figures for future maintenance.


#### **General information for the installer**

#### HSB60

Recommendation for positioning on wall

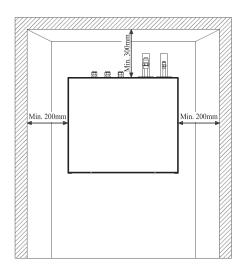


#### Recommendation for positioning in corner

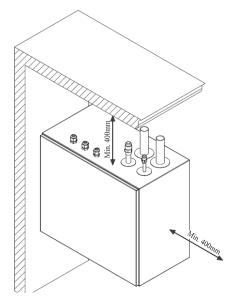

\*Min 800mm is required in front


#### HMA60-S

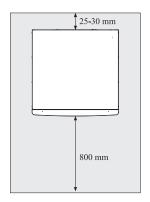

#### **IMPORTANT**


When using an additional heat source, leave behind the device the space necessary for non trouble free connections and subsequent maintenance.

#### PT300

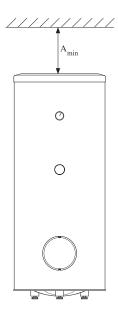

A<sub>min</sub> is required on top to replace anode bar, and 500 mm is required in front to replace immersion heater if equipped.


Application	Connector pipe dia.	Type of anode	$A_{min}$
DT200	1"	Chain ø $26  imes 8$	150 mm
PT300	3/4"	Titanium anode	200 mm

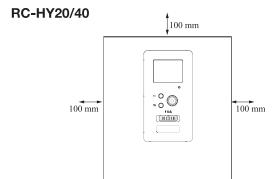


#### Hanging indoor unit

It is recommended that the split box is installed in a room with existing floor drainage, most suitably in a utility room or boiler room.

1. The bracket for the split box is mounted to the wall by use of appropriate screws.

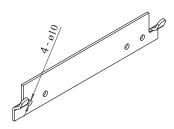


2. Insert HSB60 in the bracket mounted to the wall.

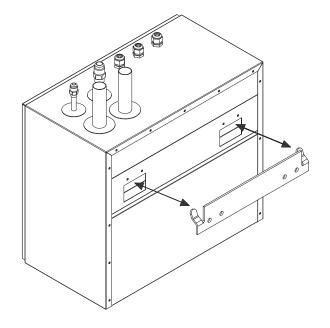

#### Hanging control unit

Use all mounting points and install control unit upright against a flat wall. Make sure whole back surface faces the wall.

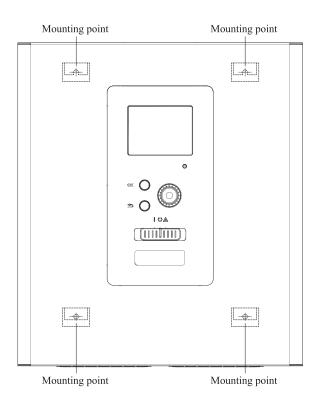

#### NOTE

Indoor unit weigh 16 kg excluding water inside.

#### **Dimensioning expansion vessel**

The expansion vessel volume must be at least 5% of total water volume in the circulation system.

HMA60-S is equipped with an expansion vessel with a volume of 10 liters.

#### Initial pressure and max height difference


Recommended maximum height difference between expansion vessel and the highest point in the system is 5m.

The initial pressure of the pressure expansion vessel must be dimensioned according to the maximum height (H) between the vessel and the highest positioned radiator, see figure. An initial pressure of 0.5 bar (5 myp) means a maximum permitted height difference of 5 m.

If the standard initial pressure in the pressure vessel is not high enough it can be increased by filling via the valve in the expansion vessel. The expansion vessel's standard initial pressure must be entered in the check list on User's manual.

Any change in the initial pressure affects the ability of the expansion vessel to handle the expansion of the water.

Consult local distributor in case height difference exceeds 5m.

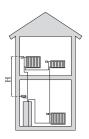

#### Recommended installation order

- 1. Hang indoor unit and control unit to appropriate position and connect indoor unit and tank unit.
- Connect indoor unit to climate system, cold and hot water lines as well as any external heat sources. See page 15-17. Also see docking descriptions on page 28-30 and further on.
- 3. Install refrigerant pipes according to the description on the Installation manual for outdoor unit.
- Connect current limiter, any centralised load control and external contacts as well as the cable between indoor unit and outdoor unit.
- 5. Follow the electrical instructions on page 31-50.

#### **Pipe installation**

#### General

Pipe installation must be carried out in accordance with current norms and directives.

A following table shows plumbing necessary for each product.

	Refrigerant	Plumbing	
HSB	Necessary	Necessary	
HMA	Necessary	Necessary	
PT	_	Necessary	
RC-HY	_	_	

This heat pump system is designed for low or medium temperature heating system. It is recommended water temperature must not exceed 55°C on supply and 45°C on

return at lowest design outdoor temperature (DOT) though indoor unit can operate with a return temperature of up to 65°C and an outgoing temperature from the unit of 65°C.

Indoor unit is not equipped with shut off valves; these must be installed outside the heat pump to facilitate any future servicing.

Indoor unit can be connected to the radiator system, floor heating system and/or fan convectors.


Safety valve is not equipped with in indoor unit. Make sure to install safety valve in the circuit.

#### **Installation diagram**

FDCW60VNX-A outdoor unit provides heat for space heating and domestic hot water using free energy in the outdoor air within the range of low temperature up to -20°C. Connection is different according to the type of indoor unit (see below figures). The system is controlled by RC-HY20 or RC-HY40 control unit.

#### HSB60

HSB60 indoor unit is equipped with plate heat exchanger. It needs to install expansion vessel, shut-off valves, safety valve, electric heater and circulation pump to make a complete heating system. In case domestic hot water is required, 3 way valve and tank is also necessary.

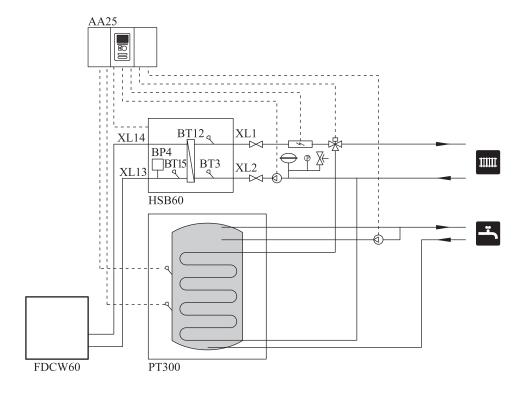


#### Pipe installation

#### HMA60-S


HMA60-S indoor unit is equipped with coil water heater, expansion vessel, safety valve, electric heater, plate heat exchanger, sensors and gauge, circulation pump, and controller.

#### **Basic connection diagram**

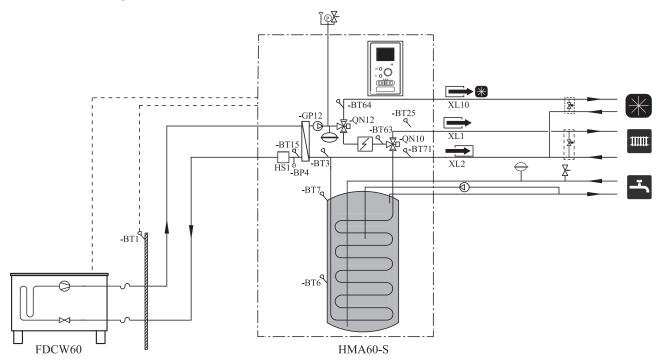

Symbol	Description	
X	Cut-off valve	
	Non-return valve	
	Three-way valve	
<b>∑</b> -	Safety valve	
٩	Temperature sensor	
$\ominus$	Diaphragm expansion vessel	
P	Manometer	
1	Vent	
	Circulation pump	
4	Electric module	

Symbol	Description	
	Particulate filter	
	Compressor	
	Heat exchanger	
(*)	Cooling	
111111	Central heating systems	
<u>ئ</u>	Domestic hot water	
∑w	Relief valve	
	Additional heat source	

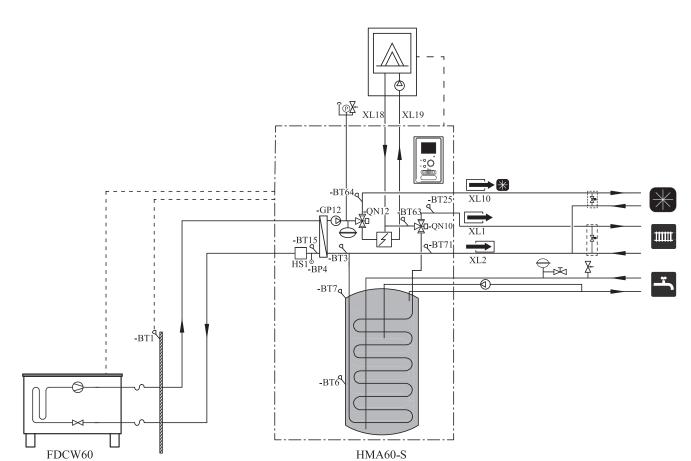

#### Scheme with the connection of an additional heat source

#### Indoor HMA60-S module

- It is recommended that the HMA60-S module should be installed in a room with a floor drain, at best in a utility room or a boiler house.
- · The floor must be solid, concrete at best.
- The HMA60-S module must be set with its back to the outer wall, at best in a room where noise is not a problem. If possible, do not place the device near a wall of a bedroom or another room where noise might be a problem.
- The device can be leveled using regulated legs.
- Pipes must be led in such a way that they are not adjacent to the bedroom or living room.
- Remember to leave about 800 mm free space at the front and 220 mm over the device to provide for future maintenance

#### Recommended order of assembly

- 1. Connect HMA60-S module to the heating system, cold, and hot water pipelines.
- 2. Install the cooling medium pipes.
- 3. Connect the outdoor temperature sensor, and cables between HMA60-S and FDCW60.
- 4. Connect power supply to module HMA60-S.
- 5. Proceed according to start-up instructions in chapter Start-up and regulation.

#### **System requirements**

The minimum water volume in the climate system is subject to the values in the table below. If it is not fulfilled, volume vessel must be installed.

For more options, see the docking description on Page 26.

(liter)

	Minimum volume of the heating system during heating / cooling
HSB60, HMA60-S, FDCW60VNX-A	50

#### Overflow valve

#### NOTE-

A free flow is required for all docking options, which means that an overflow valve must be installed.


The circulation pump may become damaged.

#### **Pump capacity diagram**


#### HSB60

HSB60 is not equipped with circulation pump.

This graph shows the characteristic of CPD11-25M/65.

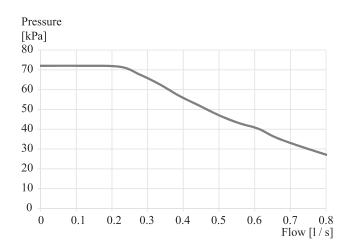


#### HMA60-S

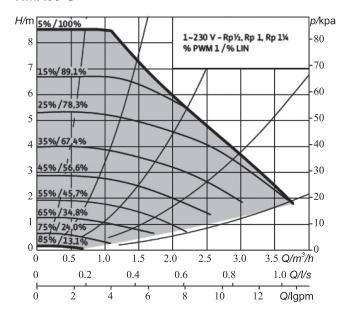


#### Pressure drop in indoor unit

#### HSB60

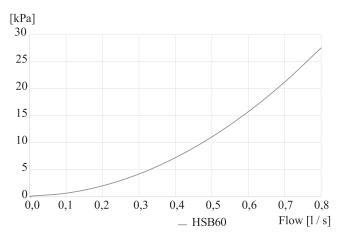

#### HMA60-S

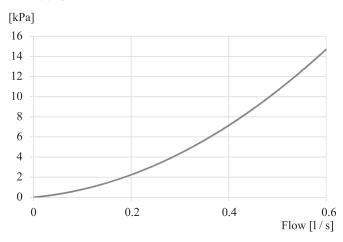

#### Connection of extra circulation pump


When connecting extra circulation pumps, requirements for pressure, maximum flow etc must be met. See page 28, 29 for location.

#### NOTE

Non-return valve must be installed in case extra circulation pump is used. See page 28, 29 for the position.

The circlulation pump may become damaged.


# Dimensions and pipe connections HSB60

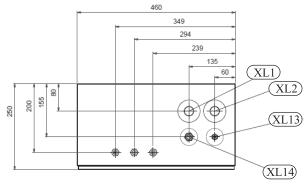

#### Pipe connections

XL1 (Red mark) Climate system, flow ø22 mm
XL2 (Blue mark) Climate system, return ø22 mm
XL14 Gas line refrigerant, flare ½"
XL13 Liquid line refrigerant, flare ¼"

#### HMA60-S

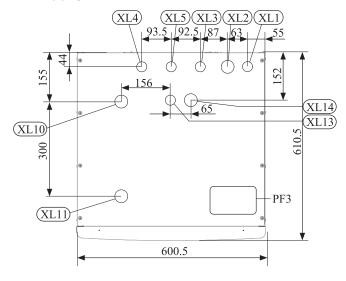


#### Pipe connections

$XL1(\square)$	Connection, Heating medium supply ø22 mm
XL2(-)	Connection, Heating medium return ø22 mm
XL3	Connection, cold water ø22 mm
XL4	Connection, hot water ø22 mm
XL5	Connection, circulation ø15 mm
XL13	Connection, liquid cooling medium 1/4"
XL14	Connection, gas cooling medium ½"
XL10	Connection, cooling ø22 mm
XL11	Connection, safety valve ø22 mm, manometer

#### Other information

PF3 Serial number plate

#### PT300

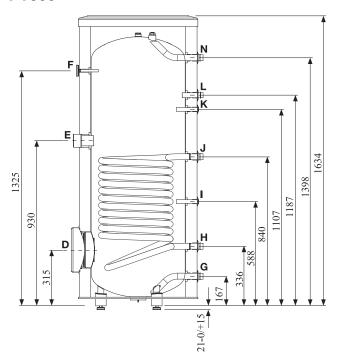

	Connection	U/m	PT300
D	Inspection opening	mm	ø120
Ε	Heating unit connection	inch	1½"Female
F	Thermometer enclosure	mm	ø10 Female
N	Hot water outlet	inch	1"Male
L	Hot water circulation	inch	¾"Male
K	Temp. sensor enclosure (BT7)	mm	ø16 Female
J	Coil supply	inch	1"Male
I	Temp. sensor enclosure (BT6)	mm	ø16 Female
Н	Return from coil	inch	1"Male
G	Cold water input	inch	1"Male

#### Water circuit

#### **Connection to heating system**

Connect XL1 to supply line and X2 to return line from heating system.


- All required safety devices and shut-off valves must be installed as close to the indoor unit as possible.
- Install bleed valves where necessary, highest point of the water system in usual case.
- When connecting to a system with thermostats on all radiators, install an overflow valve or remove some of the thermostats to ensure sufficient flow.
- See section Dockings for outline diagram.
- Install a safety valve with manometer on heating circuit and hot water circuit. (FL2)

For HSB60 install a safety valve for heating circuit on the water pipe returning to indoor unit since it doesn't have port for FL2.

The entire length of the overflow water pipe from the safety valves must be inclined to prevent water pockets and must also be frost proof.


■ The end of overflow water pipe from the safety valves must be left open to the atmosphere. The water may drip from the pipe.

#### HSB60

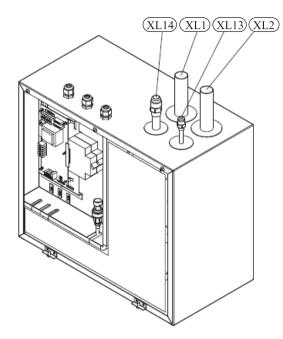

Install safety valve as close to XL2 as possible.

#### HMA60-S

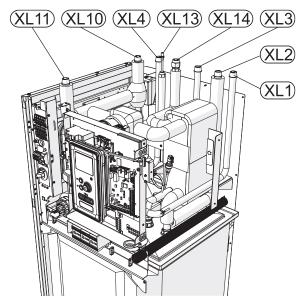

Install safety valve FL2 on XL11.

#### Connection to hot water heater

For HSB60 indoor unit, it is necessary to connect PT300 tank unit applying 3 way valve in order to use domestic hot water function.

For HMA60-S indoor unit, 180L tank unit is integrated in indoor unit.


#### Housing disassembly of tank unit

Removable housing with thermal insulation facilitates transport and installation of the storage tank. Disassembly the housing in the following order (see below figure):

- 1. Remove the Temperature gauge, plug of the heating element connector pipe and blanking plate of the inspection opening.
- 2 Remove the upper cover of the housing together with thermal insulation.
- 3. Remove the plugs from the connector pipes and black bushings.
- 4. Remove the fixing screws and the strip connecting the housing jacket.
- 5. Remove the jacket surrounding the tank (housing jacket.)
- 6. Remove the four-piece thermal insulation.

After the installation of the storage tank in its final location, reinstall the removed components in the reverse order.

Housing and thermal insulation disassembly

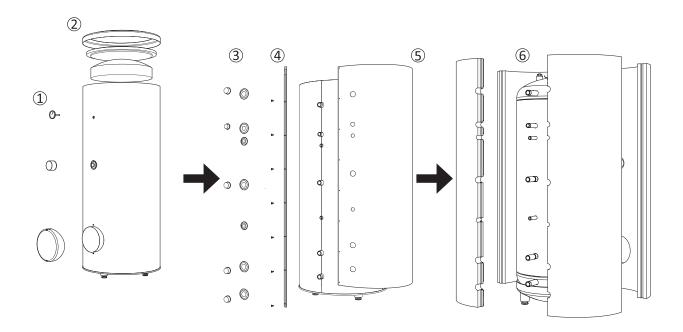

#### Connecting hot water tank to indoor unit

#### CAUTION -

Installation and commissioning of the storage tank shall only be done by appropriately qualified installer.

The installer should inform the user of the functions of the product and provide the necessary in formation on its safe use.


#### Information -

We recommend installing a strainer in order to protect the pumps, check valve and the components of the heating system.

- Tank and its pipings to indoor unit must be installed indoors where the temperature wouldn't drop below 15°C in order to prevent pipings from icing.
- Maximum piping length between indoor unit and tank is 10 m.
- Tank unit should be placed on firm, preferably a concrete floor or foundation.

- Tank unit can be aligned using the adjustable feet.
- Protection against overpressure shall be made in accordance with the relevant regulations.
- Connect the heating system according to the installation diagram (see figure).


Installation diagram of the PT storage tank with one coil.

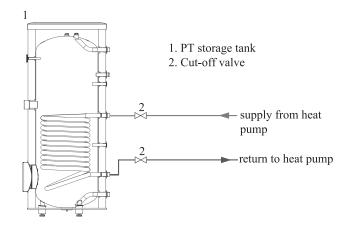

#### Connecting hot water tank to water main

- Install a mixing valve if the temperature exceeds 60 °C.
- It is recommended to install a thermostatic mixing valve for stable temperature hot water supply.
- Connect the storage tank to the water supply system of water pressure at least 1 bar and max 10 bar. Install a pressure reducer if the pressure at the cold water inlet to the tank is higher than allowed.
- Install a safety valve which have a maximum 8.0 bar opening pressure on the incoming domestic water line according to outline diagram in order to protect the storage tank against overpressure. Pressure increases during heating the water.
- During heating the water, small and temporary water flow from the safety valve can occur, which indicates that the pressure has increased above the rated value, which triggered the valve. This may in no way be prevented.
- Safety valve drain line should be installed with a decline, in an environment free of freezing and remain open to the atmosphere. The manufacturer is not responsible for flooding the room through the safety valve.
- Blocked safety valve can cause equipment failure. Drain the outflow from the safety valve to the sewerage or drain grate.
- See section Dockings for outline diagram.
- Connect the water supply system according to the installation diagram.

Installation diagram of the PT storage tank with one coil.

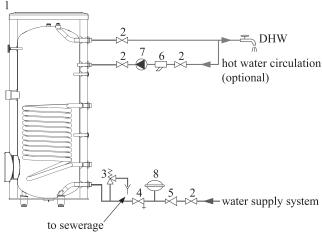

- 1. PT storage tank
- 2. Cut-off valve
- 3. Safety valve
- 4. Drain valve
- 5. Pressure reducer (option, if the pressure in the system exceeds the allowable value)
- 6. Strainer
- 7. Hot water circulating pump
- 8. Hot water expansion vessel

#### Information -

In order to minimize the flow of water from the safety valve associated with the thermal expansion of the liquid, it is advisable to install a suitable expansion vessel at the cold water connection (see item 8.)

#### CAUTION

Installation of the appropriate safety valve in the cold water supply line protecting the unit against overpressure is mandatory!

#### **CAUTION**

Installation of necking of any kind (such as reducers, dirt pockets, etc.) and cut-off valves between the storage tank and the safety valve is not allowed. Only a T-pipe with a drain valve and a T-pipe with an expansion vessel may be installed in these line sections.

#### **CAUTION** -

Never block the safety valve or drain line. This can cause a dangerous overpressure in the storage tank.

#### **CAUTION**

When heating water, slight, temporary discharge from the safety valve can occur. This is a correct safety valve function. Any attempt to interfere in its operation can lead to the danger and destruction of the storage tank.

#### **CAUTION**

*Never use the equipment with clogged safety valves.* 

#### Connection

After the installation and levelling the tank, follow the procedure below (for the connector pipe symbols, refer to page 19):

- 1. Remove protecting plugs from the connector pipes
- 2. Connect the hot water intake line (N).
- 3. Connect the cold water supply line together with the required safety valves (G).
- 4. If the system has the hot water circulation system, connect it to the connector pipe (L). Otherwise, plug the pipe.
- 5. Connect the supply (J) and return (H) of the heating medium to the coil.

#### CAUTION -


If there is an electric heating module installed in the storage tank, fill the tank with water before connecting it to the electrical installation.

#### Pipe installation

#### Hot water circulation circuit


Hot water circulation function is available for HMA60-S and PT300.

#### HMA60-S

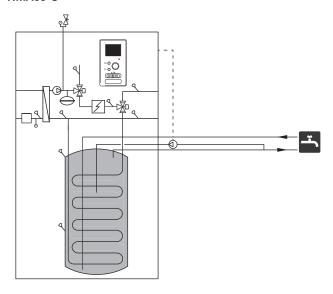


To connect the circulation:


1. Remove the XL5 plug from the top of the housing.

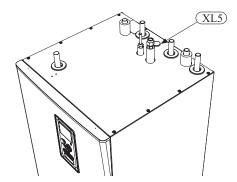


2. Remove the front panel, then move the control box to the right to gain access, to the hydraulic connections.

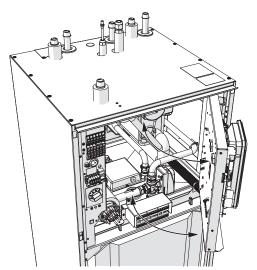

3. Remove the plug from the circulation pipe (XL5).

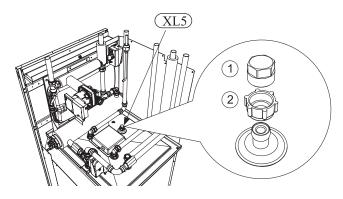

- 4. Install the elbow, facing the rear housing, on the circulation pipe.
- 5. Connect the pipe to the elbow, with the dimensions shown in the figure below, leading pipe in the top of the housing, in place of the XL5 plug.
- 6. At the output of the pipe from the HMA60-S unit, install the circulating pump, and then connect its control to the expansion card.
- 7. Install the control box and the front panel.

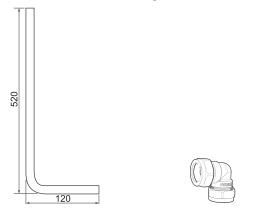


Elbow 15x15 (\*)

(\*) Prepared on site.

Circulation pipe dimensions (\*)

#### Connection of the hot water circulation pump control

The DHW circulation pump should be connected to the AA5 (NOT INCLUDED IN HMA60-S) expansion card on the AA5-X9:8 (230V), AA5-X9:7 (N) and X1: PE

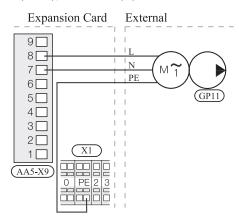

#### <PT300>

If the system has the hot water circulation system, connect it to the port L (see page 20).

Then install the Cut-off valves, circulation pump and strainer.


#### Connection of external heat source

#### **HSB**

External heat source, e.g. a gas or oil boiler or electric heater, can be connected on supply line of heating system (XL1).

#### **HMA**

An external heat source, eg a gas or oil boiler, can be connected to the back of the HMA60-S, removing the access block to the connection sockets (picture below). Scheme on page 17.

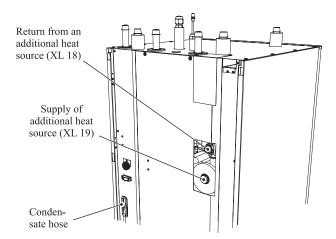

#### Refrigerant circuit

#### **Connecting refrigerant pipes**

See Installation manual for outdoor unit.

#### **Piping insulation**

Install insulation on all piping in order to avoid condensation during cooling operation.

It is also strongly recommended to insulate piping for heating only application in order to avoid getting burned or reducing the heating capacity.

The thickness of the insulation should be 20mm where the relative humidity exceeds 70%.

#### **Drain connection**

HMA60-S is equipped with a condensate hose in the heat exchanger section. The hose drains all condensate away from the device to minimize the risk of damage. If necessary, the hose can be extended.

### **Dockings**

#### General

#### Installation requirements

Hydrolution can be connected in several different ways, some of which are shown on the following pages.

	HSB60	HMA60-S
	FDCW60	)VNX-A
Max pressure, climate system	0.25 MPa	(2.5 Bar)
Highest recommended supply/return temperature	55/45°C	
Max temperature, climate system	65 °C	
Max temperature in indoor unit	65	°C
Max temperature from external heat source	65	°C
Max supply temperature with compressor at outdoor temp -20°C	58	°C
Min supply temp. cooling	7 °C	
Max supply temp. cooling	25 °C	
Min volume, climate system during heating, cooling	50	L
Min volume, climate system during underfloor cooling	80	L
Max flow, climate system	0.29	L/s
Min flow, climate system, at 100% circulation pump speed (defrosting flow)	0.19 L/s	
Min flow, climate heating system	0.12 L/s	
Min flow, cooling system	0.16	L/s
Nominal system flow heating ( $\Delta T=5K$ )	0.29 L/s (6kW, 7/45°C)	
Nominal system flow cooling ( $\Delta T=5K$ )	0.28 L/s (5.8kW, 35/7°C)	

External circulation pump must be used when the pressure drop in the system is greater than the available external pressure. In such cases, a bypass line with non-return valve must be installed.

Use an overflow valve if system flow cannot be guaranteed.

#### Symbol key

Symbol	Meaning
Î	Venting valve
X	Shut-off valve
X	Non-return valve
χı	Control valve
<b>∑</b> -	Safety valve
٩	Temperature sensor
$\ominus$	Expansion vessel
P	Pressure gauge
<b>D</b>	Circulation pump
	Shunt / shuttle valve
0	Fan

#### **Docking alternatives**

Heating system can be constructed in several different ways combining indoor unit, tank, control unit and other accessories.

In the system example shown on the following page, heating, hot water as well as cooling operation are available.

Additional heating is helpful on the cold day of the year as the energy from the air is reduced. It is also recommended as back-up in case the heat pump operation is blocked for any reason (e.g. ambient temperature exceeds the operation limit of heat pump).

#### NOTE -

The heating medium side and the hot water side must be fitted with the necessary safety equipment in accordance with the applicable regulations.

This is the outline diagram. Actual installations must be planned according to applicable standards.

#### **Explanation**

Explanat	ion	
AA25	Controller	
BT1	Outdoor sensor <sup>1)</sup>	
BT6	Temperature sensor, hotwater charging <sup>1)</sup>	
BT7	Temperature sensor, hot water top <sup>1)</sup>	
BT25	Temperature sensor, external supply line <sup>1)</sup>	
BT50	Room sensor	
BT63	Temperature sensor, external supply line after electric heater	
BT71	Temperature sensor, external return line <sup>1)</sup>	
GP10	Circulation pump, Heating medium	
QN10	Reversing valve, Hot water/Heating medium <sup>2</sup>	
EB1	Additional heat	
EB1	Immersion heater	
KA1	Auxiliary relay/Contactor <sup>2)</sup>	
EB101	Heat pump system	
BP4	Pressure sensor, condensor <sup>3)</sup>	
BT3	Temperature sensor, return line <sup>3)</sup>	
BT12	Temperature sensor, condenser supply line <sup>3)</sup>	
BT15	Temperature sensor, fluid pipe <sup>3)</sup>	
EB101	Heat pump	
FL10	Safety valve	
GP12	Charge pump <sup>2)</sup>	
HQ1	Particle filter <sup>3)</sup>	
QM1	Drain valve, Heating medium	
QM31	Shut-off valve, Heating medium, Flow	
QM32	Shut-off valve, Heating medium, Return	
QM43	Shut-off valve	
EQ1	Cooling system	
BT64	Temperature sensor, cooling supply line <sup>2)</sup>	
CP6	Single jacket accumulator tank, cooling	
GP13	Circulation pump, cooling	
QN12	Reversing valve, Cooling/Heating <sup>2)</sup>	
Miscellar	neous	
CM1	Expansion vessel closed, Heating medium	
CP5	Buffer vessel	
CP10	Accumulator tank with hotwater heating	
EB20	Immersion heater	
FL2	Safety valve, Heating medium	
KA1	Auxiliary relay/Contactor	


1) Included in and supplied with controller

Trim valve

- 2) Included in and supplied with accessory
- 3) Included in indoor unit

RN10

Installation with indoor unit HSB60, tank PT300, controller RC-HY20/40 with step controlled additional heat before reversing valve for hot water and cooling function (4 pipe system)

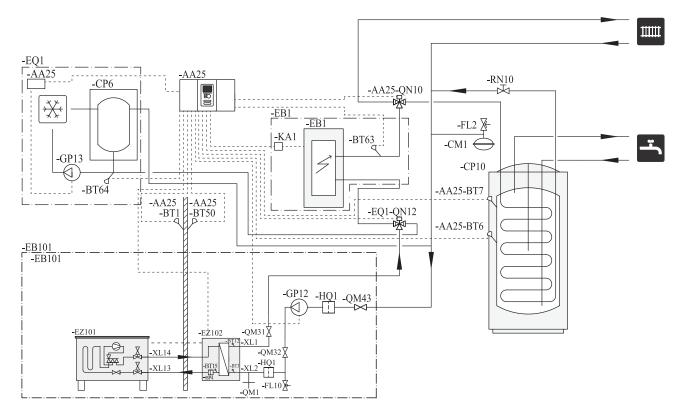

#### NOTE

Not all components are shown in this outline diagram.


Controller (AA25) starts and stops the heat pump (EB101) to meet the heating and hot water demand.


At simultaneous heating and hot water demand, the reversing valve (AA25-QN10) switches periodically between the climate system and the water heater/accumulator tank (CP10). When the hot water heater/accumulator tank is fully charged, the reversing valve switches to the climate system.

Additional heat (EB1) is turned on automatically when the heating demand exceeds the heat pump capacity. This is used for both heating and charging hot water.

The additional heat can also be used for water heater when a higher temperature is required than the heat pump can produce.

During cooling operation, the reversing valve (EQ1-QN12) switches to the cooling system (EQ1). If several simultaneous demands occur while there is a cooling demand, the system reacts differently. In the event of a hot water demand, the reversing valve switches back and hot water is produced until the demand is fulfilled. In the event of a heating demand, the reversing valve switches periodically between cooling and heating. If the cooling demand is met, the reversing valve switches back to basic mode (heating/hot water).

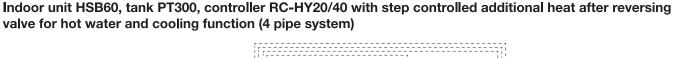

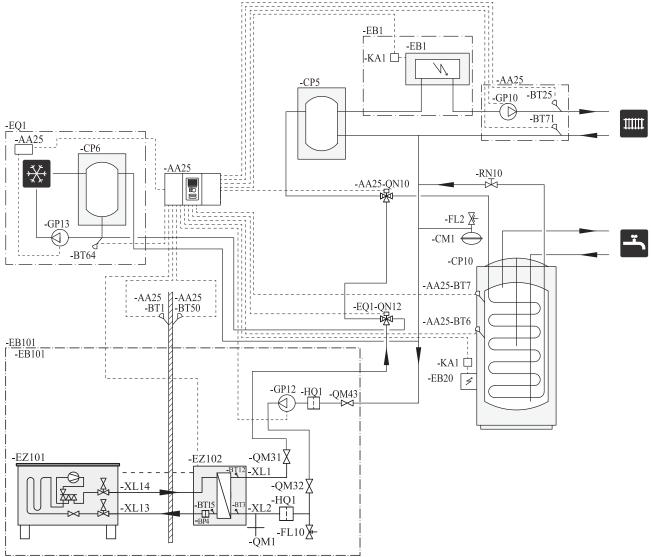

#### NOTE

Not all components are shown in this outline diagram.

This installations alternative is suitable for more complex installations with a focus on comfort.

Controller (AA25) starts and stops the heat pump (EB101) to meet the heating and hot water demand of the installation.

At simultaneous heating and hot water demand the reversing valve (AA25-QN10) switches periodically between the climate system and the water heater/accumulator tank (CP10). When the hot water heater/accumulator tank is fully charged, the reversing valve switches to the climate system.

Additional heat (EB1) is turned on, automatically when the heating demand exceeds the heat pump capacity.

Immersion heater (EB20) in the water heater/accumulator tank is used during the time to produce hot water if the heat pump is used for heating at the same time.


The immersion heater (EB20) can also be used if a higher temperature of hot water is required than the heat pump can produce.

During cooling operation, the reversing valve (EQ1-QN12) switches to the cooling system (EQ1). If several simultaneous demands occur while there is a cooling demand, the system reacts differently. In the event of a hot water demand, the reversing valve switches back and hot water is produced until the demand is fulfilled. In the event of a heating demand, the reversing valve switches periodically between cooling and heating. If the cooling demand is met, the reversing valve switches back to basic mode (heating/hot water).

#### Installation with indoor unit HMA60-S


#### Connection to the heat pump

HMA60-S is not equipped with cut-off valves, which must be installed outside the indoor module to make future maintenance easier.

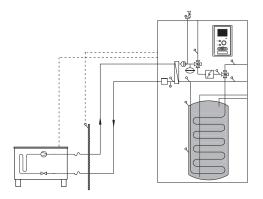


#### Connection when operating without a heat pump

No change is required to the hydraulic connections configuration for the internal unit to operate individually, without an external unit.

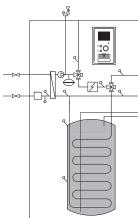


#### Connection of hot and cold water

The installation of the mixing valve is necessary if factory settings are changed in a way where the temperature can exceed 60 °C. When changing the factory settings, follow the national regulations in this respect. The setting is entered in menu 5.1.1.

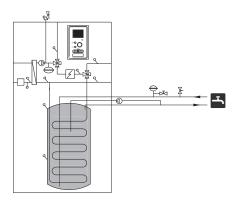


#### **Heating system connection**

When connecting to the installation where all heaters/ floor heating pipes have been equipped with thermostat valves, in order to assure appropriate flow, install a discharge valve or a buffer in the parallel layout, or remove several thermostats.

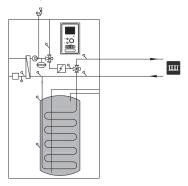


#### **Cooling system connection**

Cooling is controlled by sensor BT64 and isolation valve QN12. If cooling is needed, the isolation valve changes the direction, and opens from the cooling circuit side.

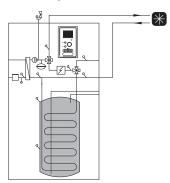

#### Connecting an additional heating circuit

The system can be extended with additional heating circuits only when provided an additional expansion card After using an AXC30 card or a ECS 41 kit, an additional heating circuit can be activated in the controller.

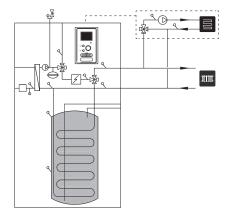

Additional accessories and options and how to connect them are described in the AXC30M or ECS40/41M manual.

#### **Electrical installation**

#### General

Indoor unit must be installed via an isolator switch in accordance with the local codes and regulations.

For HMA60-S, electrical equipments, except outdoor air sensor, room sensor, current transformers and outdoor unit has been connected at the factory.

- Disconnect the indoor unit, outdoor unit and control unit before insulation testing of the house wiring.
- If the building is equipped with an earth-fault breaker, Hydrolution should be equipped with a separate one.
- For the electrical wiring diagram, see page 88.
- Do not lay communication, sensor or signal cables for external connection close to high voltage lines.
- Minimum cross section of communication, sensor or signal cables for external connection must be 0.5mm² up to 50 m, for example EKKX, LiYY or equivalent.
- Use screened three core cable for communication between controller (RC-HY20/40) and indoor unit (HSB60).
- When laying cables into indoor units and controllers, be sure to route the cable grommet (UB1 AND UB2).
- Be careful to route cables not to be damaged by metal edge or trapped by panels.
- Outdoor unit is equipped with a single phase compressor.
   This means that phase L3 is loaded with up to 15 A during compressor operation.

#### NOTE -

Electrical installation and service must be carried out under the supervision of a qualified electrician.

Turn off the circuit breaker before carrying out any servicing.

Electrical installation and wiring must be carried out in accordance with the stipulations in force.

Make sure to turn off the power supply during installation.

#### NOTE -


Do not turn on the power on control until the boiler is filled with water.

The circulation pump and immersion heater may become damaged.

#### NOTE:

If the power supply cable is damaged, only authorised person may replace it to avoid danger or damage.

## Principle diagram, electrical installation HSB60

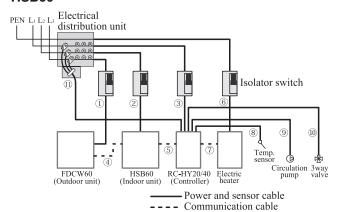


~		8.11
Item		Cable size
1	Power - Outdoor unit	3core, 2.0mm <sup>2</sup> (power cable)
2	Power - Indoor unit	3core, 1.5mm <sup>2</sup> (power cable)
3	Power - Controller	3core, 1.5mm <sup>2</sup> (power cable)
4	Outdoor unit - Indoor unit	2core, 1.5mm <sup>2</sup> (communication cable)
(5)	Indoor unit - Controller	3core, 0.5mm <sup>2</sup> , LiYY,EKKX or equivalent (communication cable)
6	Power - Electrical heater	5core, φ2.0mm (power cable)
7	Controller - Electrical heater	4core, 0.5mm <sup>2</sup> (communication cable)
8	Contoroller - Temp sensors	2core, 0.5mm <sup>2</sup> (each sensor)
9	Contoroller - Circulation pump	3core, 0.75mm <sup>2</sup> (power cable) 2core, 0.5mm <sup>2</sup> (communication cable)
10	Controller - 3way valve for switching heating/hot water	3core, 0.75mm <sup>2</sup>
(1)	Current sensor (RC-HY40only)	6core, 0.5mm <sup>2</sup>

The cable size shown on the above table is minimum size. Choose appropriate size according to local laws and regulations.

#### **Electrical installation**


#### HMA60-S

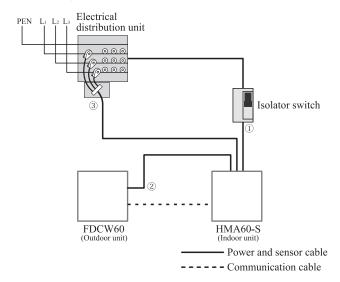

Item	Cable size	
1	Power - Indoor unit	6core, 10mm <sup>2</sup>
1 (2)	Indoor unit - Outdoor unit	5core, 2.5mm <sup>2</sup> (power/communication cable)
3	Current sensor	6core, 0.5mm <sup>2</sup>

The cable size shown on the above table is reference value. Choose appropriate size according to local laws and regulations.


# Electrical components HSB60

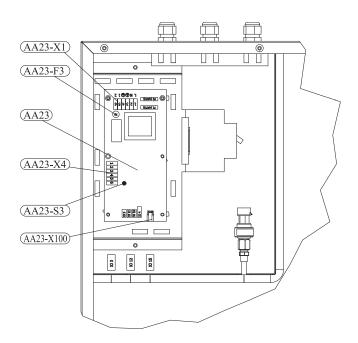

#### Explanation

AA23	Communication board
AA23-F3	Fuse for external heating cable
AA23-S3	DIP switch, addressing of outdoor unit
AA23-X1	Terminal block, incoming supply, connection
	of KVR
AA23-X4	Terminal block, communication with indoor
	module / control module
AA23-X100	Terminal block, communication outdoor
	module FDCW

#### HMA60-S

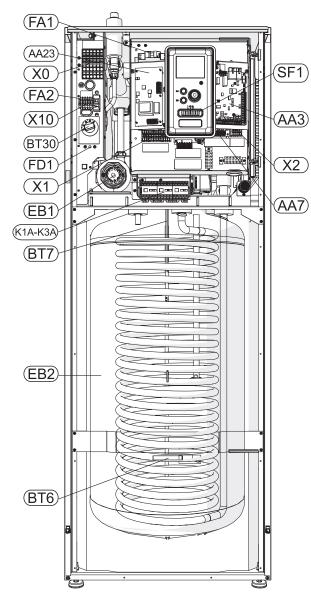

#### **Temperature limiter**


Temperature limiter (FD1) cuts off the power supply of the electrical heating module if the temperature increases to the range of approximately 98 °C or decreases below -8 °C, and can be reset manually.

#### **Important**

In the case of the thermal fuse, please report it to an authorized service facility to eliminate the possible cause.

#### Resetting

Temperature limiter (FD1) is accessible behind the front cover. Temperature limiter is reset by strong pressing of the button (FD1-SF2) using a small screwdriver. Press the button, max. 15 N (approx. 1.5 kg).

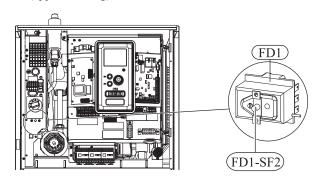

#### **Explanation**

X0 Voltage terminal block 400V/230V~
 X1 Voltage terminal block 230V~
 X2 Voltage terminal block 230V~
 X10 Voltage terminal block 230V~
 FA1 Circuit breaker (to internal module)

K1A-K3A Submersible heater contact BT30 Thermostat, standby mode

AA3 Sensor card


AA23 Communication card


AA7 Relay card

FA2 Circuit breaker (to internal module)

FD1 Temperature limiter

#### RC-HY20

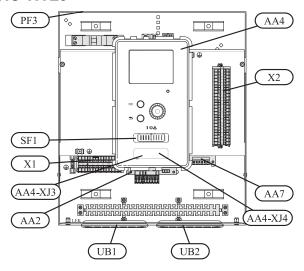


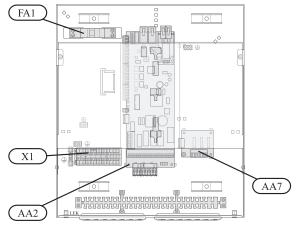


#### **Explanation**

AA2	Base card		
AA4	Display unit		
	AA4-XJ3 USB socket		
AA4-XJ4	Service outlet (No function)		
AA7	Extra relay circuit board		
FA1	Miniature circuit-breaker		
X1	Terminal block, incoming electrical supply		
X2	Terminal block, control signal circulation pump		
	sensors AUX inputs and heat pump		
SF1	Switch		
PF3	Serial number plate		
UB1	Cable grommet, incoming supply electricity,		
	power for accessories		
UB2	Cable grommet, signal		

#### RC-HY40

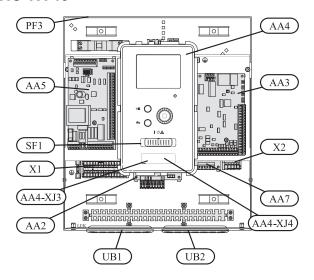

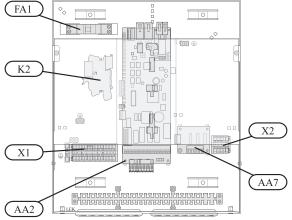


#### **Explanation**

AA2	Base card
AA3	Input circuit board
AA4	Display unit
AA4-XJ3	USB socket
AA4-XJ4	Service outlet (No function)
AA5	Accessory card
AA7	Extra relay circuit board
FA1	Miniature circuit-breaker
K2	Emergency mode relay
X1	Terminal block, incoming electrical supply
X2	Terminal block, AUX4 - AUX6
SF1	Switch
PF3	Serial number plate
UB1	Cable grommet, incoming supply electricity,
	power for accessories
UB2	Cable grommet, signal


# Accessibility, electrical connection for controller

The cover of the control module is opened using a Torx 25 screwdriver. Assembly takes place in the reverse order.

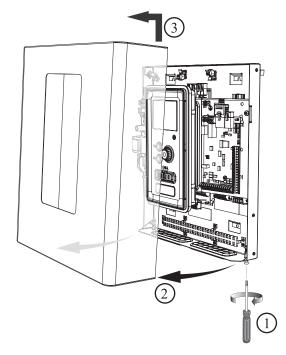


## NOTE


The cover to access the base board is opened using a Torx 25 screwdriver

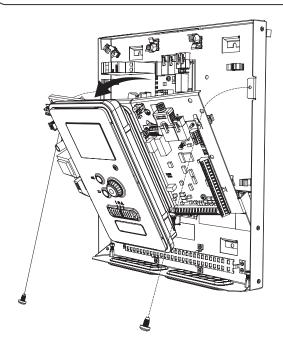


The display may need to be moved for easier access when connecting electrics. This is easily done by following these steps.

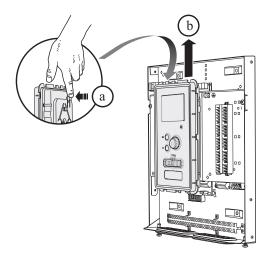

1. Press in the catch on the upper rear side of the display unit towards you (a) and move the display unit upwards (b) so that the mountings unhook from the panel.

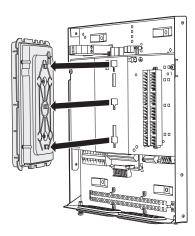


2. Lift the display unit from its mountings.

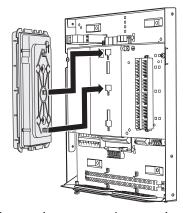

3. Align the two lower mountings on the reverse of the display unit with the two upper holes in the panel as illustrated.

## **Electrical installation**

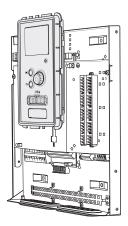


- 4. Secure the display on the panel.
- 5. When the electrical connection is ready the display must be reinstalled with three mounting points again, otherwise the front cover cannot be installed.

## Cable lock


Use a suitable tool to release/lock cables in the terminal block.

## HSB60, RC-HY20/40


Terminal block on the electrical card

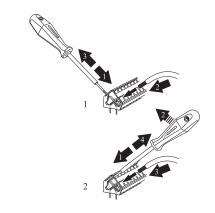

Terminal block

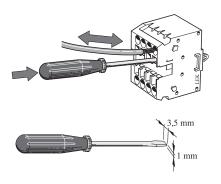

## HMA60-S

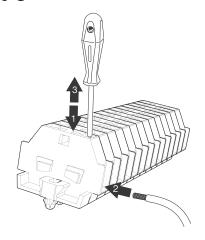

## **System connection**

## NOTE-

To prevent interference, unscreened communication and/ or sensor cables to external connections must not be laid closer than 20 cm from high voltage cables.

#### HSB<sub>60</sub>

#### Recommended fuse size

The recommended fuse size shown in the following table is reference value. Choose appropriate size according to local laws and regulations.

	Fuse size
Indoor unit (HSB60)	6A / 230V 1AC 50Hz
Outdoor unit (FDCW60VNX-A)	20A / 230V 1AC 50Hz
Controller (RC-HY20/40)	10A/ 230V 1AC 50Hz
Electric heater (ELK9M) (reference)	16 A/400V 3NAC 50Hz

#### Recommended cable size


The recommended cable size shown in the following table is reference value. Choose appropriate size according to local laws and regulations.

	Cable size
Power – Indoor unit	3core, 1.5mm <sup>2</sup> (power cable)
Power – Outdoor unit	3core, 2.0mm <sup>2</sup> (power cable)
Undoor unit ( hitdoor unit	2core, 1.5mm <sup>2</sup>
	(communication cable)
Indoor unit – Controller	3core, 0.5mm <sup>2</sup> , LiYY, EKKX or equivalent (communication cable)

#### **Power supply**

In case of HSB60, power supply is made to indoor unit, outdoor unit and controller separately. 230V 1AC 50Hz is applied.


For indoor unit, incoming supply is connected on AA23-X1 terminal.

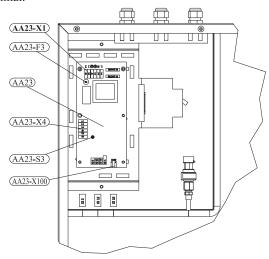

For outdoor unit, incoming supply is connected on TB terminal. See figure on Connection between indoor and outdoor unit

#### Connection between indoor and outdoor unit

The communication cable between indoor and outdoor unit is connected between terminal AA23-X100 in indoor unit and TB in outdoor unit. Screened 2 core cable is recommended.

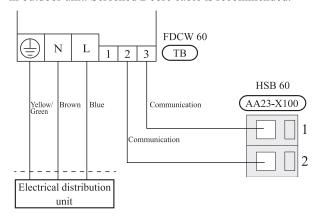

#### Connection between indoor unit and controller

See Connection for RC-HY20/40

#### **Cascade connection setting**

In case of cascade connection system, it is necessary to allot unique address to each indoor unit. Set the dip switch S3-1, -2 and -3 according to the following table.

Address	S3:1	S3:2	S3:3
1	OFF	OFF	OFF
2	On	OFF	OFF
3	OFF	On	OFF
4	On	On	OFF
5	OFF	OFF	On
6	On	OFF	On
7	OFF	On	On
8	On	On	On

#### RC-HY20

#### Recommended fuse size

Please refer to P.37


#### Recommended cable size

Please refer to P.37

#### **Power supply**

Connect power cable on X1 terminal as shown below.

RC-HY 20/40 must be installed via an isolator switch with a minimum breaking gap of 3 mm. Minimum cable area must be sized according to the fuse rating used.

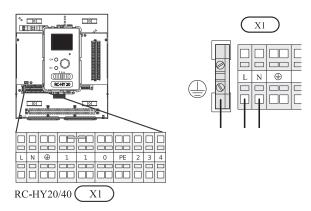


#### Connection between indoor unit and controller

Signal cable is connected between controller and indoor unit with screened 3 core cable for HSB60. Choose correct terminal according to the type of controller as shown below.

#### <HSB60 with RC-HY20>

Connect the port 19(A), 20(B) and 21(GND) on X2 terminal on RC-HY20 to the port 1, 2 and 3 on X4 terminal on AA23 board on HSB60 respectively.

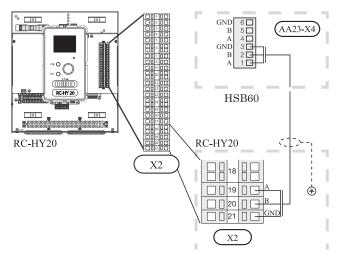


## Circulation pump (GP12)

For HSB60, circulation pump (GP12) is installed outside of indoor unit. Choose correct terminal according to the type of controller.

#### <HSB60 with RC-HY20>

Connect the port 5, 6 and 7 on X4 terminal on AA2 board on RC-HY20/40 to the port PE, N and L on circulation pump respectively. Control signal cable is connected between the port 1 and 2 on X2 terminal on RC-HY20 and PWM and GND on circulation pump respectively as shown below.

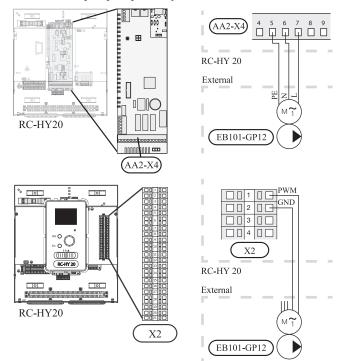

#### 3-way valve (QN10/QN12)


3-way valve is used for switching heating / hot water production (QN10), or switching heating / cooling (QN12). Install appropriate valves according to the system structure on site.

HSB60 is not equipped with 3-way valve. Install the valves on right position according to the diagram and connect wires on appropriate port according to the type of controller.

#### <HSB60 with RC-HY20>

#### • 3-way valve for Heating / Hot water (QN10)


Connect the N, Control and L wire on 3-way valve to the port 2, 3 and 4 on X4 terminal on AA2 board on RC-HY20/40 respectively as shown below.

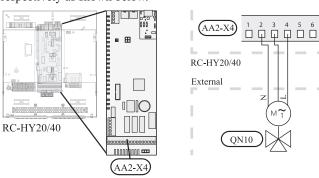

#### • 3-way valve for Heating / Cooling (QN12)

QN12 can be controlled with potential free variable relay. Connect L and Control wire on 3-way valve to the port 15 and 16 on X4 terminal on AA2 board on RC-HY20 respectively. Also, connect L and N wire to power supply as shown below.

Additional setting is necessary in menu 5.4. See Menu system for details.

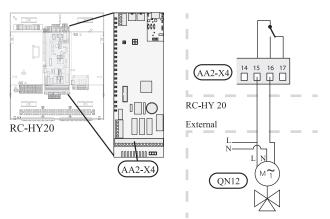

## CAUTION

The relay outputs can have a max load of 2 A at resistive load (230V AC).

#### Sensor

Sensor connection is different according to the combination of indoor unit and controller. Refer to the appropriate combination mentioned below.

Use two-core cable with a minimum 0.5mm<sup>2</sup> cross section.

Regarding other sensors not mentioned in this chapter, refer to page 42, 43, Optional connections.


#### <RC-HY20 with HSB60>

#### • Ambient air temperature sensor BT1

Install ambient air temperature sensor (BT1) in the shade on a wall facing north or north-west, so it is unaffected by the morning sun.

Connect the sensor to the port 3 and 6 on X2 terminal.

If a conduit is used it must be sealed to prevent condensation in the sensor capsule.

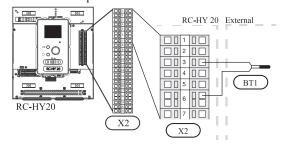


#### • Hot water charging sensor BT6 (tank bottom)

The temperature sensor, hot water charging (BT6) is placed in the submerged tube on the water heater.

Connect the sensor to the port 5 and 6 on X2 terminal.


Hot water charging is activated in menu 5.2 or in the start guide.

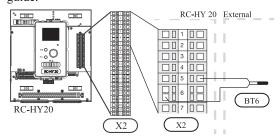

#### Hot water sensor BT7 (tank top)

A temperature sensor for hot water top (BT7) can be connected to RC-HY20 to show the water temperature at the top of the tank (if it is possible to install a sensor at the top of the tank).


Connect the sensor to the port 4 and 6 on X2 terminal.

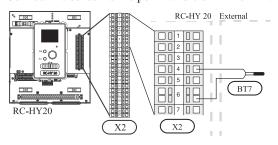

#### . Temperature sensor BT63, outlet at additional heater

This sensor is used in case electric heater is placed before 3-way valve (QN10) for switching heating/hot water (see page 28 for diagram).


Connect temperature sensor, external supply after electric heater (BT63) to the port 9 and 10 on terminal X2.

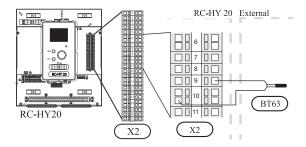

#### . Temperature sensor BT25, outlet for heating

This sensor is used in case electric heater is placed after 3 way valve (QN10) for switching heating/ hot water (see page 29 for diagram).

Connect temperature sensor, external supply (BT25) to the port 8 and 10 on X2 terminal.

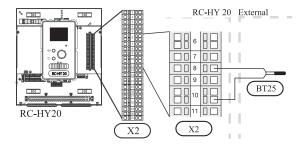

#### • Temperature sensor BT71, return line for heating

This sensor is used in case electric heater is placed after 3 way valve (QN10) for switching heating/ hot water (see page 29 for diagram).

For connection, see page 42, AUX inputs.

#### • Temperature sensor BT64, outlet for cooling

This sensor is used in case cooling application is required. For connection, see page 42, AUX inputs.

#### **Optional connections**

#### Room sensor BT50

Room sensor can be connected to controller.

The room temperature sensor has up to three functions:

- 1. Show current room temperature in the control module display.
- 2. Option of changing the room temperature in °C.
- 3. Makes it possible to change/stabilise the room temperature.

Install the sensor in a neutral position where the set temperature is required. A suitable location is on a free inner wall in a hall approx. 1.5 m above the floor.

Do not install the sensor where correct room temperature cannot be detected such as in a recess, between shelves, behind a curtain, above or close to a heat source, in a draft from an external door or in direct sunlight.


Closed radiator thermostats can also cause problems.

The control module can operate without the sensor, but if user wants to read off the accommodation's indoor temperature in controller display, the sensor must be installed.

Connect the room sensor to the port 7 and 10 on X2 terminal.

If the sensor is to be used to change the room temperature in °C and/or to change/stabilise the room temperature, the sensor must be activated in menu 1.9.4.

If the room sensor is used in a room with underfloor heating, it should only have an indicatory function, not control of the room temperature.

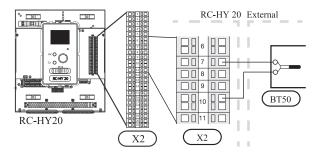

## CAUTION

Changes of temperature in accommodation take time. For example, short time periods in combination with underfloor heating will not give a noticeable difference in room temperature.

Use two-core cable with a minimum 0.5mm<sup>2</sup> cross section.

#### · Step controlled additional heat

## NOTE:

Mark up any junction boxes with warnings for external voltage.

External step controlled additional heat can be controlled by up to three potential-free relays in the control module (3 step linear or 7 step binary). Alternatively two relays (2 step linear or 3 step binary) can be used for step controlled additional heat, which means that the third relay can be used to control the immersion heater in the water heater/accumulator tank.

Step in occurs with at least 1 minute intervals and step outs with at least 3 seconds intervals.


Step 1 is connected to terminal block X2:2 on the additional relay board (AA7).

Step 2 is connected to terminal block X2:4 on the additional relay board (AA7).

Step 3 or immersion heater in the water heater/accumulator tank is connected to terminal block X2:6 on the additional relay board (AA7).

The settings for step controlled additional heat are made in menu 4.9.3 and menu 5.1.12.

All additional heat can be blocked by connecting a potential-free switch function to the software controlled input on terminal block X2 which is selected in menu 5.4.

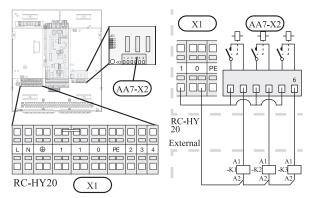

If the relays are to be used for control voltage, bridge the supply from terminal block X1:1 toX2:1, X2:3 and X2:5 on additional relay board (AA7). Connect the neutral from the external additional heat to terminal block X1:0.

Use a cable with appropriate cross section.

For connection, see the installation manual for additional heater.

#### · Relay output for emergency mode

## NOTE


Mark up any junction boxes with warnings for external voltage.

When the switch (SF1) is in "\( \Lambda \)" mode (emergency mode) the circulation pump is activated (EB101-GP12).


## CAUTION

No hot water is produced when emergency mode is activated.

The emergency mode relay can be used to activate external additional heat. Between the port 2 and 4 is closed during emergency mode. An external thermostat must be connected to the control circuit (port 4) to control the temperature. Ensure that the heating medium circulates through the external additional heating.

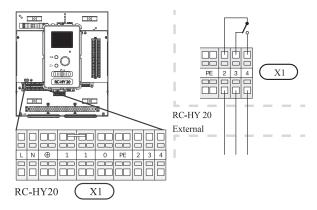


If the relay is to be used for control voltage, bridge the supply from terminal block X1:1 to X1:2 and connect neutral and control voltage from the external additional heat to X1:0 (N) and X1:4 (L).

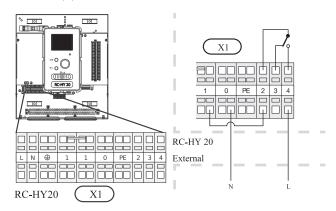

#### External circulation pump


Connect the external circulation pump (GP10) to terminal block X4:9 (PE), X4:10 (N) and X4:11 (230 V) on the base board (AA2) as illustrated.

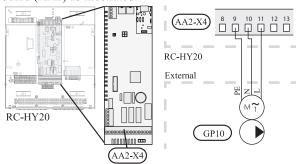


#### AUX inputs

Other external inputs are available on the port 11 through 18 on X2 terminal on RC-HY20.

AUX1, 2, 3, 4, 5, and 6 correspond to the port 11, 12, 13, 15, 16 and 17 respectively. Port 14 and 18 are GND and are common to the all auxiliary circuit. Connect a sensor or switch between AUX and GND with a two-core cable with a minimum cross section of 0.5mm<sup>2</sup>.

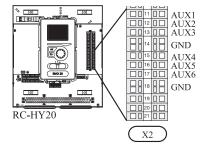

Select the appropriate function in menu 5.4.

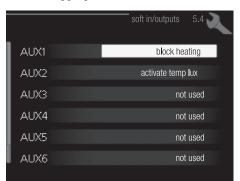

■ Temperature sensor, cooling/heating (BT74)

Additional room sensor (BT74) is applied in case user wants to determine the operation mode (cooling/heating) with a temperature in a particular room.

This option can be chosen only in case cooling function is available.

- Temperature sensor, external return line (BT71)

  Temperature sensor BT71 is applied in case additional heater is placed after 3-way valve (see page 29 for diagram).
- Temperature sensor, flow line cooling (BT64)

Temperature sensor BT64 is required in case 4-pipe system is used for cooling operation. (see page 28, 29 for diagram)

This option can be chosen only in case cooling function is activated.

■ Contact for external tariff blocking

In cases where external tariff blocking is required it must be connected to terminal block X2.

Tariff blocking means that the additional heat, the compressor, heating and cooling are disconnected by connecting a potential free switch function to the input selected in menu 5.4.

A closed contact results in the electrical output being disconnected.

■ Switch for "SG ready"

## NOTE

This function can only be used in mains networks that support the "SG Ready"-standard.
"SG Ready" requires two AUX inputs.

This function can only be used in power supply networks that support the "SG Ready" standard. "SG Ready" requires two AUX inputs.

"SG Ready" is a smart tariff management scheme in which electricity supplier can affect indoor and hot water temperature or simply prohibits additional heat and/or the compressor operation in heat pump at certain period of the day. You can choose which operation mode is affected by this function in menu 4.1.5 after the function is activated.

Choose two external input circuits and connect potential-free switches, and set "SG Ready A" and "SG Ready B" in menu 5.4. The system works differently according to the combination of the circuit open/closed.

- Blocking (A: Closed, B: Open)
- "SG Ready" is active. Compressor operation and additional heat is prohibited.
- Normal mode (A: Open, B: Open)
- "SG Ready" is not active. No effect on the system.
- Low price mode (A: Open, B: Closed)
- "SG Ready" is active. The system operates to provide higher capacity than normal mode by using lower tariff electricity. You can select the operation mode (heating/hot water/cooling) affected by this function in menu 4.1.5.
- Overcapacity mode (A: Closed, B: Closed)
- "SG Ready" is active. The system supplies higher capacity than Low price mode since the electricity price is supposed to be very low in this mode. You can select the operation mode (heating/hot water/cooling) affected by this function in menu 4.1.5.

#### ■Contact for activation of "temporary lux"

Temporary hot water production function "temporary lux" is activated with this signal. Connect the terminals with a potential-free switch and choose the function in menu 5.4.

"Temporary lux" is activated only when the switch is closed.

#### ■Contact for activation of "external adjustment"

Target temperature offset for supply temperature or room temperature can be done with this signal.

When a room sensor is connected and activated, the target room temperature is offset in °C if the switch is closed. When a room sensor is not connected, target supply water temperature (heat curve) is offset instead. The degree of offset can be set in menu 5.4.

#### ■Switch for external alarm

Alarms from external devices can be connected to the control and appear as an info alarm. Potential-free signal of NO or NC type can be connected.


#### ■Switch for external blocking

This function is used in case certain operation mode needs to be prohibited. The operation at selected operation mode is prohibited when the switch is closed. Following functions can be managed.

- · Additional heat
- · compressor operation
- · heating mode
- · cooling mode
- · hot water mode

#### AUX outputs

External output is available on the port 15 to 17 on X4 terminal on AA2 board on RC-HY20. The relay output can have a max load of 2A at resistive load.

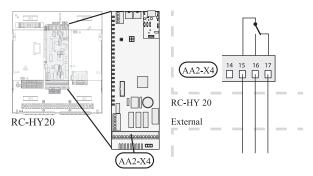

Following functions are available. Select the function in menu 5.4.

#### • Indication of buzzer alarm

When an alarm occurs, the circuit becomes closed between the port 15 and 16. During normal operation, the port 15 and 17 is closed.


Cooling mode indication / Active cooling mode (4-pipe cooling)

When the system turns into cooling mode, the circuit becomes closed between the port 15 and 16. By using this signal, it is possible to switch 3-way valve for 4-pipe cooling or to assemble a display circuit indicating cooling mode. For details of connecting the 3-way valve, refer to page 39.

#### • External pump control (GP10)

External pump (GP10) is used in case additional heater is placed after 3-way valve that switches heating/hot water (refer to page 29 for diagram).

Connect the circulation pump as shown below using the port 15 and 16 on X4 terminal.

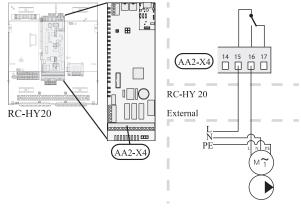

#### • Hot water circulation pump control (GP11)

In case the distance between hot water tap and hot water storage tank is far, the hot water supply line temperature is likely to drop and it may take time to supply hot water from the tap. In that case, hot water circulation pump (GP11) is applied to maintain hot water supply line temperature warm (refer to page 24 for diagram).


For details of connecting the pump, refer to External pump control (GP10).

#### NOTE

Mark up any junction boxes with warnings for external voltage.

#### myUpway<sup>TM</sup>

Connect the network connected cable (straight, Cat.5e UTP) with RJ45-contact (male) to contact AA4-X9 on the display unit (as illustrated). Use the cable grommet (UB2) in the control module for cable routing.

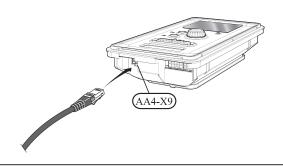

#### RC-HY40

#### Recommended fuse size

Please refer to P.37

#### Recommended cable size

Please refer to P.37

#### **Power supply**


Please refer to P.37

#### Connection between indoor unit and controller

#### <HSB60 with RC-HY40>

Connect the port 1(A), 2(B) and 3(GND) on X4 terminal on AA5 board on RC-HY40 to the port 1, 2 and 3 on X4 terminal on AA23 board on HSB60 respectively.

In case several systems are connected to one controller, connect the port 4, 5 and 6 on X4 terminal on AA23 board on HSB60 close to the controller to the port 1, 2 and 3 on X4 terminal on AA23 board on another HSB60.

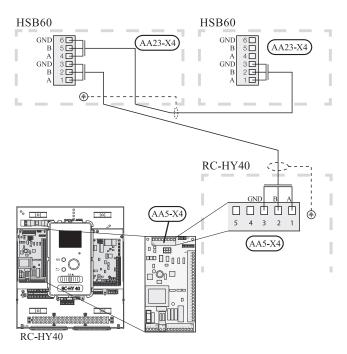


#### Circulation pump (GP12)


For HSB60, circulation pump (GP12) is installed outside of indoor unit. Choose correct terminal according to the type of controller.

#### <HSB60 with RC-HY40>

Connect the port 5, 6 and 7 on X4 terminal on AA2 board on RC-HY40 to the port PE, N and L on circulation pump (EB101-GP12) respectively. Control signal cable is connected between the port 7 and 8 on X4 terminal on AA3 board on RC-HY40 and GND and PWM on circulation pump respectively as shown below.

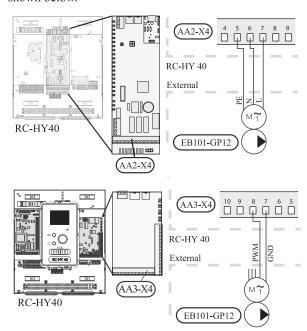

RC-HY40 can connect and control up to two pumps. Connect the port 12, 13 and 15 on X4 terminal on AA2 board on RC-HY40 to the port PE, N and L on second circulation pump (EB102-GP12) respectively. Control cable is connected between the port 5 and 6 on X4 terminal on AA3 board on RC-HY40 and GND and PWM on circulation pump respectively as shown below.

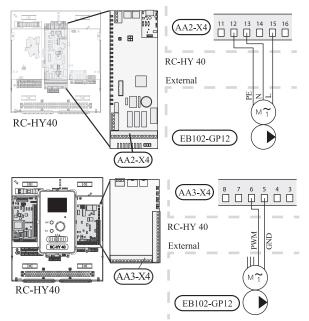

#### 3-way valve (QN10/QN12)

3-way valve is used for switching heating / hot water production (QN10), or switching heating / cooling (QN12). Install appropriate valves according to the system structure on site.

HSB60 is not equipped with 3-way valve. Install the valves on right position according to the diagram and connect wires on appropriate port according to the type of controller.


#### <HSB60 with RC-HY40>

#### • 3way valve for Heating / Hot water (QN10)

Refer to 3-way valve connection for HSB60 with RC-HY20.

#### • 3 way valve for Heating / Cooling (QN12)

QN12 can be controlled with potential free variable relay. Connect L and Control wire on 3-way valve to the port C and NO on X7 terminal on AA3 board on RC-HY40 respectively. Also, connect L and N wire to power supply as shown below.

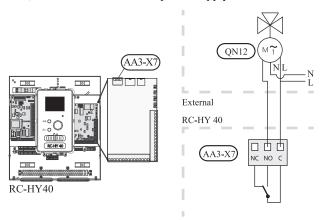

## **CAUTION**

The relay outputs may be subjected to a max load of 2A at resistive load (230V AC).

#### Sensor

Sensor connection is different according to the combination of indoor unit and controller. Refer to the appropriate combination mentioned below.

Use two-core cable with a minimum 0.5mm<sup>2</sup> cross section.

Regarding other sensors not mentioned in this chapter, refer to page 47, Optional connections.


#### <RC-HY40 with HSB60>

#### • Ambient air temperature sensor BT1

Install ambient air temperature sensor (BT1) in the shade on a wall facing north or north-west, so it is unaffected by the morning sun for example.

Connect the sensor to the port 1 and 2 on X6 terminal on AA3 board.

If a conduit is used it must be sealed to prevent condensation in the sensor capsule.

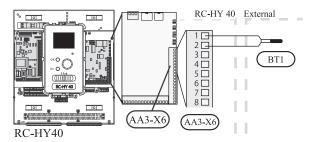


#### Hot water charging sensor BT6 (tank bottom)

The temperature sensor, hot water charging (BT6) is placed in the submerged tube on the water heater.

Connect the sensor to the port 7 and 8 on X6 terminal on AA3 board.


Hot water charging is activated in menu 5.2 or in the start guide.

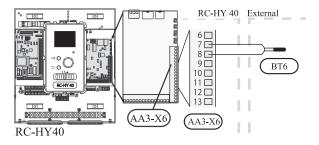

#### · Hot water sensor BT7 (tank top)

A temperature sensor for hot water top (BT7) can be connected to RC-HY40 to show the water temperature at the top of the tank (if it is possible to install a sensor at the top of the tank).

Connect the sensor to the port 15 and 16 on X6 terminal on AA3 board.

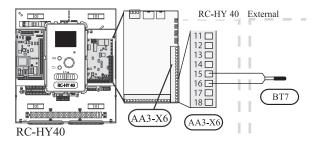

#### . Temperature sensor BT63, outlet at additional heater


This sensor is used in case electric heater is placed before 3 way valve (QN10) for switching heating/ hotwater (see page 28 for diagram).

For connection, see page54, AUX inputs.

#### • Temperature sensor BT25, outlet for heating

This sensor is used in case electric heater is placed after 3 way valve (QN10) for switching heating/ hot water (see page 29 for diagram).


Connect temperature sensor, external supply line (BT25) to the port 5 and 6 on X6 terminal on AA3 board.

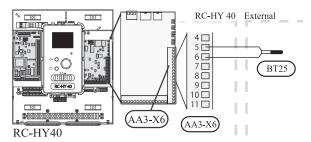

#### • Temperature sensor BT71, return line for heating

This sensor is used in case electric heater is placed after 3 way valve (QN10) for switching heating/ hot water (see page 29 for diagram).

Connect temperature sensor, external return line (BT71) to the port 17 and 18 on X6 terminal on AA3 board.

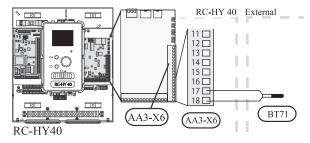

#### • Temperature sensor BT64, outlet for cooling

This sensor is used in case cooling application is required. For connection, see page 42, AUX inputs.

#### **Optional connection**

#### Load monitor

In case many power electrical appliances are connected in the property and the electric heater is energised at the same time, there is a risk of tripping the main fuse of the property.

The control module has an integrated load monitor that controls the power steps of the electric heater by disconnecting step by step in the event of overload in a phase. It will be reconnected if other current consumption is reduced.

#### **Connecting current sensors**


A current sensor (BE1 - BE3) should be installed on each incoming phase conductor in to the electrical distribution unit to measure the current. This is best done in the electrical distribution unit.


Connect the current sensors to a multi-core cable in an enclosure next to the electrical distribution unit. Use a multi-core cable of at least 0.5 mm<sup>2</sup> from the enclosure to the heat pump.

Connect the cable to terminal block X4:1 to 4.

X4:1 is the common terminal block for the three current sensors.

Set the size of the property's main fuse in menu 5.1.12.

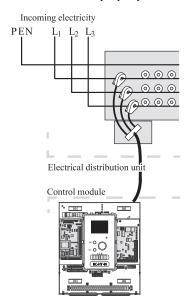

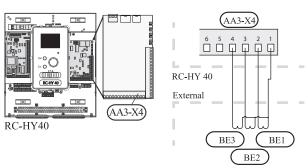


#### Room sensor BT50

Refer to Room sensor BT50 for RC-HY20 for function and installation place.

Connect the room sensor to terminal block X6:3 and X6:4 on the input board (AA3).

If the sensor is to be used to change the room temperature in °C and/or to change/stabilise the room temperature, the sensor must be activated in menu 1.9.4.

If the room sensor is used in a room with underfloor heating, it should only have an indicatory function, not control of the room temperature.

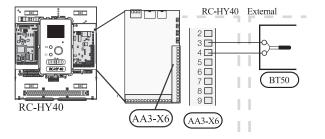

## **CAUTION**

Changes of temperature in accommodation take time. For example, short time periods in combination with underfloor heating will not give a noticeable difference in room temperature.

- Step controlled additional heat
  - Refer to the explanation for RC-HY20.
- Relay output for emergency mode Refer to the explanation for RC-HY20.
- Emergency mode thermostat


  Refer to the explanation for RC-HY20.
- External circulation pump

  Refer to the explanation for RC-HY20.


#### AUX inputs

Up to 6 other external inputs are available on RC-HY40.

AUX1 through 3 correspond to the port 9/10, 11/12, 13/14 respectively on X6 terminal on AA3 board. AUX4 through 6 correspond to the port 1, 2 and 3 on X2 terminal on RC-HY40. Port 4 on X2 terminal is GND and is common to AUX4 through 6. Connect a sensor or switch between AUX and GND with a two-core cable with a minimum cross section of 0.5mm<sup>2</sup>.

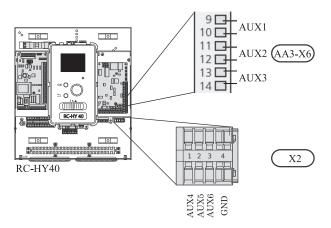

Select the appropriate function in menu 5.4.

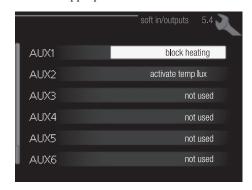

■ Temperature sensor, external supply at additional heat before reversing valve (BT63)

Temperature sensor BT63 is applied in case additional heater is placed before 3-way valve (see page 28 for diagram)

The following functions are available. For details, see AUX inputs for RC-HY20.

- Temperature sensor, cooling/heating (BT74)
- Temperature sensor, external return line (BT71)
- Temperature sensor, flow line cooling (BT64)
- Contact for external tariff blocking
- Switch for "SG ready"
- ■Contact for activation of "temporary lux"
- ■Contact for activation of "external adjustment"
- ■Switch for external alarm
- ■Switch for external blocking

#### **Electrical installation**

#### AUX outputs

External output is available on the port NC, NO and C on X7 terminal on AA3 board on RC-HY40. The relay output can have a max load of 2A at resistive load.

Following functions are available. Select the function in menu 5.4.

#### Indication of buzzer alarm

When an alarm occurs, the circuit becomes closed between the port NO and C. During normal operation, the port NC and C is closed.


Cooling mode indication / Active cooling mode (4-pipe cooling)

When the system turns into cooling mode, the circuit becomes closed between the port NO and C. By using this signal, it is possible to switch 3-way valve for 4-pipe cooling or to assemble a display circuit indicating cooling mode. For details of connecting the 3-way valve, refer to page 40 and 41

#### • External pump control (GP10)

External pump (GP10) is used in case additional heater is placed after 3-way valve that switches heating/hot water (refer to page 29 for diagram).

Connect the circulation pump using the port NO and C on X7 terminal on AA3 board as shown below.

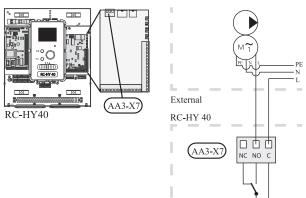

#### • Hot water circulation pump control (GP11)

In case the distance between hot water tap and hot water storage tank is far, the hot water supply line temperature is likely to drop and it may take time to supply hot water from the tap. In that case, hot water circulation pump (GP11) is applied to maintain hot water supply line temperature warm (refer to page 24 for diagram).


For details of connecting the pump, refer to External pump control (GP10).

## NOTE

Mark up any junction boxes with warnings for external voltage.

#### myUpway<sup>TM</sup>

Connect the network connected cable (straight, Cat.5e UTP) with RJ45-contact (male) to contact AA4-X9 on the display unit (as illustrated). Use the cable grommet (UB2) in the control module for cable routing.

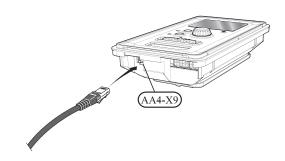

#### HMA60-S

#### **Circuit breaker**

The automatic heating control system, circulation pump and their wiring in the HMA60-S are internally protected by an overcurrent switch (FA1).

The outdoor module and accessories are internally protected in the HMA60-S by an overcurrent breaker (F1).

#### Recommended fuse size

The recommended fuse size shown in the following table is reference value. Choose appropriate size according to local laws and regulations.

	Fuse size
Indoor unit (HMA60-S)	25A / 400V 3NAC 50Hz
	50A / 230V single-phase 50Hz


#### Recommended cable size


The recommended fuse size shown in the following table is reference value. Choose appropriate size according to local laws and regulations.

	Cable size
Power – Indoor unit	6core, 10mm <sup>2</sup>
Indoor unit – Outdoor unit	5core, 2.5mm <sup>2</sup>
	(power/communication cable)

#### **Power supply**


In case of HMA60-S, the power supply is to be connected to clamp (X0) via the input at the back of the unit. The cable must be dimensioned according to the applicable standards. HMA60-S can be connected to the power supply 230V single phase and 400V three phase as specified on the clamp (X0). A removable connection which is included with the unit must be connected between L1 and L2, when power supply is 230V single phase.

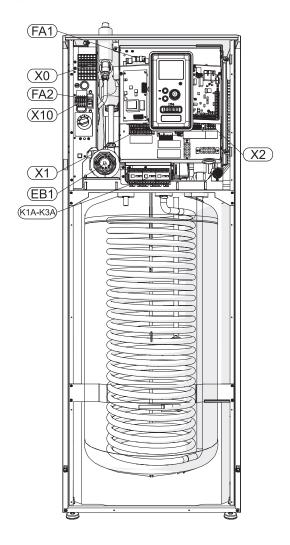

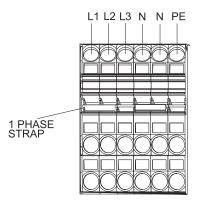


#### Connection between indoor and outdoor unit

For interconnection cable between indoor unit and outdoor unit, connect 2, 3, L, N and PE port for outdoor unit on X10 terminal on HMA60-S to 2, 3, L, N, and port on FDCW60 respectively according to the below figure.

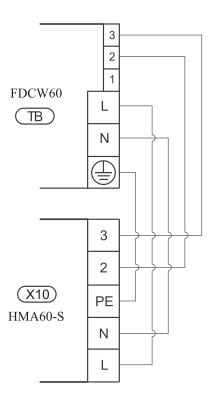


#### **External temperature sensor**

The outdoor temperature sensor (included in the kit) should be connected to the HMA60-S unit on the AA3-X6:1 and AA3-X6:2.

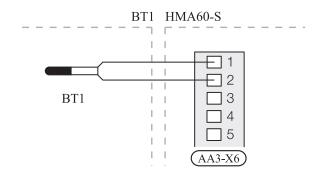

## Emergency mode thermostat

In the emergency mode, the supply temperature is set using a thermostat (BT30). It must be set according to the demand of the circuits in operation. The available regulation range is between 6 and 67°C. Remember that for floor heating, the settings must be min. 20°C, max. 35-45°C in order to preserve heat comfort in the room and assure effective system operation.

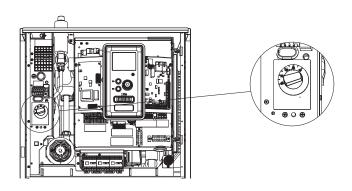

# **Commissioning and adjusting Preparations**

Before starting commissioning, check the followings;

- The signal cable is connected between indoor unit and outdoor unit as well as indoor unit and controller according to the instruction.
- The power cable is connected to indoor unit, outdoor unit and controller according to the instruction.
- Operation switch in controller is in the position **(b)**.
- The service valves on outdoor unit (QM35 and QM36) are open.
- Drain valve is closed before filling water in the system.
- Temperature limiter and electrical switch are not tripped.
- The system is filled with water and well vented.
- There are no leaks on the water pipe.

## Filling and venting

#### Hot water tank

- 1. Open the hot water tap as well as venting valve if applicable, and then open the cold water cut-off valve at the inlet.
- 2. Fill the storage tank until obtaining uniform water outflow at the hot water tap, and then close the hot water tap and venting valve.
- Fill the water heater coil in the tank. See Climate system for details.

After the installation and levelling the tank, follow the procedure below (for the connector pipe symbols, refer to page 18):

- 1. Remove protecting plugs from the connector pipes
- 2. Connect the hot water intake line (N).
- 3. Connect the cold water supply line together with the required safety valves (G).
- 4. If the system has the hot water circulati on system, connect it to the connector pipe (L). Otherwise, plug the pipe.
- 5. Connect the supply (J) and return (H) of the heating medium to the coil.

## **CAUTION**

If there is an electric heating module installed in the storage tank, fill the tank with water before connecting it to the electrical installation.

## **CAUTION-**

Open the hot water intake valves before heating the system up for the first time or after a longer break in its operation in order to check whether the storage tank is filled with water and the cut-off valve at the cold water inlet is not closed.

## **Climate system**

- 1. Open the vent at the top of the heating system.
- 2. Open all shut-off valves, where installed, so that water flows into all circuits.
- 3. Open the valve for filling the heating circuit and fill it with water.
- 4. Close the vent when water comes out continuously without bubbles.
- 5. Check the manometer and close the filling valve when the pressure reaches the required value (2 bar is recommended).
- 6. Start the circulation pump of the heating system, and open the vent from time to time and release the all remaining air in the heating system.
- 7. Open safety valve until the pressure of the heating system drops down to about 1 bar. If the pressure drops below 1 bar during venting, add additional water in the circuit.
- 8. If, while venting, the pressure drops down below 1 bar, supplement the heating medium in the circuit.

## **Emptying the heating system**

- 1. Connect the hose to the external drain valve of the system.
- 2. Then open the drain valve to empty the heating system.

## Inspection of installation

Current regulations require that the climate system is inspected before it is commissioned. The inspection must be carried out by a suitably qualified person and must be documented. Do not replace any part of the system without carrying out new checks.

## Start-up and inspection

#### Before start-up

- 1 In case of cascade connection, check if each indoor unit has a unique address. See Cascade connection setting on page 38 for details.
- 2. For an outdoor unit equipped with a crank case heater, it is necessary to supply power 6-8 hours before starting compressor operation to heat the compressor with the heater. To do this, supply power to whole system and disable the compressor operation from menu 5.2.2 on the controller. Disable additional heater as well if necessary.
- 3. After 6-8 hours, enable the compressor operation in menu 5.2.2 on the controller and enable the additional heater in menu 4.9.2 and 4.9.3 on the controller.
- 4. Start commissioning by the following steps.
- \*Step 2 and 3 are not necessary for FDCW60VNX-A.

## Commissioning with heat pump

Start guide is shown on the display on the controller when it is turned ON for the first time. Follow the start guide in the display, or choose menu 5.7 to show the start guide. For details, see Start guide on page 53.

## Commissioning with additional heater only

Follow the start guide in the display as same as commissioning with heat pump, and then follow the list below.

- 1. Go to menu 4.2 op. mode.
- 2. Mark "add. heat only" using the control knob and then press the OK button.
- 3. Return to the main menus by pressing the Back button.

## **CAUTION**

When commissioning without MHI air/water heat pump an alarm communication error may appear in the display.

The alarm is reset if the relevant heat pump is deactivated in menu 5.2.2 ("installed heat pump").

## 3-way valve operation check

- 1. Activate "AA2-K1 (QN10)" in menu 5.6.
- 2. Check that the reversing valve opens or is open for hot water charging.
- 3. Deactivate "AA2-K1 (QN10)" in menu 5.6.

#### AUX function check

To check any function connected to the AUX socket,

- 1. Activate "AA2-X4 (RC-HY20)" or "AA3-X7 (RC-HY40)" in menu 5.6.
- 2. Check the desired function.
- 3. Deactivate "AA2-X4 (RC-HY20)" or "AA3-X7 (RC-HY40, HMA-S)" in menu 5.6.

## **Cooling mode**


In case the climate system contains a cooling circuit, activate cooling function in menu 5.11.1.1.

## Cleaning particle filter

Clean the particle filter (HQ1) after installation.

- 1. Close valve QM31 and the valve by the particle filter (HQ1).
- 2. Open the safety valve (QM20) to ensure that the pressure in HSB60 drops.
- 3. Clean the particle filter (HQ1) as illustrated.



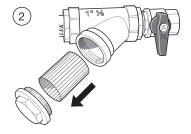

## Secondary adjustment

Air is initially released from the hot water and venting may be necessary. If bubbling sounds can be heard from the heat pump, the circulation pump and radiators the entire system will require further venting. When the system is stable (correct pressure and all air eliminated) the automatic heating control system can be set as required

## Start guide

## NOTE

Fill in the climate system with water before the switch is set

- 1. Set the control module's switch to "|".
- 2. Follow the instructions in the start guide in the control module display. If the start guide does not start when you start the control module, start it manually in menu 5.7.

See page 65 for a more in-depth introduction to the installation's control system (operation, menus etc.).

## Commissioning

The start guide is displayed when installation is started, It describes what needs to carry out at the first start together with basic settings during installation.

The start guide is displayed so that it cannot be bypassed in order to carry out the start-up correctly. You can start the start guide later in menu 5.7.


During the start-up guide, reversing valves and the shunt are run back and forth to help vent the heat pump.

## **CAUTION**

As long as the start guide is active, no function in the heat pump will start automatically.

Each time the controller is ON, the guide will appear until it is completed on the last page.

## Operation in the start guide

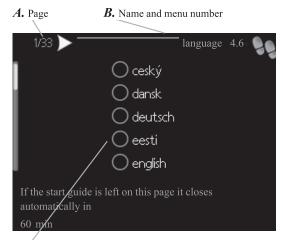

C. Option / setting

#### A. Page

You can see the current page of the start guide.

Scroll between the pages of the start guide as follows:

- 1. Turn the control knob until the arrow is marked in the top left corner (at the page number).
- 2. Press OK button to proceed to the next page in the start guide.

#### B. Name and menu number

You can see the menu name of this page. The number refers to the menu number in the control system.

To read more about affected menus, see the help menu or read the user manual.

#### C. Option / setting

Make settings for the system here.

#### D. Help menu



In many menus there is a symbol indicating that extra help is available.

To access the help text:

- 1. Use the control knob to select the help symbol.
- 2. Press OK button.

The help text often consists of several windows that you can scroll between using the control knob.

#### Commissioning and adjusting

#### Start guide - RC-HY 20


This menu is shown at the first time that the heat pump is started.

It ensures that commissioning is carried out correctly and all necessary steps are followed.

It can be started later in service menu 5.7

The following menus are basic settings. If accessories are connected other menus will appear.

## 1/17 - Language

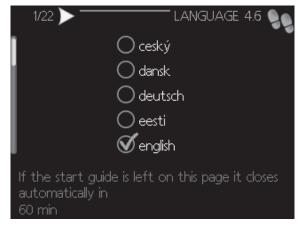

Select language of the controller.


Factory setting: English

**Available languages:** Czech, Danish, German, Estonian, English, Spanish, French, Croatian, Icelandic, Italian, Latvian, Lithuanian, Hungarian, Dutch, Norwegian, Polish, Romanian, Russian, Slovenian, Finnish, Swedish, Turkish.

#### 2/17 - Information

This menus displays information about the start guide.

#### 3/17 - Flow set. Climate sys.

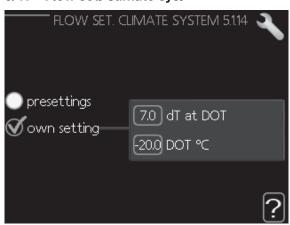

The type of heating distribution system the heating medium pump works towards is set here. **Factory setting:** Presettings – Radiato

#### Setting range:

- -Presettings
  - Radiator
  - Floor heating
  - Rad. + floor heat,
  - DOT °C

#### -Own setting

- etting range dt at DOT: 0.0 25.0
- Setting range DOT: -40.0 20.0°C

Where dT at DOT is the difference in degrees between flow and return temperature at dimensioned outdoor temperature.

#### 4/17 - Accessories


In this menu it is possible to activate additional connected accessories.



**Setting range:** hot water prod, photovol control (EME20)\* \*Accessory not available on MHIAE range.

#### 5/17 - Soft in/outputs

Set the function of in/output for each terminal (if in/outputs connected)

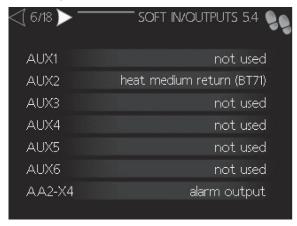

#### **Setting range:**

#### -Aux 1-6:


- Temperature sensor, cooling/heating (BT74)
- Temperature sensor, external return line (BT71)
- Temperature sensor, flow line cooling (BT64)
- · Contact for external tariff blocking
- · Switch for "SG ready"
- Contact for activation of "external adjustment"
- · Switch for external alarm
- Switch for external blocking

#### -AA2-X4:

- Alarm output
- · Cooling mode indication
- Active cooling (4 pipe)
- External heating medium pump (GP10)
- Hot water circulation (GP11)

#### 6/17 - Room sensor settings

Activate and set the room temperature sensor BT50 (if connected)

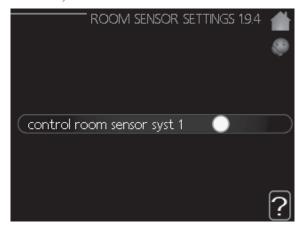


#### 7/17 - Start guide

Check if values of installed sensors are within their permitted values.

#### 8/17 - Addition

Set addition settings here.

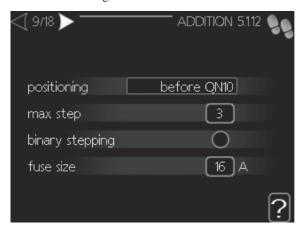

#### **Factory setting:**

-Positioning: Before QN10

-Max. step: 3 -Fuse size: 16A

#### Setting range:

#### -Positioning:

- Before QN10
- After QN10

Select this position according to the position of addition (if installed)

#### -Max step:

- Binary stepping deactivated: 0-3
- Binary stepping activated: 0-7

#### -Fuse size:

• 1 - 200 A

#### 9/17 - Installed heat pump

Enable heat pump (EB101) here

#### 10/17 - Time & Date


Set time, date and time zone here.

If the system is connected to myUpway time and date are set automatically.



#### 11/17 - Min. flow line temperature


Set minimum flow line temperature of climate system

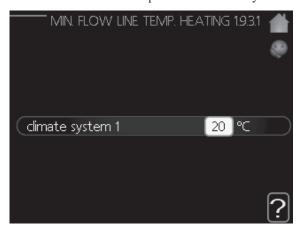

Factory setting: 20°C Setting range: 5°-70°C

#### 12/17 - Max flow line temperature


Set maximum flow line temperature of climate system

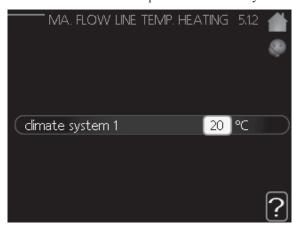

Factory setting: 60°C Setting range: 5°-70°C


#### 13/17 - Heating curve

View and set (if desired) heating curve

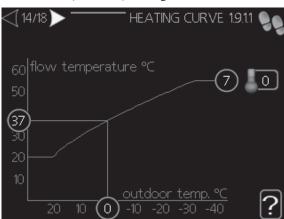

#### 14/17 - Op. mode

Set operating mode of the heat pump.

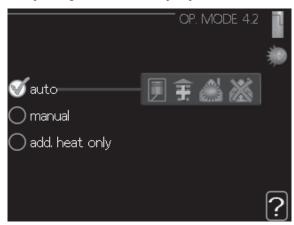


Factory setting: Auto

Setting range:

- -Auto
- -Manual:
  - · Heating
  - Cooling
  - · Add. Heat only
- -Add. heat only
  - Heating

#### 15/17 - Alarm actions

Set how to control the heat pump in an event of an alarm.

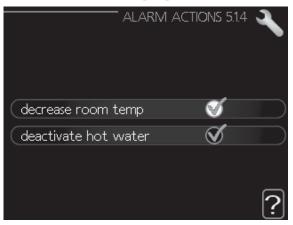

#### 16/17 - Start guide

Information message from controller

#### 17/17 - Start guide


Start guides finishes here.

You can select to open it again on the next start up or do not open it anymore.


## Additional configuration: cooling function Enable cooling

Set cooling permitted on menu 5.11.1

If you are using a 4 pipe system you have to enable to it on output AA2-X4 and also enable sensor BT64.

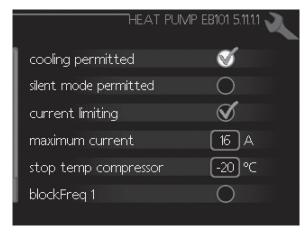

Service menu: 5.11.1.1 Cooling permitted: YES

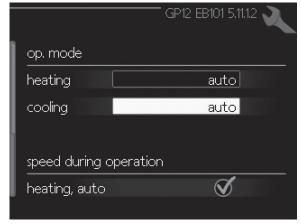

Service menu: 5.11.1.2

Operating mode GP12 cooling: auto

#### Start guide - RC-HY 40


This menu is shown at the first time that the heat pump is started.

It ensures that commissioning is carried out correctly and all necessary steps are followed.

It can be started later in service menu 5.7

The following menus are basic settings. If accessories are connected other menus will appear.

#### 1/18 - Language

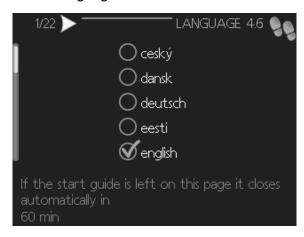

Select language of the controller.


Factory setting: English

**Available languages:** Czech, Danish, German, Estonian, English, Spanish, French, Croatian, Icelandic, Italian, Latvian, Lithuanian, Hungarian, Dutch, Norwegian, Polish, Romanian, Russian, Slovenian, Finnish, Swedish, Turkish.

#### 2/18 - Information

This menus displays information about the start guide.

#### 3/18 - Flow set. Climate sys.

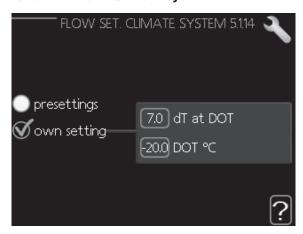

The type of heating distribution system the heating medium pump works towards is set here.

#### Commissioning and adjusting

**Factory setting:** Presettings – Radiator **Setting range:** 

#### -Presettings

- Radiator
- Floor heating
- Rad. + floor heat,
- DOT °C


#### -Own setting

- Setting range dt at DOT: 0.0 25.0
- Setting range DOT: -40.0 20.0°C

Where dT at DOT is the difference in degrees between flow and return temperature at dimensioned outdoor temperature.


#### 4/18 - Accessories

In this menu it is possible search and activate additional connected accessories.

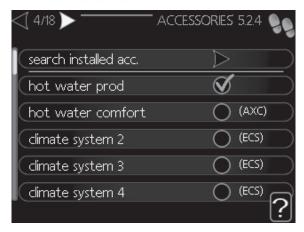

#### 5/18 - Soft in/outputs

Set the function of in/output for each terminal (if in/outputs connected)

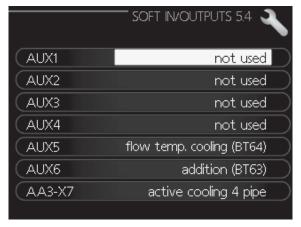

#### Setting range:

#### -Aux 1-6:


- Temperature sensor, cooling/heating (BT74)
- Temperature sensor, external return line (BT71)
- Temperature sensor, flow line cooling (BT64)
- Contact for external tariff blocking
- · Switch for "SG ready"
- Contact for activation of "external adjustment"
- Switch for external alarm
- Switch for external blocking

#### -AA3-X7:

- Alarm output
- Cooling mode indication
- Active cooling (4 pipe)
- External heating medium pump (GP10)
- Hot water circulation (GP11)

#### 6/18 - Room sensor settings

Activate and set the room temperature sensor BT50 (if connected) for each climate system

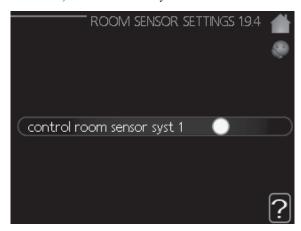


#### 7/18 - Start guide

Check if values of installed sensors are within their permitted values.

#### 8/18 - Addition

Set addition settings here

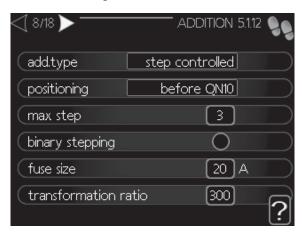

#### **Factory setting:**

-Add. type: Step controlled-Positioning: Before QN10

-Max. step: 3 -Fuse size: 16A

-Transformation ratio: 300

## **Setting range:**

-Add. type:

• Step controlled

· Shunt controlled

Select this position according to the position of addition (if installed).

If shunt controlled additional heat please refer to menu 5.1.12.

#### -Positioning:

• Before QN10

• After QN10

Select this position according to the position of addition (if installed).

#### -Max step:

• Binary stepping deactivated: 0-3

• Binary stepping activated: 0-7

#### -Fuse size:

• 1 - 200 A


## -Transformation ratio:

• 300-3000

#### 9/18 - Installed slaves


Search for installed slaves and enabled them (if connected) here.

If everything is correct the units are automatically selected after searching for installed slaves.

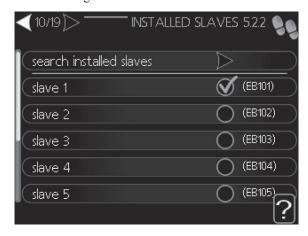

#### 10/18 - Docking

Set how each slave will work regarding piping (heating, heating and DHW...)

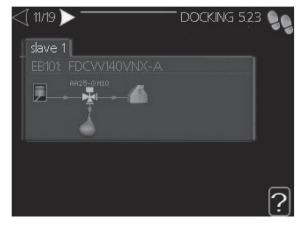

#### 11/18 - Time & Date


Set time, date and time zone here.

If the system is connected to myUpway time and date are set automatically.



#### 12/18 - Min. flow line temperature


Set minimum flow line temperature of each climate system

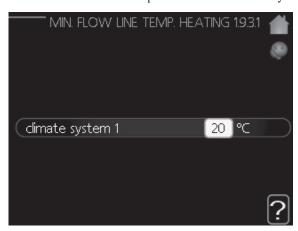

Factory setting: 20°C Setting range: 5°-70°C

#### 13/18 - Max flow line temperature


Set maximum flow line temperature of each climate system

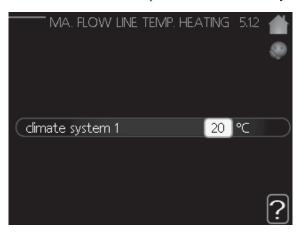

Factory setting: 60°C Setting range: 5°-70°C


#### 14/18 - Heating curve

View and set (if desired) heating curve of each climate system

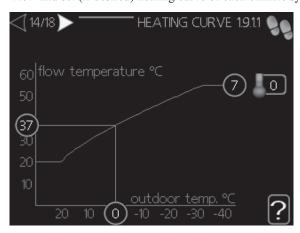

#### 15/18 - Op. mode

Set operating mode of the heat pump.

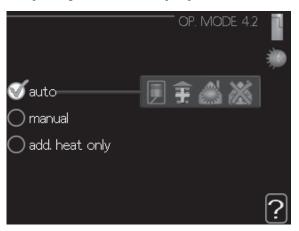

Factory setting: Auto

**Setting range:** 

- -Auto
- -Manual:
  - · Heating
  - Cooling
  - · Add. Heat only
- -Add. heat only
  - Heating

#### 16/18 - Alarm actions

Set how to control the heat pump in an event of an alarm.



## 17/18 - Start guide

Information message from controller

#### 18/18 - Start guide


Start guides finishes here.

You can select to open it again on the next start up or do not open it anymore.


## Additional configuration: cooling function Enable cooling

Set cooling permitted for each slave on menu 5.11.1.1

If you are using a 4 pipe system you have to enable to it on output AA3-X7 and also enable sensor BT64.

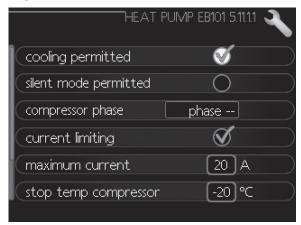

Service menu: 5.11.1.1 Cooling permitted: YES

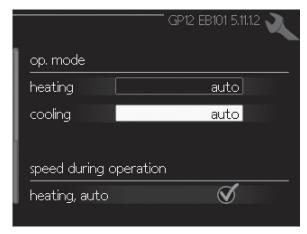

Service menu: 5.11.1.2

Operating mode GP12 cooling: auto

#### Start guide HMA 60-S


This menu is shown at the first time that the heat pump is started.

It ensures that commissioning is carried out correctly and all necessary steps are followed.

It can be started later in service menu 5.7

The following menus are basic settings. If accessories are connected other menus will appear.

## 1/19 - Language

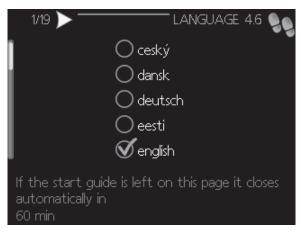

Select language of the controller.


Factory setting: English

**Available languages:** Czech, Danish, German, Estonian, English, Spanish, French, Croatian, Icelandic, Italian, Latvian, Lithuanian, Hungarian, Dutch, Norwegian, Polish, Romanian, Russian, Slovenian, Finnish, Swedish, Turkish.

#### 2/19 - Information

This menus displays information about the start guide.

#### 3/19 - Flow set. Climate sys.

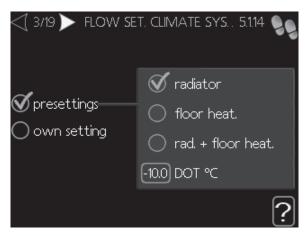

The type of heating distribution system the heating medium pump works towards is set here.

#### Commissioning and adjusting

**Factory setting:** Presettings – Radiator

#### **Setting range:**


- -Presettings
  - Radiator
  - •Floor heating
  - •Rad. + floor heat,
  - •DOT °C

#### -Own setting

- •Setting range dt at DOT: 0.0 25.0
- •Setting range DOT: -40.0 20.0°C

#### 4/19 - Accessories


In this menu it is possible search and activate additional connected accessories.

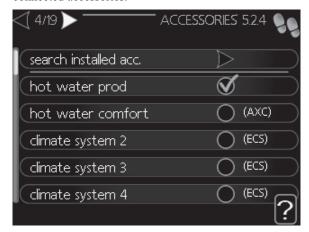

From factory "hot water prod" is enabled and cannot be disabled.

#### 5/19 - Soft in/outputs

Set the function of in/output for each terminal (if in/outputs connected)

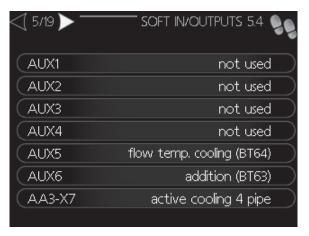

#### Setting range:

#### -Aux 1-6:

- •Temperature sensor, cooling/heating (BT74)
- •Temperature sensor, external return line (BT71)
- •Temperature sensor, flow line cooling (BT64)
- •Contact for external tariff blocking
- ·Switch for "SG ready"
- •Contact for activation of "external adjustment"
- ·Switch for external alarm
- ·Switch for external blocking


#### -AA3-X7:

- •Alarm output
- •Cooling mode indication
- •Active cooling (4 pipe)
- •External heating medium pump (GP10)
- •Hot water circulation (GP11)

Note: From factory BT64, BT63 and 4 pipe active cooling come enabled.


#### 6/19 - Room sensor settings

Activate and set the room temperature sensor BT50 (if connected) for each climate system

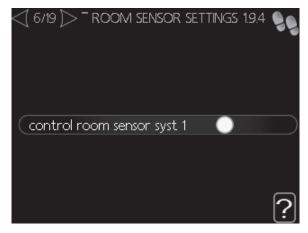

#### 7/19 - Cooling settings

In this menu it is possible to change settings for cooling system.

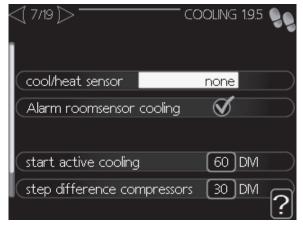


#### 8/19 - Start guide

Check if values of installed sensors are within their permitted values.

#### 9/19 - Addition

Set addition settings here

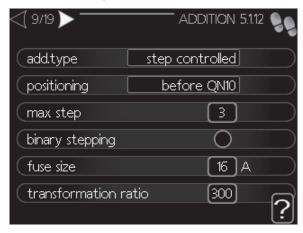

#### **Factory setting:**

-Add. type: Step controlled-Positioning: Before QN10

-Max. step: 3 -Fuse size: 16A

-Transformation ratio: 300

#### **Setting range:**

#### -Add. type:

Step controlled

•Shunt controlled

#### -Positioning:

•Before QN10

•After QN10

#### -Max step:

•Binary stepping deactivated: 0-3

•Binary stepping activated: 0-7

#### -Fuse size:

•1 -200 A

#### -Transformation ratio:


•300-3000

**Note:** Set additional heat type always as "Step controlled" and positioning as "Before QN10"

#### 10/19 - Installed slaves


Search for installed slaves and enabled them (if connected) here.

If everything is correct the units are automatically selected after searching for installed slaves.

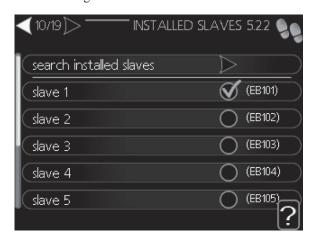

#### 11/19 - Docking

Set how each slave will work regarding piping (heating, cooling and DHW...)

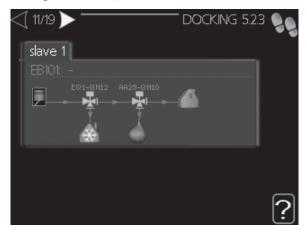

## Commissioning and adjusting

#### 12/19 - Time & Date


Set time, date and time zone here.

If the system is connected to myUpway time and date are set automatically.



#### 13/19 - Min. flow line temperature


Set minimum flow line temperature of each climate system

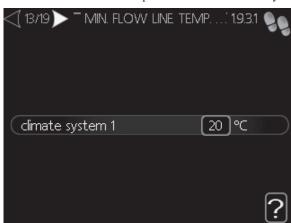

Factory setting: 20°C Setting range: 5°-70°C

#### 14/19 - Max flow line temperature


Set maximum flow line temperature of each climate system

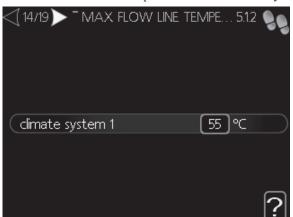

**Factory setting:** 55°C **Setting range:** 5°-70°C


#### 15/19 - Heating curve

View and set (if desired) heating curve of each climate system

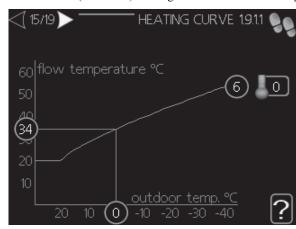

#### 16/19 - Op. mode

Set operating mode of the heat pump.

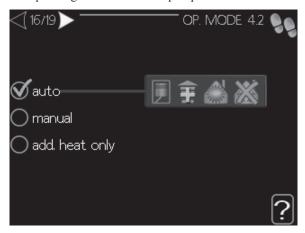


Factory setting: Auto

**Setting range:** 

- -Auto
- -Manual:
  - Heating
  - •Cooling
  - •Add. Heat only
- -Add. heat only
  - Heating

#### 17/19 - Alarm actions

Set how to control the heat pump in an event of an alarm.

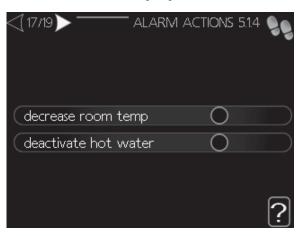

#### 18/19 - Start guide


Information message from controller


#### 19/19 - Start guide

Start guides finishes here.

You can select to open it again on the next start up or do not open it anymore.

## Heating/cooling curve setting

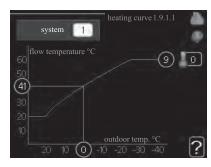

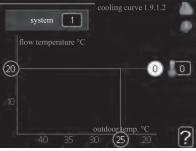

## heating curve

Setting range: 0 - 15Default value: 9


## cooling curve (accessory required)

Setting range: 0 - 9Default value: 0

The prescribed heating curve for your house can be viewed in the menu heating curve . The task of the heating curve is to give an even indoor temperature, regardless of the outdoor temperature, and thereby energy efficient operation. From this heating curve, the control module determines the temperature of the water to the heating system, supply temperature, and there by the indoor temperature. Select the heating curve and read off how the supply temperature changes at different outdoor temperatures here. If there is cooling function, the same settings can be made for the cooling curve.

#### **Curve** coefficient

The heating/cooling curve shows the relation between the target supply temperature and the corresponding outdoor temperature. A steep curve indicates that supply temperature becomes higher at low outdoor air temperature in heating and it becomes lower at high outdoor air temperature in cooling.

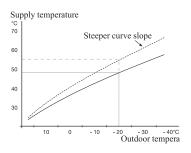

#### Commissioning and adjusting

The optimum slope depends on the climate conditions in your location, the type of heating device (radiators or under floor heating) and how well insulated the house is.

The curve is set when the heating installation is installed, but may need adjusting later. Normally, the curve will not need further adjustment.


## CAUTION

In the event of making fine adjustments of the indoor temperature, the curve must be affset up or down instead, this is done in menu 1.1 temperature.

### **Curve offset**

The target temperature can be offset in parallel over the entire outdoor temperature range by this function. This is offset by 5 °C by adjusting 2 steps.

The target temperature can be parallel offset in the entire outdoor temperature range with this function. It is offset by 5 °C by adjusting 2 steps.

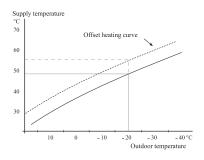

## Flow line temperature – maximum and minimum values


This function is used in order to limit max-min supply temperature. The heating / cooling curve becomes flat beyond max / min target temperature.

## CAUTION

Underfloor heating systems are normally max flow line temperature set between 35 and 45°C. Take care not to cause low temperature burns in case it is set higher than 35°C.

Must be restricted with underfloor cooling min. flow line temp. to prevent condensation.

Check the max temperature for your floor with your installer/floor supplier.

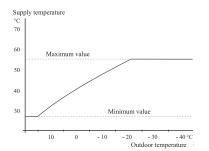

The figure at the end of the curve indicates the curve number. The figure beside the thermometer icon gives the curve offset. Use the control knob to set a new value.

Confirm the new setting by pressing the OK button.

Curve 0 is an own curve created in menu 1.9.7.

## To select another curve (slope):

- 1. Press OK button to access the setting mode
- 2. Select a new curve. The curves are numbered from 0 to 15, and the bigger number curve has steeper slope.
  - Curve 0 means that own curve (menu 1.9.7) is used.
- 3. Press OK button to exit the setting.

#### To read off a curve:

- 1. Turn the control knob so that the ring on the shaft with the outdoor temperature is marked.
- 2. Press OK button.
- 3. Follow the grey line up to the curve and out to the left to read off the value for the supply temperature at the selected outdoor temperature.
- 4. You can now select to take read outs for different outdoor temperatures by turning the control knob to the right or left and read off the corresponding flow temperature.
- 5. Press OK or Back button to exit read off mode.

## TIP

Wait 24 hours before making a new setting, so that the room temperature has time to stabilise.

If it is cold outdoors and the room temperature is too low, increase the curve slope by one increment.

If it is cold outdoors and the room temperature is too high, lower the curve slope by one increment.

If it is warm outdoors and the room temperature is too low, increase the curve offset by one increment.

If it is warm outdoors and the room temperature is too high, lower the curve offset by one increment.

## Hot water circulation setting

#### hot water recirc.

#### operating time

Setting range: 1 - 60 min Default value: 60 min

#### downtime

Setting range: 0 - 60 min Default value: 0 min

Set the hot water circulation for up to three periods per day here. During the set periods the hot water circulation pump will run according to the settings above.

"operating time" decide how long the hot water circulation pump must run per operating instance.

"downtime" decide how long the hot water circulation pump must be stationary between operating instances.

Hot water circulation is activated in menu 5.4 "soft inputs and outputs".

## **SG Ready**

This function can only be used in mains networks that support the "SG Ready"-standard.

Make settings for the function "SG Ready" here.

Low price mode means that the electricity supplier has a low tariff and the system uses this to reduce costs.

Over capacity mode means that the electricity supplier has set the tariff very low and the system uses this to reduce the costs as much as possible.

## affect room temperature

Here you set whether room temperature should be affected when activating "SG Ready".

With low price mode of "SG Ready" the parallel offset of the indoor temperature is increased by "+1". If a room sensor is installed and activated, the desired room temperature increases by  $1\,^{\circ}\text{C}$ .

With over capacity mode of "SG Ready" the parallel offset for the indoor temperature is increased by "+2".

If a room sensor is installed and activated, the desired room temperature increases by 2 °C.

#### affect hot water

Here you set whether the temperature of the hot water should be affected when activating "SG Ready".

With low price mode on "SG Ready" the stop temperature of the hot water is set as high as possible at only compressor operation (immersion heater not permitted).

With over capacity mode of "SG Ready" the hot water is set to "luxury" (immersion heater permitted).

## affect cooling (accessory required)

Here you set whether room temperature during cooling operation should be affected when activating "SG Ready".


With low price mode of "SG Ready" and cooling operation the indoor temperature is not affected.

With over capacity mode of "SG Ready" and cooling operation the parallel offset for the indoor temperature is reduced by"-1". If a room sensor is installed and activated, the desired room temperature decreases by 1  $^{\circ}$ C.

## NOTE-

The function must be connected to two AUX inputs and activated in menu 5.4.

# Control Display unit

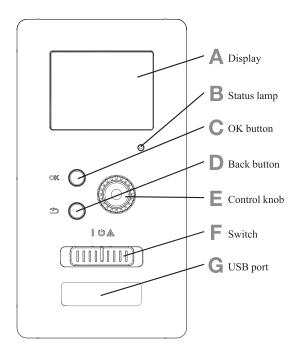

## **A Display**

Instructions, settings and operational information are shown on the display. The easy-to-read display and menu system, make it easy to navigate between various menus and options, set comfort and get the necessary information.

#### **B** Status lamp

The status lamp indicates the status of the control module. It:

- lights green during normal operation.
- lights yellow in emergency mode.
- lights red in the event of an alarm.

#### C OK button

The OK button is used to:

• confirm selections of sub menus/options/set values/page in the start guide.

#### **D** Back button

The back button is used to:

- go back to the previous menu.
- change a setting that has not been confirmed.

#### **E** Control knob

The control knob can be turned to the right or left. You can:

- scroll in menus and between options.
- increase and decrease values.
- change pages in multiple page instructions (for example help text and service info).

## F Switch (SF1)

The switch shows three positions:

- On (|)
- Standby ( **( ( ( ( )** )
- Emergency mode ( ▲ )

Emergency mode must only be used in the event of a fault on the control module. In this mode, the compressor in the heat pump is turned off and the immersion heater is activated.


The control module display is not illuminated and the status lamp lights yellow.

## **G USB port**

The USB port is hidden behind the plastic badge of the product name.

The USB port is used to update the software.

## Menu system

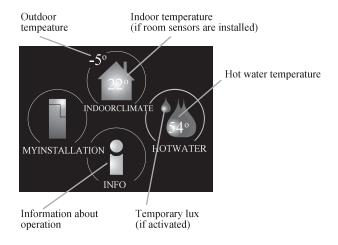

#### Menu 1 - INDOOR CLIMATE

Setting and scheduling the indoor climate. See information in the help menu or user manual.

#### Menu 2 - HOT WATER

Setting and scheduling hot water production. See information in the help menu or user manual.

This menu only appears if a water heater is installed in the system.

#### Menu 3 - INFO

Display of temperature and other operating information and access to the alarm log. See information in the help menu or user manual.

## Menu 4 - MY INSTALLATION

Setting time, date, language, display, operating mode etc. See information in the help menu or user manual.


#### Menu 5 - SERVICE

Advanced settings. These settings are not available to the end user. The menu is made visible by pressing the Back button for 7 seconds in the top screen. See page 68 for details.

## Symbols in the display

The following symbols can appear in the display during operation.

Symbol	Description	
9,00	This symbol appears when there is information to be noticed in menu 3.1.	
	These two symbols indicate whether the compressor in the outdoor unit or additional heat in the installation is blocked via controller.  These functions will be blocked for example, when either of the operation mode is blocked in menu 4.2, when blocking of either function is scheduled in menu 4.9.5, or when an alarm for blocking the operation occurs.  Blocking the compressor.  Blocking additional heat.	
۵	This symbol appears if periodic increase or lux mode for the hot water is activated.	
	This symbol indicates if "holiday setting" is active in menu 4.7.	
	This symbol indicates if the controller has contact with myUpway.	
	This symbol indicates if cooling is active.	

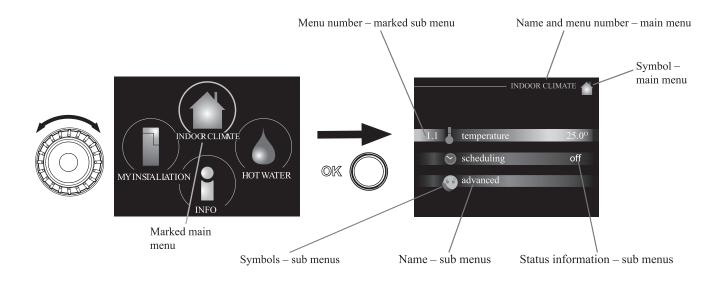

## **Operation**

To move the cursor, turn the control knob to the left or the right. The marked position is brighter and/or has a light frame.




## Selecting menu

To advance in the menu system select a main menu by marking it and then pressing the OK button. A new window opens with sub menus.

Select one of the sub menus by marking it and then pressing the OK button.

## **Selecting options**

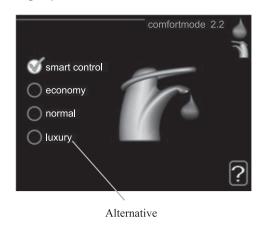

In an options menu the current selected option is indicated by a green tick.




To select another option:

- 1. Mark the applicable option. One of the options is preselected (white).
- 2. Press the OK button to confirm the selected option. The selected option has a green tick.



## Setting a value

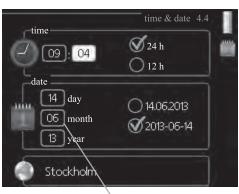

Values to be changed

To set a value:


- 1. Mark the value you want to set using the control knob.
- 2. Press the OK button. The background of the value
- becomes green, which means that you have accessed the setting mode. 3. Turn the control knob to the right to increase the

value and to the left to reduce the value.

4. Press the OK button to confirm the value you have set. To change and return to the original value, press the Back button.



# Use the virtual keyboard

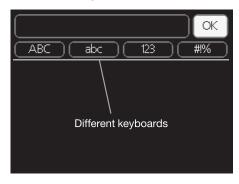

In some menus where text may require entering, a virtual keyboard is available.



Depending on the menu, you can gain access to different character sets which you can select using the control knob. To change character table, press the Back button. If a menu only has one character set, the keyboard is displayed directly.

When you have finished writing, mark "OK" and press the OK button.

### Scroll through the windows

A menu can consist of several windows. Turn the control knob to scroll between the windows.



# Scroll through the windows in the start guide



- 1. Turn the control knob until one of the arrows in the top left corner (at the page number) has been marked.
- 2. Press the OK button to skip between the steps in the start guide.

# Help menu

In many menus there is a symbol that indicates that extra help is available.

To access the help text:

- 1. Use the control knob to select the help symbol.
- 2. Press the OK button.

The help text often consists of several windows that you can scroll between using the control knob.

# Menu list

"\* Accessories are needed. \*\* Heat pump with cooling function required. 40"

	MENU		RC-HY20	RC-HY40
1 INDOOR CLIMATE			<del></del>	
1.1 - temperature	1.1.1 heating		V	V
•		1.1.2 cooling **		~
1.3 - scheduling	1.3.1 heating		V	~
C	1.3.2 cooling **		V	~
1.9 - advanced	1.9.1 curve	1.9.1.1 heating curve	V	~
		1.9.1.2 cooling curve **	V	~
	1.9.2 external adjustment		V	~
	1.9.3 min. flow line temp.	1.9.3.1 heating	V	~
	,	1.9.3.2 cooling **	V	~
	1.9.4 room sensor settings		V	~
	1.9.5 cooling settings *		V	~
	1.9.7 own curve	1.9.7.1 heating	V	~
		1.9.7.2 cooling **	V	~
	1.9.8 point offset		V	~
2 HOTWATER	1 *			I
2.1 temporary lux			V	V
2.2 comfort mode			V	~
2.3 scheduling			V	~
2.9 advanced	2.9.1 periodic increase	· /	~	
		2.9.2 hot water recirc. *		
3 INFO				
3.1 service info			V	V
3.2 compressor info		· /	~	
3.3 add. heat info	t info		V	~
3.4 alarm log			V	~
3.5 indoor temp. log			V	~
4. MY SYSTEM				l
4.1 plus functions	4.1.3 internet	4.1.3.1 myUpway™	V	V
•		4.1.3.8 tcp/ip settings	V	~
		4.1.3.9 proxy settings	V	~
	4.1.5 SG Ready		V	~
	4.1.6 smart price adaption <sup>TM</sup>			~
	4.1.8 smart energy source <sup>TM</sup>	4.1.8.1 settings	_	~
		4.1.8.2 set. Price	<u> </u>	~
		4.1.8.3 CO2 impact	_	~
		4.1.8.4 tariff periods, electricity	_	~
	4.1.8.6 tariff per, ext. shunt add 4.1.8.7 tariff per, ext. step add		_	~
			_	~
4.2 op. mode	1		V	~
4.3 my icons			V	~
4.4 time & date			V	~

"\* Accessories are needed. \*\* Heat pump with cooling function required. 40"

	MENU		RC-HY20	RC-HY40
4.6 language			V	~
4.7 holiday setting	7 holiday setting			
4.9 advanced	4.9.1 op. prioritisation	4.9.1 op. prioritisation		
	4.9.2 auto mode setting	~	~	
	4.9.3 degree minute setting		V	~
	4.9.4 factory setting user		V	~
	4.9.5 schedule blocking	4.9.5 schedule blocking		~
	4.9.6 schedule silent mode		V	~
5 SERVICE	,			
5.1 operating settings	5.1.1 hot water settings *		~	~
	5.1.2 max flow line tempera	iture	V	~
	5.1.3 max diff flow line tem	p.	~	~
	5.1.4 alarm actions		V	~
	5.1.12 addition		V	~
	5.1.14 flow set. climate syst	em	V	~
	5.1.22 heat pump testing		V	~
	5.1.23 compressor curve		V	~
5.2 system settings	5.2.2 installed slaves		V	~
	5.2.3 docking		~	~
	5.2.4 accessories	5.2.4 accessories		~
5.3 accessory settings	5.3.2 shunt controlled add. heat *		_	~
	5.3.3 extra climate system	*	_	~
	5.3.6 step controlled add. H	Ieat	_	~
	5.3.8 hot water comfort *		_	~
	5.3.20 flow sensor*		_	~
5.4 soft in/outputs			~	~
5.5 factory setting service			V	~
5.6 forced control			V	~
5.7 start guide			~	~
5.8 quick start			V	~
5.9 floor drying function			V	~
5.10 change log			~	~
5.11 slave settings	5.11.1 EB101	5.11.1.1 heat pump	V	~
		5.11.1.2 charge pump (GP12)	V	~
	5.11.2 EB102		_	~
	5.11.3 EB103		_	~
	5.11.4 EB104			~
	5.11.5 EB105		_	~
	5.11.6 EB106		_	~
	5.11.7 EB107		_	~
	5.11.8 EB108		_	~
	5.12 country		~	~

#### Sub-menus

Menu SERVICE has orange text and is intended for the advanced user. This menu has several sub-menus.

Status information for the relevant menu can be found on the display to the right of the menus.

**operating settings:** Operating settings for the control module

**system settings:** System settings for the control module, activating accessories etc.

**soft in/outputs:** Setting software controlled in and outputs on the input card (AA3) and terminal block (X2).

**factory setting service:** Total reset of all settings (including settings available to the user ) to default values.

**forced control:** Forced control of the different components in the indoor module.

**start guide:** Manual start of the start guide which is run the first time when the control module is started.

quick start: Quick starting the compressor.

# NOTE

Incorrect settings in the service menus can damage the installation.

#### Menu 5.1 - operating settings

Operating settings can be made for the control module in the sub menus.

#### Menu 5.1.1 - hot water settings

#### economy

Setting range start temp. economy: 5-55 °C Factory setting start temp. economy: 42 °C Setting range stop temp. economy: 5-60 °C Factory setting stop temp. economy: 48 °C

#### normal

Setting range start temp. normal: 5-60 °C Factory setting start temp. normal: 46 °C Setting range stop temp. normal: 5-65 °C Factory setting stop temp. normal: 50 °C

#### luxury

Setting range start temp. lux: 5-70 °C Factory setting start temp. lux: 49 °C Setting range stop temp. lux: 5-70 °C Factory setting stop temp. lux: 53 °C

#### stop temp. per. increase

Setting range: 55 - 70 °C Factory setting: 55 °C

#### charge method

Setting range: target temp, delta temp

Default value: delta temp

Here you set the start and stop temperature of the hot water for the different comfort options in menu 2.2 as well as the stop temperature for periodic increase in menu 2.9.1.

The charge method for hot water mode is selected here. "delta temp" is recommended for heaters with charge coil, "target temp" for heaters with domestic coil.

#### Menu 5.1.2 - max flow line temperature

#### climate system

Setting range: 5 - 70 °C Default value: 60 °C

Set the maximum supply temperature for the climate system here. If the installation has more than one climate system, individual maximum supply temperatures can be set for each system. Climate systems 2-8 cannot be set to a higher max supply temperature than climate system 1.

# CAUTION

Underfloor heating systems are normally max flow line temperature set between 35 and 45°C.

Be careful not to cause low temperature burn if it is set at 35°C or higher.

Check the max floor temperature with your floor supplier.

#### Menu 5.1.3 - max diff flow line temp.

#### max diff compressor

Setting range: 1 - 25 °C Default value: 10 °C

#### max diff addition

Setting range: 1 - 24 °C Default value: 7 °C

Here you set the maximum permitted difference between the calculated and actual supply temperature during compressor mode and add. heat mode. Max diff. additional heat can never exceed max diff. compressor

#### max diff compressor

When the current supply temperature **deviates** from the set value compared to that calculated, the heat pump is forced to stop irrespective of the degreeminute value.

If the current supply temperature exceeds the calculated flow temperature plus the set value, the degree minute value is set to 0. The compressor in the heat pump stops when there is only a heating demand.

#### max diff addition

If "addition" is selected and activated in menu 4.2 and the present supply temp **exceeds** the calculated temperature plus the set value, the additional heat is forced to stop.

#### Menu 5.1.4 - alarm actions

Select how to control the heat pump in the event of an alarm. You can choose to stop producing hot water and/or reduce the room temperature.

# **CAUTION**-

If no alarm action is selected, it can result in higher energy consumption in the event of an alarm.

#### Menu 5.1.12 - addition

add type: step controlled

### max step

Setting range (binary stepping deactivated): 0-3 Setting range (binary stepping activated): 0-7 Default value: 3

#### fuse size

Setting range: 1 – 200 A Factory setting: 16 A

You can set the maximum number of permitted additional heat steps, if there is internal additional heat in the tank (only accessible if the additional heat is positioned after QN10), whether binary stepping is to be used and the size of the fuse.

#### <Add. Type: shunt controlled (RC-HY40 only)>

#### prioritised additional heat

Setting range: on/off Factory setting: off

#### minimum running time

Setting range: 0 - 48 hDefault value: 12 h

#### min temp.

Setting range: 5-90 °C Default value: 55 °C

# mixing valve amplifier

Setting range: 0.1 –10.0 Default value: 1.0

#### mixing valve step delay

Setting range: 10 - 300 s Default values: 30 s

#### fuse size

Setting range: 1 – 200 A Factory setting: 16 A *transformation ratio* 

Setting range: 300 – 3000 Factory setting: 300

Select this option if shunt controlled additional heat is connected.

Set when the addition is to start, the minimum run time and the minimum temperature for external addition with shunt here. External addition with shunt is for example a wood/oil/gas/pellet boiler.

You can set shunt valve amplification and shunt valve waiting time.

Selecting "prioritised additional heat" uses the heat from the external additional heat instead of the heat pump.

The shunt valve is regulated as long as heat is available, otherwise the shunt valve is closed.

# **TIP**

See the accessory installation instructions for function description.

### Menu 5.1.14 - flow set. climate system

#### presettings

Setting range: radiator, floor heat., rad. + floor heat.

Default value: radiator

Setting range DOT: -40.0 – 20.0  $^{\circ}$ C

The factory setting of DOT value depends on the country that has been given for the product's location.

The example below refers to Sweden.

Factory setting DOT: -20.0 °C

#### own setting

Setting range dT at DOT: 0.0 - 25.0

#### Control

Factory setting dT at DOT: 10.0 Setting range DOT: -40.0 – 20.0 °C Factory setting DOT: -20.0 °C

Select the type of heating distribution system.

dT at DOT is the difference in degrees between flow and return temperatures at dimensioned outdoor temperature.

#### Menu 5.1.22 - heat pump testing

# NOTE-

This menu is intended for testing heat pump according to different standards.

Use of this menu for other reasons may result in your installation not functioning as intended.

This menu contains several sub-menus, one for each standard.

#### Menu 5.1.23 - compressor curve

Set whether the compressor in the heat pump should work to a particular curve under specific requirements or if it should work to predefined curves.

You can set a curve for each operation mode (heat, hot water, coolingetc.) by unticking "auto", turning the control knob until a temperature is marked and pressing OK. You can set at what temperature max- min frequencies will occur.

This menu consists of several windows (one for each operation mode). Use the navigation arrow in the top left corner to change between the windows.

#### Menu 5.2 - system settings

Make different system settings for your installation here, e.g. activate the connected heat pump and which accessories are installed

#### Menu 5.2.2 - installed heat pump

If a heat pump is connected to the master installation, set it here.

For RC-HY40, you can set slave unit to be connected.

There are two ways of activating connected slaves. You can either mark the alternative in the list or use the automatic function "search installed slaves".


#### search installed slaves

Mark "search installed slaves" and press the OK button to automatically find connected slaves for the master heat pump.

### Menu 5.2.3 - docking (RC-HY 40 only)

Enter how your system is docked regarding pipes, for example to hot water heating and heating the building.

This menu has a docking memory which means that the control system remembers how a particular reversing valve is docked and automatically enters the correct docking the next time you use the same reversing valve.

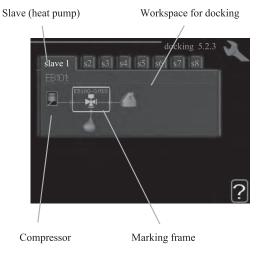

**Slave:** Here you select for which heat pump the docking setting is to be made.

**Compressor:** Select if the compressor in the heat pump is blocked (factory setting), or standard (docked for example to pool heating, hot water charging and heating the building).

**Marking frame:** Move around the marking frame using the control knob. Use the OK button to select what you want to change and to confirm setting in the options box that appears to the right.

**Workspace for docking:** The system docking is drawn here.

Symbol	Description
	Compressor (blocked)
	Compressor (standard)
Ā	Reversing valves for hot water, cooling.  The designations above the reversing valve indicate where it is electrically connected (EB101 = Slave 1, etc.).
( )	Hot water charging
	Heating (heating the building, includes any extra climate system)
	Cooling

#### Menu 5.2.4 - accessories

Set which accessories are installed on the installation here.

If the water heater is connected, hot water charging must be activated here.

#### Menu 5.3 - accessory settings

The operating settings for accessories that are installed and activated are made in the sub-menus for this.

#### Menu 5.3.2 - shunt controlled add. Heat

#### prioritised additional heat

Setting range: on/off Factory setting: off

#### start diff additional heat

Setting range: 0 – 2000 GM Default values: 400 GM **minimum running time** 

Setting range: 0 – 48 h Default value: 12 h

#### min temp.

Setting range: 5 – 90 °C Default value: 55 °C

## mixing valve amplifier

Setting range: 0.1 –10.0 Default value: 1.0

#### mixing valve step delay

Setting range: 10 - 300 s Default values: 30 s

Set when the addition is to start, the minimum run time and the minimum temperature for external addition with shunt here. External addition with shunt is for example a wood/oil/gas/pellet boiler.

You can set shunt valve amplification and shunt valve waiting time.

Selecting "prioritised additional heat" uses the heat from the external additional heat instead of the heat pump.

The shunt valve is regulated as long as heat is available, otherwise the shunt valve is closed.

See the accessory installation instructions for function description.

#### Menu 5.3.3 - extra climate system

#### use in heating mode

Setting range: on/off Factory setting: on

#### use in cooling mode

Setting range: on/off Factory setting: off

### mixing valve amplifier

Setting range: 0.1 - 10.0Default value: 1.0

# mixing valve step delay

Setting range: 10 - 300 sDefault values: 30 s

Here you select which climate system (2 - 8) you wish to set. In the next menu you can make settings for the climate system that you have selected. If this function is activated, you can set "cooling flow temp. at  $+20^{\circ}$ C" and "cooling flow temp. at  $+40^{\circ}$ C" for each climate system where the function is activated.

# CAUTION -

This setting option only appears if "cooling permitted" is activated in menu 5.11.1.1.

The shunt amplification and shunt waiting time for the different extra climate systems that are installed are also set here.

See the accessory installation instructions for function description.

## Menu 5.3.6 - step controlled add. heat

#### start addition

Setting range: 0 - 2000 GM Default values: 400 GM

#### diff. between additional steps

Setting range: 0 – 1000 GM Default values: 30 GM

#### max step

Setting range

(binary stepping deactivated): 0 - 3

Setting range

(binary stepping activated): 0-7

Default value: 3 **binary stepping** 

Setting range: on/off Factory setting: off

Make settings for step controlled addition here. Step controlled addition is for example an external electric boiler.

It is possible, for example, to select when the additional heat is to start, to set the maximum number of permitted steps and whether binary stepping is to be used.

When binary stepping is deactivated (off), the settings refer to linear stepping.

See the accessory installation instructions for function description.

#### Menu 5.3.8 - hot water comfort

#### activating imm heater

Setting range: on/off Factory setting: off

#### activ. imm heat in heat mode

Setting range: on/off Factory setting: off

#### activating the mixing valve

Setting range: on/off Factory setting: off

#### outgoing hot water

Setting range: 40 – 65 °C Default value: 55 °C

#### mixing valve amplifier

Setting range: 0.1 - 10.0Default value: 1.0

#### mixing valve step delay

Setting range: 10 - 300 sDefault values: 30 s

Make settings for the hot water comfort here.

See the accessory installation instructions for function description.

activating imm heater: The immersion heater is activated

here if installed in the water heater.

**activ. imm heat in heat mode:** Activate here whether the immersion heater in the tank (required if the alternative above is activated) will be permitted to charge hot water, if the compressors in the heat pump prioritise heating.


**activating the mixing valve:** Activate here whether a mixer valve for limiting the temperature of hot water from the water heater is installed.

If this alternative has been activated, you can set the outgoing hot water temperature, shunt amplification and shunt waiting time for the mixer valve.

**outgoing hot water:** Set the temperature at which the mixing valve is to restrict hot water from the water heater.

See the accessory installation instructions for function description.

#### Menu 5.3.20 - flow sensor

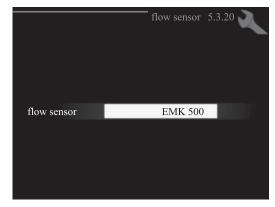

#### flow sensor

Setting option: EMK 500, EMK 310 / 300, EMK 150  $\,$ 

Factory setting: EMK 500

Here you select which flow sensor is used for the energy measurement.

#### Menu 5.4 - soft in/outputs

You can set the function of in/output for each terminal (AUX1-6 and output).

Position of the terminal depends on the type of controller.

RC-HY20: port 11-18 on X2 terminal (AUX1-6), X4 terminal on AA2 board (output)

RC-HY40: port 9-14 on terminal X6 and port 1-4 on X2 terminal on AA3 board (AUX1-6), X7 terminal on AA3 board (output)

#### Menu 5.5 - factory setting service

All settings can be reset (including settings available to the user) to default values here.

# NOTE-

When resetting, the start guide is displayed the next time the control module is restarted.

#### Menu 5.6 - forced control

You can force control the different components in the control module and any connected accessories here.

#### Menu 5.7 - start guide

When the control module is started for the first time the start guide starts automatically. Start it manually here.

See page 25 for more information about the start guide.

# Menu 5.8 - quick start

It is possible to start the compressor from here.

# **CAUTION**

There must be a heating or hot water demand to start the compressor.

# CAUTION

Do not quick start the compressor too many times over a short period of time as this may damage the compressor and its surrounding equipment.

#### Menu 5.9 - floor drying function

#### length of period 1 – 7

Setting range: 0 - 30 days

Factory setting, period 1-3, 5-7: 2 days

Factory setting, period 4: 3 days

#### temp. period 1 - 7

Setting range: 15 − 70 °C

Default value:

temp. period 1	20 °C
temp. period 2	30 °C
temp. period 3	40 °C
temp. period 4	45 C
temp. period 5	40 °C
temp. period 6	30 °C
temp. period 7	20 °C

Set the function for under floor drying here.

You can set up to seven period times with different calculated flow temperatures. If less than seven periods

are to be used, set the remaining period times to 0 days.

Mark the active window to activate the underfloor drying function. A counter at the bottom shows the number of days the function has been active.

# TIP

If operating mode "add. heat only" is to be used, select it in menu 4.2.

### Menu 5.10 - change log

Read off any previous changes to the control system here.

The date, time and ID no. (unique to certain settings) and the new set value is shown for every change.

# NOTE-

The change log is saved at restart and remains unchanged after factory setting.

#### Menu 5.11 - heat pump settings

Settings for installed heat pump can be made in the submenus.

#### Menu 5.11.1 - EB101 - EB108

Make settings specifically for the installed heat pump and charge pump here.

For RC-HY40, it is possible to connect up to 8 heat pumps.

#### Menu 5.11.1.1 - heat pump

Make settings for the installed heat pump here. To see what settings you can make, see installation manual for the heat pump.

#### **Cooling permited**

Here you can set wheter the cooling function is to be activated for the heat pump.

#### Silent mode permitted

Set whether silent mode is to be activated for the heat pump

#### **Current limit**

Set whether the current limiting function is to be activated for the heat pump here.

#### During active function you can limit the value of the maximum current.

Setting range: 6 - 32 A Factory setting: 32 A

#### Stop temperature compressor

Here you can limit the value for the set outdoor temperature down to the value the heat pump is to work

Setting range: -20°C - -2°C Factory setting: -20°C

### blockFreq 1

Select a frequency range within the heat pump may work here

### blockFreq 2

Select a frequency range within the heat pump may work here

#### Menu 5.11.1.2 - charge pump (GP12)

#### op. mode

Heating/cooling

Setting range: auto / intermittent

Default value: auto

Set the operating mode for the charge pump here.

**auto:** The charge pump runs according to the current operating mode for controller.

**intermittent:** The charge pump starts and stops 20 seconds before and after the compressor in the heat pump.

# speed during operation heating, hot water, cooling

Setting range: auto / manual

Default value: auto *Manual setting* 

Setting range: 1 - 100 %Default values: 70 %

## speed in wait mode

Setting range: 1 - 100 %Default values: 30 %

# max. allowed speed

Setting range: 80 – 100 % Default values: 100 %

Set the speed at which the charge pump is to operate in the present operating mode. Select "auto" if the speed of the charge pump is to be regulated automatically (factory setting) for optimal operation.

If "auto" is activated for heating operation, you can also make the setting "max. allowed speed" which restricts the charge pump and does not allow it to run at a higher speed than the set value.

For manual operation of the charge pump deactivate "auto" for the current operating mode and set the value to between 1 and 100 % (the previously set value for "max. allowed speed" no longer applies).

Speed in standby mode (only used if "auto" has been selected for "Operating mode") means the charge pump operates at the set speed during the time when there is neither a need for compressor operation nor additional heat.

#### 5.12 - country

Select here where the product was installed. This allows access to country specific settings in your product.

Language settings can be made regardless of this selection.

# NOTE:

This option locks after 24 hours, restart of display or program updating.

# **Service**

# **Service actions**

# NOTE -

Servicing should only be carried out by persons with the necessary expertise.

When replacing components on the system, only genuine replacement parts may be used.

## NOTE

If an electrical connection has been disconnected and is connected, ground must be checked using a suitable multimeter.

#### **Maintenance**

#### **General inspection**

Check the following:

- 1. Condition of casing.
- 2. Electrical connections.
- 3. Alarm log.

Correct any fault before continuing.

#### **Climate system**

Check the following:

- 1. Climate system start and stop temperature.
- 2. Heating curve settings.
- 3. Function of the room sensor (if installed).
- 4. System pressure.
- 5. Flow and return temperature. The difference must be 5-10  $^{\circ}$ C.

Correct any fault before continuing.

### **Emergency mode**

# NOTE-

Switch (SF1) must not be put into mode "|" or  $\Delta$  before the installation is filled with water.

The compressor in the heat pump can be damaged.

Emergency mode is used in event of operational interference and in conjunction with service. Hot water is not produced in emergency mode.

Emergency mode is activated by setting switch (SF1) in mode " $\Delta$ ". This means that:

- The status lamp illuminates yellow.
- The display is not lit and the control computer is not connected.
- Hot water is not produced.
- The compressors are switched off. Charge pump (EB101-GP12) is running.
- The heating medium pump is active.
- The emergency mode relay (K1) is active.


External additional heat is active if it is connected to the emergency mode relay (K1, terminal block X1).

Ensure that the heating medium circulates through the external additional heat.

#### Temperature sensor data

Temperature	Resistance	Voltage
(°C)	(kOhm)	(VDC)
-40	351.0	3.256
-35	251.6	3.240
-30	182.5	3.218
-25	133.8	3.189
-20	99.22	3.150
-15	74.32	3.105
-10	56.20	3.047
-5	42.89	2.976
0	33.02	2.889
5	25.61	2.789
10	20.02	2.673
15	15.77	2.541
20	12.51	2.399
25	10.00	2.245
30	8.045	2.083
35	6.514	1.916
40	5.306	1.752
45	4.348	1.587
50	3.583	1.426
55	2.968	1.278
60	2.467	1.136
65	2.068	1.007
70	1.739	0.891
75	1.469	0.785
80	1.246	0.691
85	1.061	0.607
90	0.908	0.533
95	0.779	0.469
100	0.672	0.414

#### **USB** service outlet

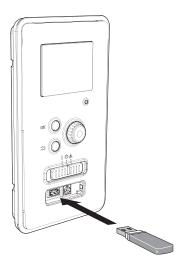


RC-HY20/40 is equipped with a USB socket in the display unit. This USB socket can be used to connect a USB memory to update the software, save logged information and handle the settings in RC-HY20/40.



When a USB memory is connected a new menu (menu 7) appears in the display.

#### Menu 7.1 - update firmware

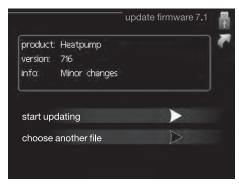

This allows you to update the software in RC-HY20/40 and HMA.

# NOTE

For the following functions to work the USB memory must contain files with software for RC-HY20/40 and HMA.

This information states which product the software is intended for, the software version and general information about them. If you wish to select another file than the one selected, the correct file can be selected by "choose another file".

#### start updating

Select "start updating" if you want to start the update.

You are asked whether you really want to update the software. Respond "yes" to continue or "no" to undo.

If you responded"yes" to the previous question the update starts and you can now follow the progress of the update on the display. When the update is complete RC-HY20/40 and HMA restarts.

### NOTE

A software update does not reset the menu settings in RC-HY20/40 and HMA.

# NOTE


If the update is interrupted before it is complete (for example power cut etc.) the software can be reset to the previous version if the OK button is kept pressing during start up until the green lamp starts to illuminate (takes about 10 seconds).

#### choose another file



Select "choose another file" if you do not want to use the suggested software. When you scroll through the files, information about the marked software is shown in a fact box just as before. When you have selected a file with the OK button you will return to the previous page (menu 7.1) where you can choose to start the update.

Menu 7.2 - logging

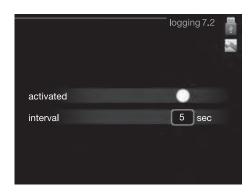

Setting range: 1 s - 60 minFactory setting range: 5 s

You can set the interval of the log data storage and start saving the log data on the USB memory.

- 1. Set the desired interval between loggings.
- 2. Tick "activated".
- 3. The present values from RC-HY20/40 and HMA are saved in a file in the USB memory at the set interval until "activated" is unticked.

# NOTE -

Untick "activated" before removing the USB memory. Menu 7.3 - manage settings

#### Menu 7.3 - manage settings



Here you can manage (save as or retrieve from) all the menu settings (user and service menus) in RC-HY20/40 and HMA with a USB memory.

Via "save settings" you save the menu settings to the USB memory in order to restore them later or to copy the settings to another RC-HY20/40 and HMA.

# NOTE-

When you save the menu settings to the USB memory you replace any previously saved settings on the USB memory.

Via "recover settings" you reset all menu settings from the USB memory.

# NOTE-

Reset of the menu settings from the USB memory cannot be undone.

# Pump down operation - FDCW60

This function can only be started when operation mode is set to addition heat only on menu 4.2.:



When this operating mode is activated pump down is available on service menu 5.11.

Menu number	Setting	Alternatives	Default	Other
5.11.X.1	Pump down	Yes/No	No	Menu only displayed in "Addition heat only" mode
5.11.X.2	Start pump down	Yes/No	No	Activates compressor operation. Above menu has to set "Yes" to display this meny

#### Once the function has been activated:

- Compressor starts cooling operation with 2 minutes delay time
- Target compressor speed will be 56 rps
- Circulation pump runs at 100% when compressor starts

# Pump down stops automatically when one of the following conditions is fulfilled:

- Pressure at BP4 gets lower more than 0.087 Mpa for more than 5 seconds
- More than 5 minutes have passed
- An alarm stops the compressor operation

#### When pump down is stopped:

- Circulation pump runs at it normal operation
- Pump down changes to "No"
- Start pump down changes to "No"

# CAUTION-

Make sure to close the service valves according to service manual for recovery of refrigerant unit!

# Disturbance in comfort

In most cases, the control module notes a malfunction and indicates this with alarms and shows instructions to rectify it in the display. See "Manage alarm" for in- formation about managing alarms. If the malfunction does not appear in the display, or if the display is not lit, the following troubleshooting guide can be used.

# Manage alarm



In the event of an alarm, some kind of malfunction has occurred, which is indicated by the status lamp changing from green continuously to red continuously. In addition, an alarm bell appears in the information window.

#### **Alarm**

In the event of an alarm with a red status lamp a malfunction has occurred that the heat pump and/or control module cannot remedy itself. In the display, by turning the control knob and pressing the OK button, you can see the type of alarm it is and reset it. You can also choose to set the installation to aid mode.

**info / action** Here you can read what the alarm means and receive tips on what you can do to correct the problem that caused the alarm.

**reset alarm** In most cases it is enough to select "reset alarm" to correct the problem that caused the alarm. If a green light illuminates after selecting "reset alarm" the alarm has been remedied. If a red light is still visible and a menu called "alarm" is visible in the display, the problem that caused the alarm remains. If the alarm disappears and then returns, see the troubleshooting section (page 81 and 82).

**aid mode** "aid mode" is a type of emergency mode. This means that the installation produces heat and/or hot water despite there being some kind of problem. This can mean that the heat pump's compressor is not running. In this case any electrical addition produces heat and/or hot water.

# NOTE-

To select aid mode an alarm action must be selected in the menu 5.1.4.

# **CAUTION**

Selecting "aid mode" is not the same as correcting the problem that caused the alarm. The status lamp will therefore continue to be red.

# **Troubleshooting**

If the operational interference is not shown in the display the following tips can be used:

#### **Basic actions**

Start by checking the following possible fault sources:

- The switch's position.
- Group and main fuses of the accommodation.
- The property's earth circuit breaker.
- The control module's miniature circuit breaker.

# Low hot water temperature or a lack of hot water

This part of the fault-tracing chapter only applies if the water heater is installed in the system.

- Closed or choked filling valve for the hot water heater.
  - Open the valve.
- Mixing valve (if there is one installed) set too low.
  - Adjust the mixer valve.
- Control module in incorrect operating mode.
  - If mode "manual" is selected, select "addition".
- Large hot water consumption.
  - Wait until the hot water has heated up. Temporarily increased hot water capacity (temporary lux) can be activated in menu 2.1.
- Too low hot water setting.
  - Enter menu 2.2 and select a higher comfort mode.
- Too low or no operating prioritisation of hot water.
  - Enter menu 4.9.1 and increase the time for when hot water is to be prioritised.

#### Low room temperature

- Closed thermostats in several rooms.
  - Set the thermostats to max, in as many rooms as possible.
     Adjust the room temperature via menu 1.1, instead of choking the thermostats.
- Control module in incorrect operating mode.
  - Enter menu 4.2. If mode "auto" is selected, select a higher value on "stop heating" in menu 4.9.2.
  - If mode "manual" is selected, select "heating". If this is not enough, select "addition".
- Too low set value on the automatic heating control.
  - Enter menu 1.1 "temperature" and adjust the offset heating curve up. If the room temperature is only low in cold weather the curve slope in menu 1.9.1 "heating curve" needs adjusting up.
- Too low or no operating prioritisation of heat.
  - Enter menu 4.9.1 and increase the time for when heating is to be prioritised.
- "Holiday mode" activated in menu 4.7.
  - Enter menu 4.7 and select "Off".

#### Disturbance in comfort

- External switch for changing the room heating activ- ated.
  - Check any external switches.
- Air in the climate system.
  - Vent the climate system.
- Closed valves to the climate system.
  - Open the valves.
- Incorrectly adjusted flow across the heat pump.
  - Check whether alarm high condenser in (163) or high condenser out (162) is in the alarm log. Follow the instructions for adjusting charge flow.

# High room temperature

- Too high set value on the automatic heating control.
  - Enter menu 1.1 (temperature) and reduce the offset heating curve. If the room temperature is only high in cold weather the curve slope in menu 1.9.1 "heating curve" needs adjusting down.
- External switch for changing the room heating activated.
  - Check any external switches.

## Low system pressure

- Not enough water in the climate system.
  - Top up the water in the climate system.

## The compressor does not start

- There is no heating requirement.
  - The heat pump does not call on heating nor hot water.
- Temperature conditions tripped.
  - Wait until the temperature condition has been re- set.
- Minimum time between compressor starts has not been reached.
  - Wait 30 minutes and check if the compressor has started.
- Alarm tripped.
  - Follow the display instructions.

# Additional heating only

If you are unsuccessful in rectifying the fault and are unable to heat the house, you can, whilst waiting for assistance, continue running the heat pump in "add. heat only". This means that additional heating only is used to heat the house.

# Set the installation to additional heat mode

- 1. Go to menu 4.2 op. mode.
- 2. Mark "add. heat only" using the control knob and then press OK button.

Return to the main menus by pressing the Back button.

# CAUTION

When commissioning without MTH air/water heat pump an alarm communication error may appear in the display.

The alarm is reset if the relevant heat pump is deactivated in menu 5.2.2 ("installed heat pump").

# **Alarm list**

Alarm nr.	Alarm text on the display	Description	May be due to
157	Low lp cooling	Protection against freezing in water HX during cooling operation	■ Low/no water flow
162	High condenser out temperature	Too high temperature out from the condenser. Self-resetting.	■ Low flow during heating operation ■ Too high set temperatures
163	High condenser in temperature	Too high temperature into the condenser. Self-resetting.	■ Temperature generated by another heat source
183	Defrosting in progress	Not an alarm, but an operating status.	■ Set when the heat pump runs the defrosting procedure
220	High pressure alarm	BP4 has been above 4,15MPa 5 times within 60 minutes.	<ul> <li>■ Insufficient air circulation or blocked heat exchanger</li> <li>■ Expansion valve not correctly connected</li> <li>■ Service valve closed</li> <li>■ Defective control board in FDCW</li> <li>■ Low or no flow during heating operation</li> <li>■ Defective circulation pump</li> <li>■ Defective fuse, F(4A)</li> </ul>
224	Fan alarm from heat pump	Deviations in the fan speed in FDCW.	<ul> <li>■ The fan cannot rotate freely</li> <li>■ Defective control board in FDCW</li> <li>■ Defective fan motor</li> <li>■ Control board in FDCW dirty</li> <li>■ Fuse (F2) blown</li> </ul>
228	Failed defrosting	10 aborted defrost due to alarm: 418,419 or 343	■ Too low water flow ■ Too low return temperatur
230	Hot gas alarm	Temperature deviation on the hot gas sensor (Tho-D) twice within 60 minutes or for 60 minutes continuously.	<ul> <li>■ Sensor does not work (see section "Ambient temperature sensor")</li> <li>■ Insufficient air circulation or heat exchanger</li> <li>■ Blocked</li> <li>■ If the fault persists during cooling, there may be an insufficient amount of refrigerant.</li> <li>■ Defective control board in FDCW</li> </ul>
261	High HWX temp	Temperature deviation on the heat exchanger sensor (Tho-R1/R2) five times within 60 minutes or for 60 minutes continuously.	■ Sensor does not work (see section "Disturbances in comfort") ■ Insufficient air circulation or blocked heat exchanger ■ Defective control board in FDCW ■ Too much refrigerant
262	Inv. err.	When IPM (Intelligent power module) displays FO-signal (Fault Output) five times during a 60-minute period.	Can occur when 15V power supply to the inverter PCB is unstable.

# **Disturbance in comfort**

Alarm nr.	Alarm text on the display	Description	May be due to
263	Inv. err.	Voltage from the inverter outside the parameters four times within 30 minutes.	<ul> <li>■ Incoming power supply interference</li> <li>■ Service valve closed</li> <li>■ Insufficient amount of refrigerant</li> <li>■ Compressor fault</li> <li>■ Defective circuit board in FDCW</li> </ul>
265	Inv. err.	Continuous deviation on power transistor for 15 minutes.	■ Defective fan motor ■ Defective circuit board in FDCW
267	Inv. err.	Failed start for compressor	■ Defective circuit board in FDCW ■ Defective control board in FDCW ■ Compressor fault
268	Inv. err.	Overcurrent, Inverter A/F module	■ Sudden power failure
271	Lw otd tmp	Temperature of BT28 below the value that permits operation	■ Cold weather conditions ■ Sensor fault
272	High otd tmp	Temperature of BT28 above the value that permits operation	■ Warm weather conditions ■ Sensor fault
277	Sensor fault from heat pump	Sensor fault, heat exchanger in FDCW (Tho-R).	■ Open circuit or short circuit on sensor input ■ Sensor does not work (see section "Disturbances in comfort") ■ Defective control board in FDCW
278	Sensor fault from heat pump	Sensor fault, outdoor temperature sensor in FDCW (Tho-A).	■ Open circuit or short circuit on sensor input ■ Sensor does not work (see section "Disturbances in comfort") ■ Defective control board in FDCW
279	Sensor fault from heat pump	Sensor fault, hot gas in FDCW (Tho-D).	■ Open circuit or short circuit on sensor input ■ Sensor does not work (see section "Disturbances in comfort") ■ Defective control board in FDCW
294	Incompatible heat pump	Heat pump and indoor module do not work properly together due to technical parameters.	Outdoor module and indoor module are not compatible.
343	Low temp water out	Low water out temperature during cooling or tank defrost operation	■ Too low water flow ■ Too low return temperatur
347	Temp high press	Temporary high pressure alarm	■ No/low water flow ■ Air in water system
403	Sensor fault from PCA 154	Sensor fault, Sensor incoming water in indoor unit (BT3).	■ Open circuit or short circuit on sensor input ■ Sensor does not work (see section "Disturbances in comfort") ■ Defective control board AA23 in indoor unit.

Alarm nr.	Alarm text on the display	Description	May be due to
404	Sensor fault from PCA 154	Sensor fault, Sensor high pressure heating/ low pressure cooling in indoor unit (BP4).	■ Open circuit or short circuit on sensor input ■ Sensor does not work (see section "Disturbances in comfort") ■ Defective control board AA23 in indoor unit.
412	Sensor fault from PCA 154	Sensor fault, Sensor outgoing water in indoor unit (BT12).	■ Open circuit or short circuit on sensor input ■ Sensor does not work (see section "Disturbances in comfort") ■ Defective control board AA23 in indoor unit.
415	Sensor fault from PCA 154	Sensor fault, Sensor fluid pipe in indoor unit (BT15).	■ Open circuit or short circuit on sensor input ■ Sensor does not work (see section "Disturbances in comfort") ■ Defective control board AA23 in indoor unit.
418	Low temp water out	Anti-freeze protection water heat exchanger during defrost.	■ Too low water flow
419	Freeze prot. exch. defr.	Anti-freeze protection water heat exchanger during defrost.	■ Too low water return temperature

# **Accessories**

**EMK300M** 

Part no. MCD291A013

EMK500M

Part no. MCD291A014

**Charge pump CPD 11** 

Charge pump for heat pump

CPD 11-25M/65

Part no. MCD291A016

CPD 11-25M/75

Part no. MCD291A017

External electric additional heat ELK

These accessories may require accessories card AXC 30 (step controlled addition).

ELK 9M

Immersion heater 9 kW 3 x 400 V Part no. MCD291A015

Hot water control

VST 05M

Reversing valve, Cu pipe Ø22 Max heat pump size 8 kW Part no. MCD291A018

**VST 11M** 

Reversing valve, Cu pipe Ø28 (Max recommended output, 17 kW) Part no. MCD291A019

VST 20M

Reversing valve, Cu pipe Ø35 (Max recommended output, 40 kW) Part no. MCD291A020

Reversing valve for cooling

VCC 05M

Part no. MCD291A021

VCC 11M

Part no. MCD291A022

**Electrical model** 

**ME 1030M** 

Part no. MCD291A029

**Anode** 

Anode for tank

Anode T300

Part no. MCD291A024

Anode T500

Part no. MCD291A025

Anode M300

Part no. MCD291A026

Anode M500


Part no. MCD291A027

Relay HR10M

Part no. MCD291A028


# **Technical data**

# **Dimensions and setting-out coordinates**

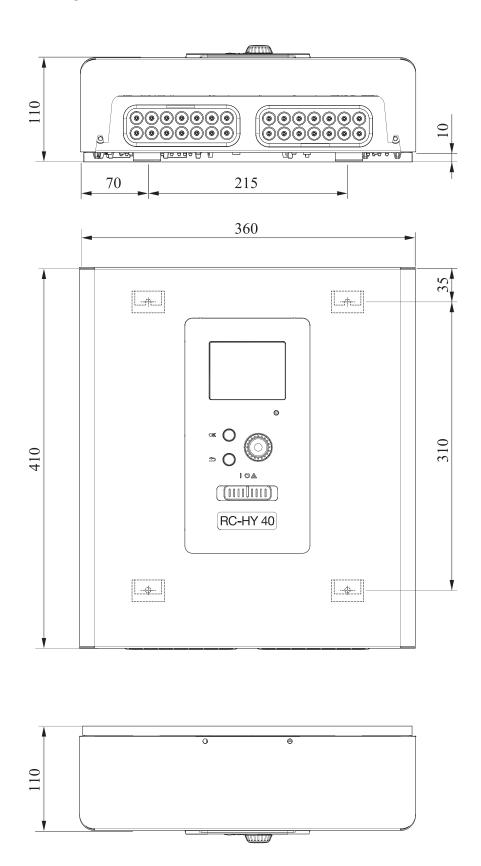



# **Electrical circuit diagram**

# HSB60

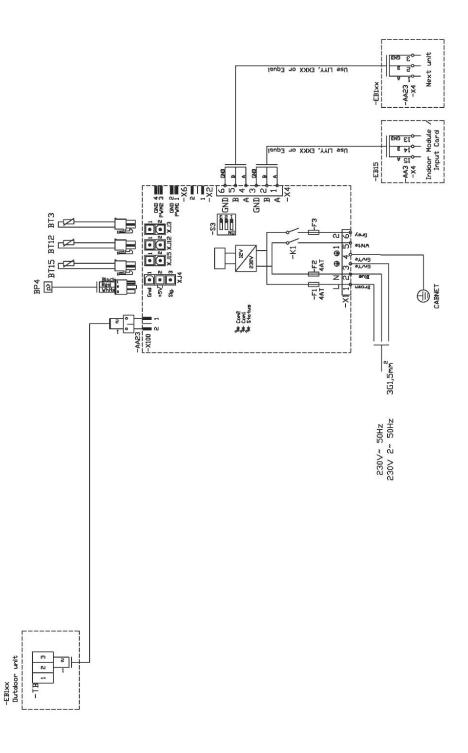


HMA60-S sheet 1

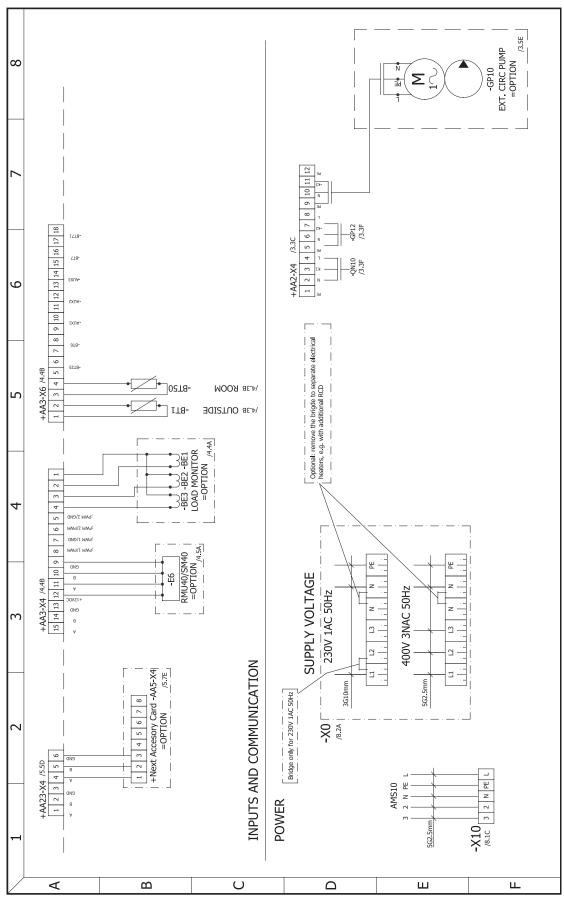


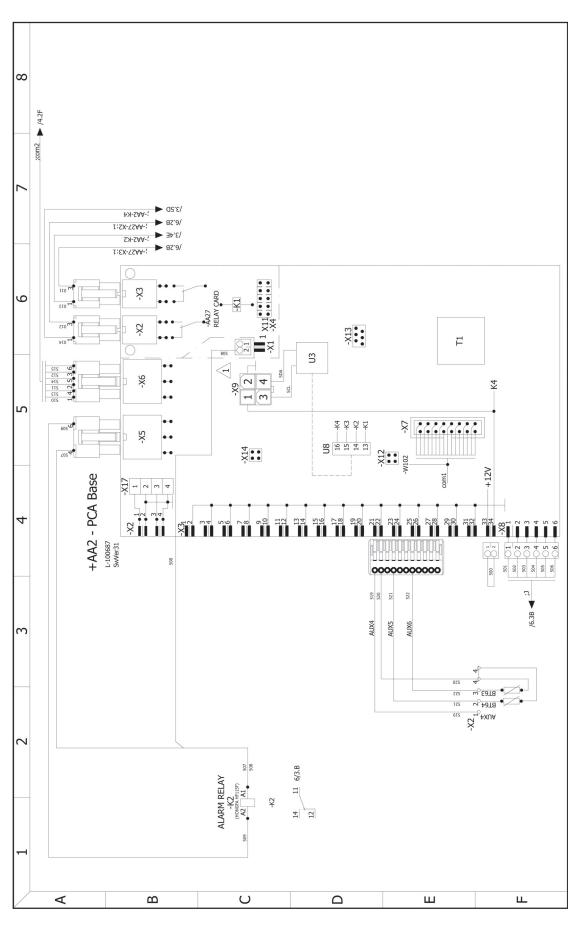


sheet 3

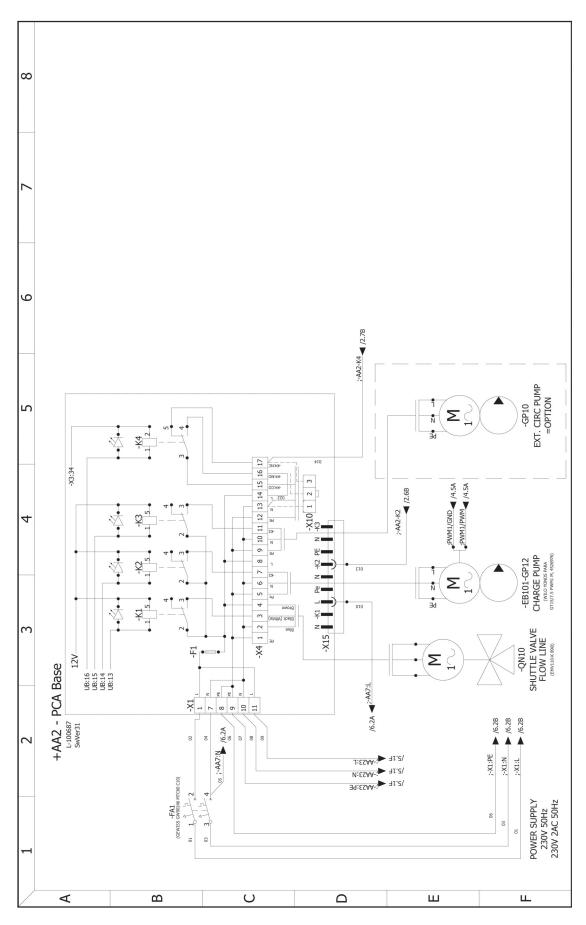



sheet 4

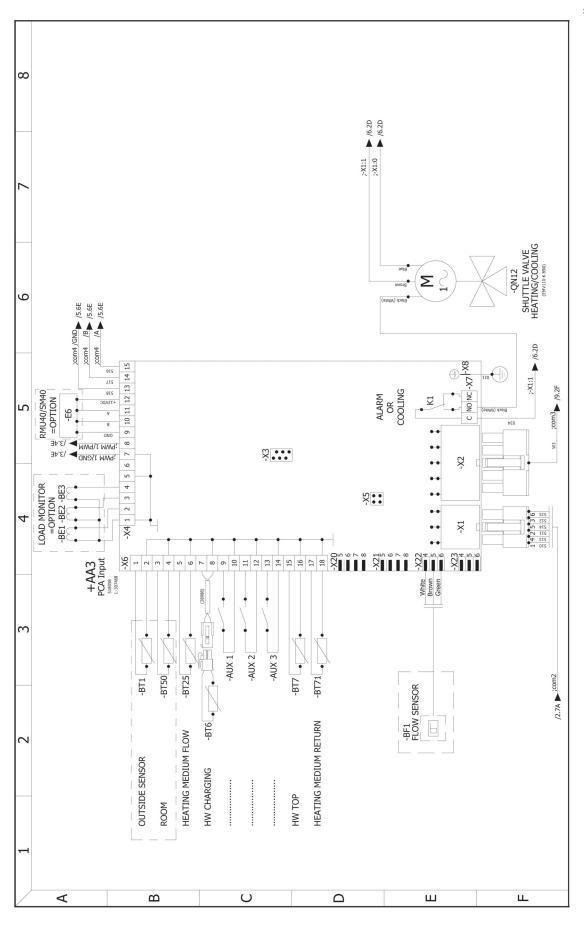


sheet 5

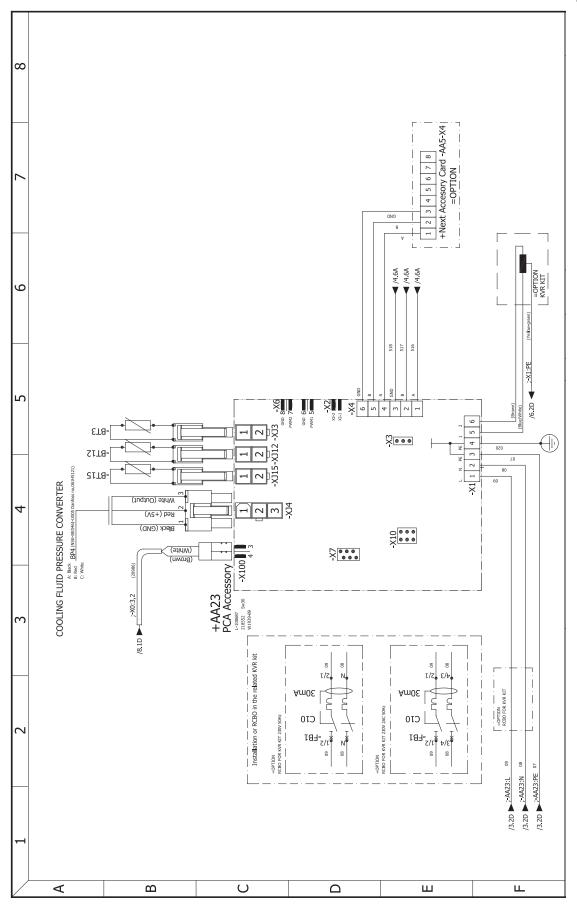


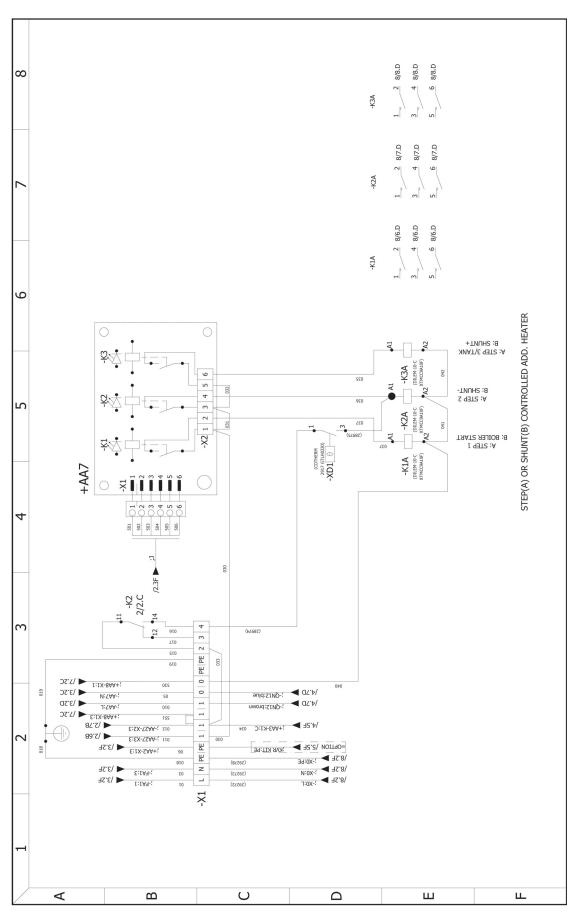


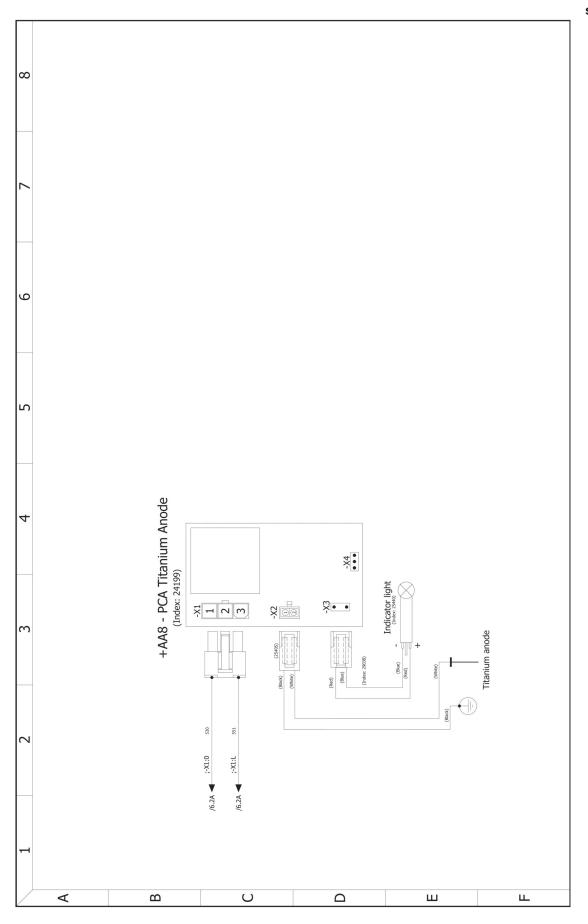

sheet 8

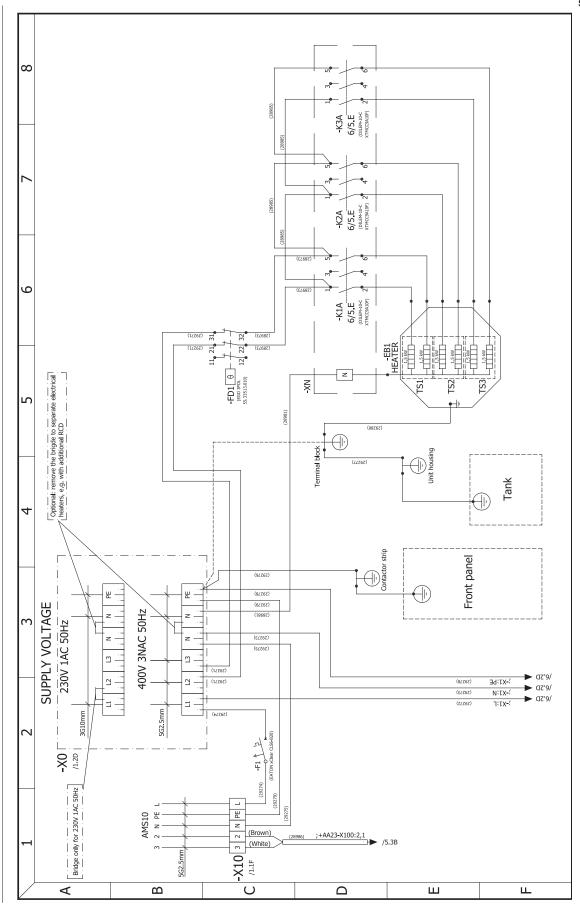

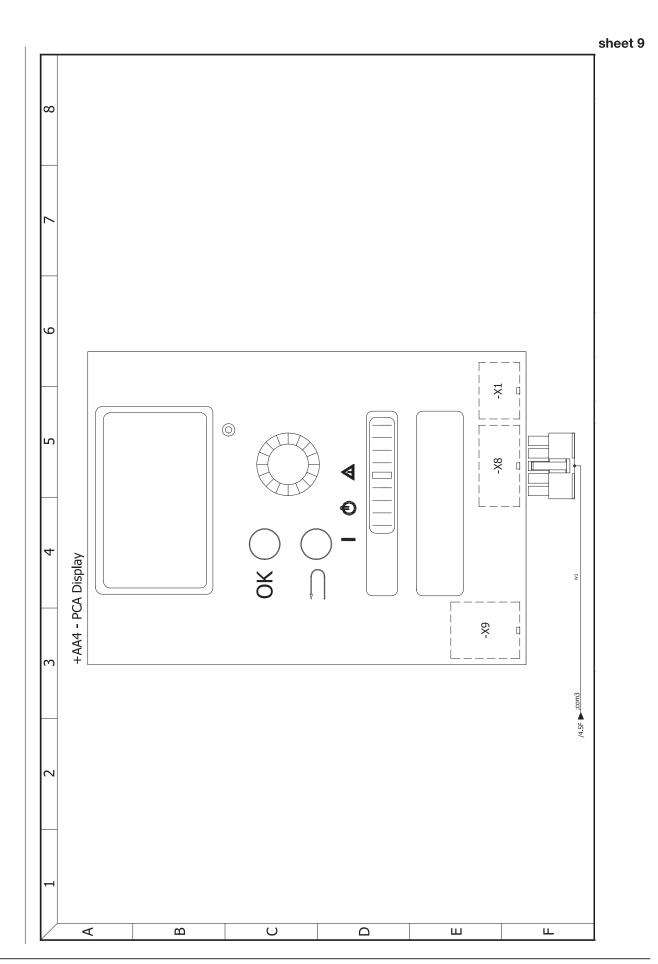

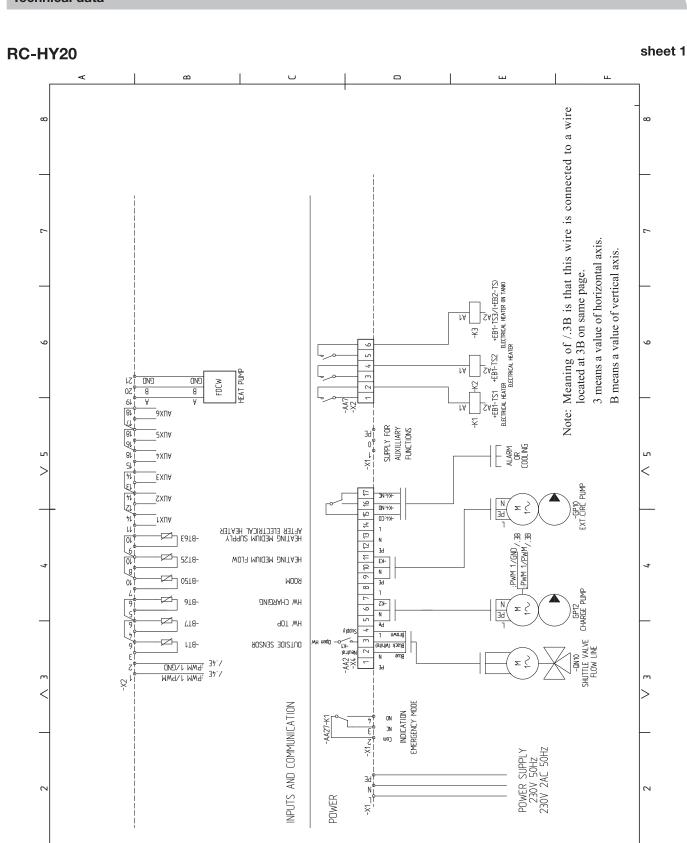



0


ш


A

В

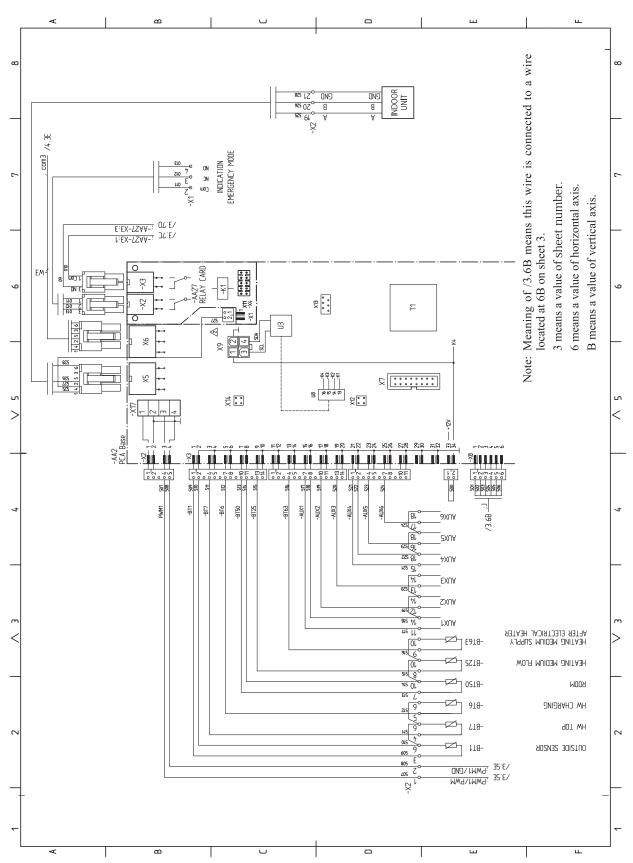

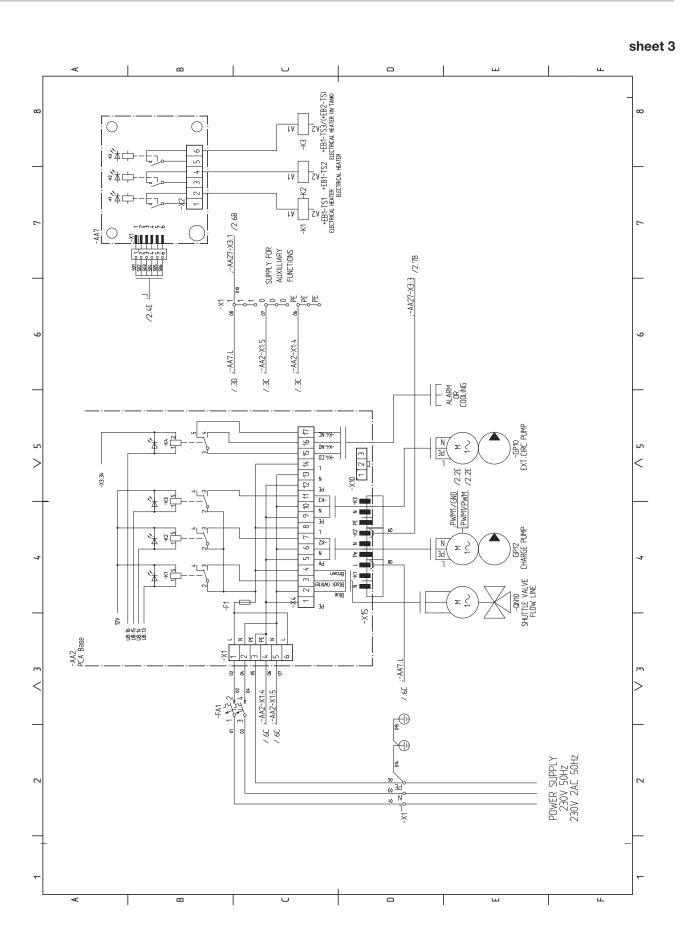

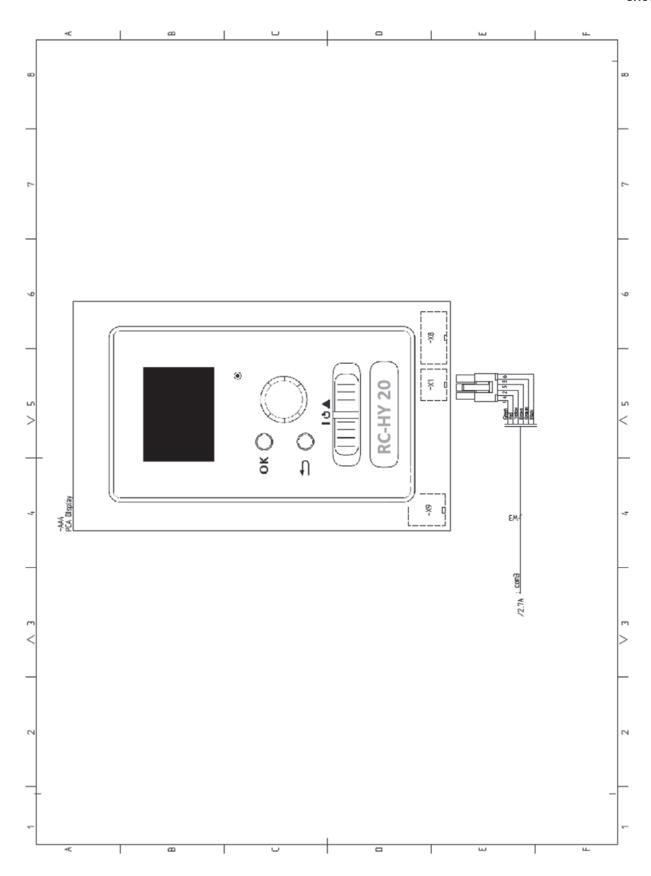

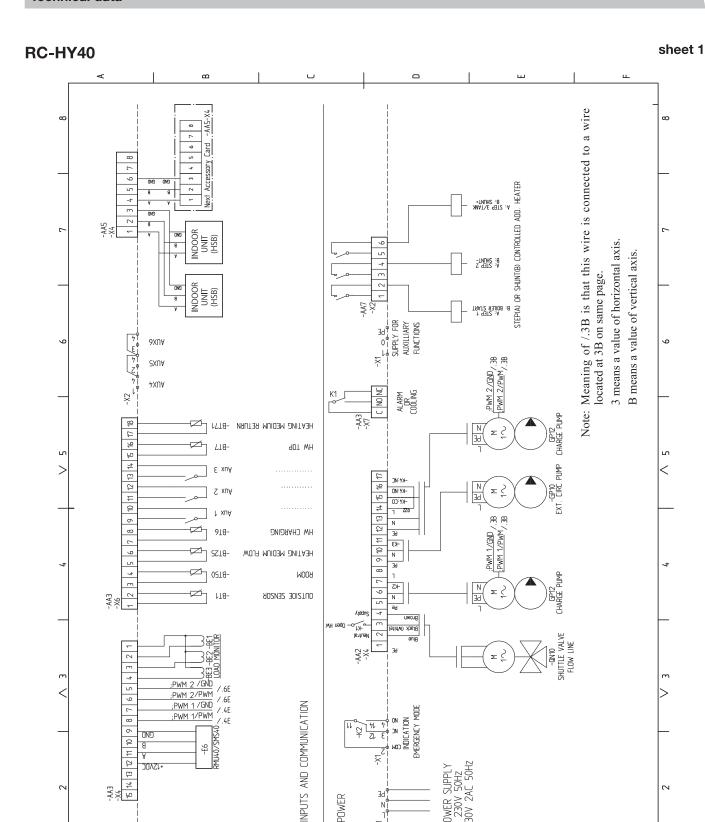

POWER

POWER SUPPLY 230V 50Hz 230V 2AC 50Hz


ш


2


JOAZL


В


A

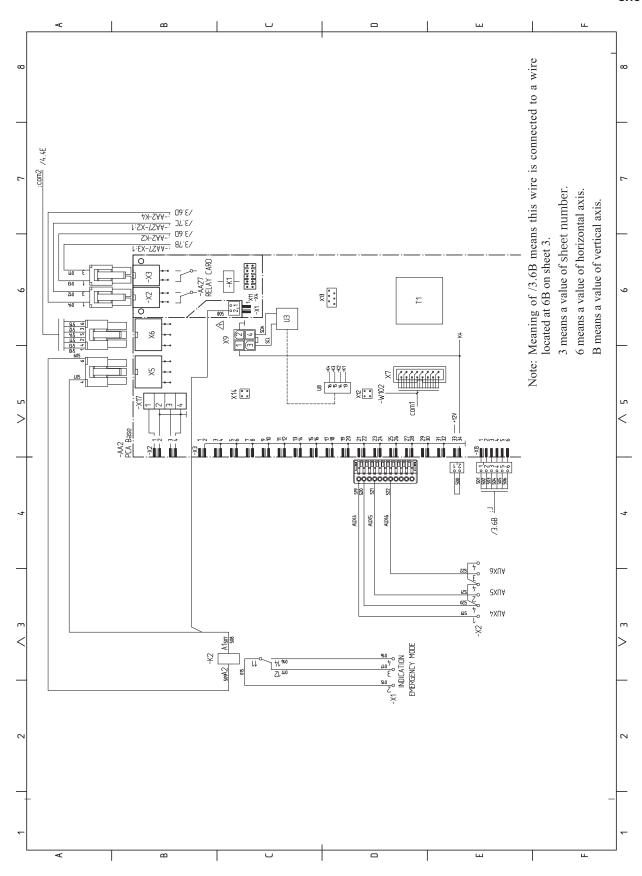

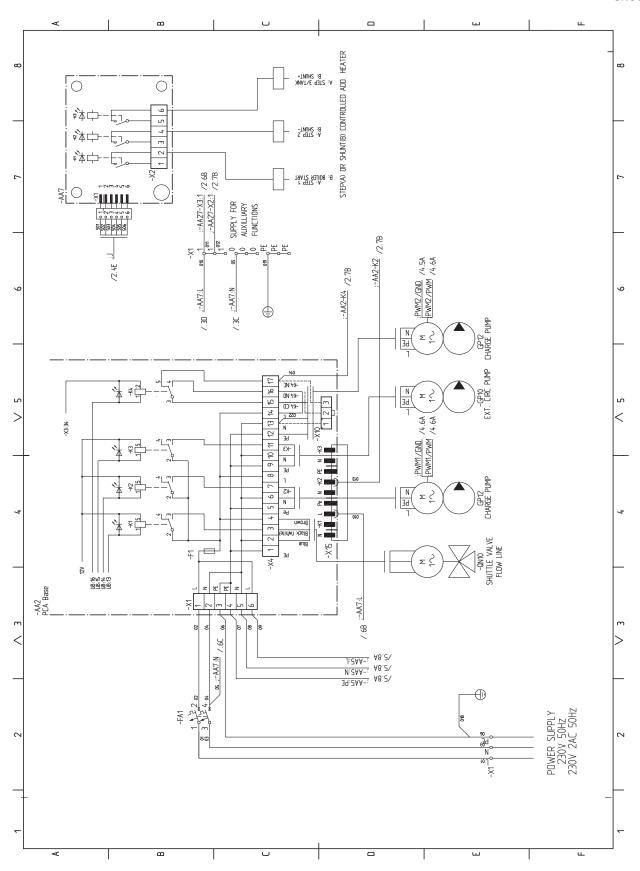

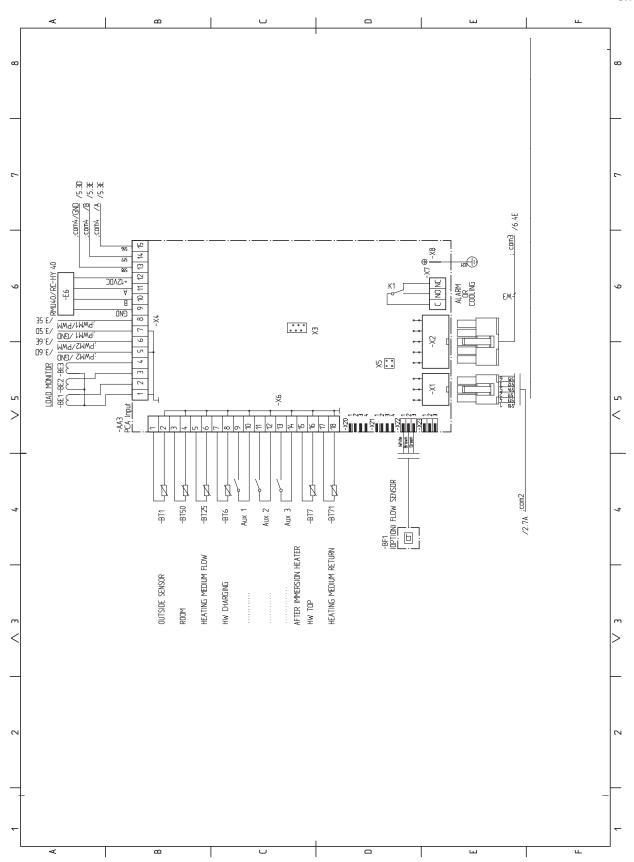

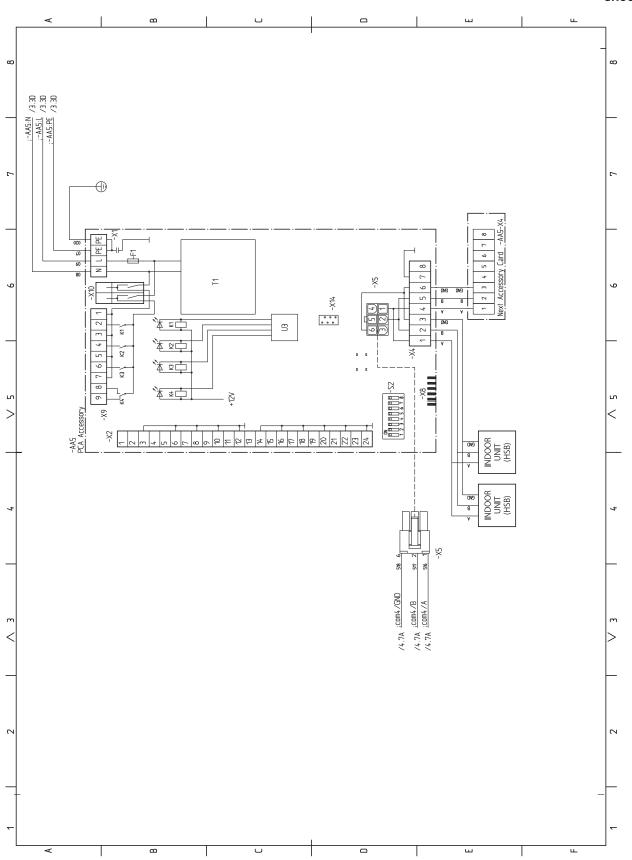

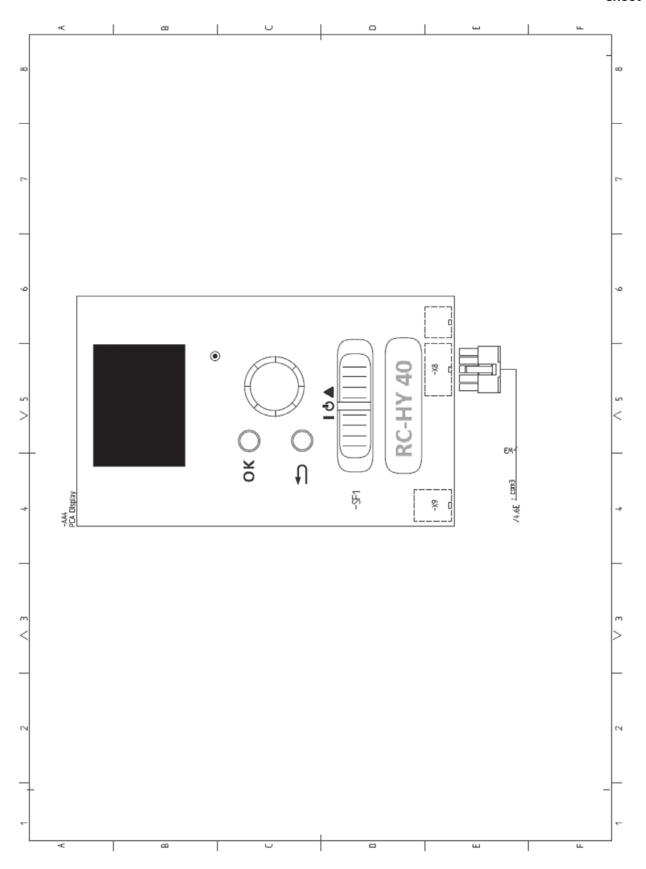



#### MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo, 100-8332, Japan http://www.mhi-mth.co.jp/

### MITSUBISHI HEAVY INDUSTRIES AIR-CONDITIONING EUROPE, LTD.

5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom

Tel: +44-333-207-4072 Fax: +44-333-207-4089 http://www.mhiae.com

### MHIAE SERVICES B.V.

 $(Wholly-owned\ subsidiary\ of\ MITSUBISHI\ HEAVY\ INDUSTRIES\ AIR-CONDITIONING\ EUROPE,\ LTD.)$ 

Herikerbergweg 238, Luna ArenA, 1101 CM Amsterdam, Netherlands P.O.Box 23393 1100 DW Amsterdam, Netherlands

Tel: +31-20-406-4535

http://www.mhiaeservices.com/