


REMOTE CONTROL RC-EX3D / RC-EXZ3D

USER'S MANUAL

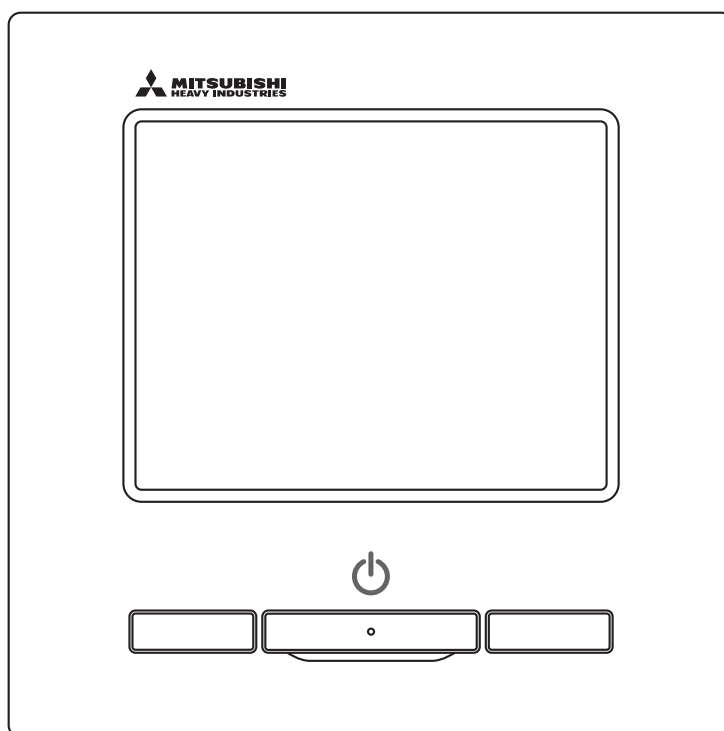

Thank you very much for your purchasing the REMOTE CONTROL for our packaged air conditioner.

This user's manual describes cautions for safety. Please read this manual carefully before use in order to operate the unit properly.

Keep this manual, after reading, at a safe place where you can consult it whenever it is necessary.

When the ownership of the unit is changed, please be sure to transfer this manual and the "Installation Manual" to a new owner.

It is not recommended for a user to install or move the unit by the user's own discretion. (Safety or functions may not be assured.)

Contents

1. Before you use	2
Safety precautions	2
Precautions for waste disposal	3
Unit specifications	3
Names and functions of sections on the R/C	4
Menu item	6
2. Menu items	8
Run	8
Stop	8
Change operation mode	9
Change set temp	9
Change flap direction	10
Change the fan speed	13
Zone ON/OFF operation	13
Zone name setting	14
F1/F2 switch operation	15
Anti draft ON/OFF operation	16
High power operation	17
Energy-saving operation	18
3. Quick reference of menu items ...	19
Quick reference of menu items	19
Restrictions on the sub R/C	21
Operations on menu screens	22
Cautions for each setting screen	23
4. Settings and operations	24
Energy-saving setting	24
Individual flap control	31
Anti draft setting	35
Ventilation operation	37
Initial settings	38
Timer	42
Home leave mode	55
Registering favorite settings	58
Favorite setting operation	59
Administrator settings	60
Silent mode control	75
Select the language	76
Auto anti draft ctl	77
Wireless interface setting	79
Control mode & Eco level	81
Filter sign reset	82
5. Maintenance of unit and LCD	83
Maintenance of unit and LCD	83
6. Useful information	84
Contact company & Error display	84
7. Notice of inspection date	85
8. Message display	85
9. After-sale service	93

Note

Please turn on the power switch 6 hours before operation to protect the air conditioner (the crank case heater is conducted and the compressor is heated).



Also, be sure not to turn off the power switch (the crank case heater is conducted and the compressor is heated during stop of the compressor. It protect the fault of the compressor caused by liquid refrigerant stagnation).

1. Before you use





Safety precautions

- Please read the precautions written here carefully to operate the unit properly.

You are required to observe these fully because every item of these instructions is important for safety.

 WARNING	Failure to follow these instructions may result in serious consequences such as death, severe injury, etc.
 CAUTION	Failure to follow these instructions may cause injury, property damage or, serious consequences depending on.

- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
	Absolutely keep water away.		Absolutely keep wet hands away.

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

- **Electrical wiring work must be implemented only by qualified specialists.**

WARNING



Consult your dealer or a professional contractor to install the unit.

Improper installation made on your own may cause electric shocks, fire or dropping of the unit.



**Consult your dealer when moving, disassembling or repairing the unit.
Never modify the unit.**

Improper handling may result in injury, electric shocks, fire, etc.



Avoid using combustible substances (hair spray, insecticide, etc) near the unit.

Do not use benzene or paint thinner to clean the unit.

It could cause cracks, electric shocks or fire.



Stop operation under abnormal situation.

If continued, it could result in break-down, electric shocks, fire, etc.

If any abnormal condition (burnt odor etc.) occurs, stop operation, turn off the power switch and consult your dealer.

CAUTION



Do not use or let use the unit or remote control as play equipment.

Improper operations could cause ill health or health disorder.



Never disassemble the remote control.

If you touch internal parts accidentally, you could get electric shocks or cause trouble. Consult your dealer when it is necessary to inspect its interior.



Do not wash the remote control with water or liquid.

It could cause electric shocks, fire or break-down.



Do not touch electric parts or operate buttons or screens with wet hands.

It could cause electric shocks, fire or break-down.



Do not dispose the remote control by yourself.

It could destruct the environment. Ask your dealer when it is necessary to dispose the remote control.

Note



The remote control should not be installed where it is exposed to direct sunlight or the ambient temperatures become higher than 40°C or lower than 0°C.

It could cause deformation, discoloration or break-down.



Do not use benzene, paint thinner, wipes etc. to clean the remote control.

It could discolor or break-down the remote control. Wipe it with a piece of cloth which is squeezed tightly after wetting with diluted neutral detergent. Finish up the cleaning by wiping with a piece of dry cloth.



Do not pull or twist the cable of the remote control.

It could cause break-down.



Do not tap the remote control buttons or screen with pointed objects.

It could damage or cause break-down.

Precautions for waste disposal




Your Air Conditioning product may be marked with this symbol. It means that waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) should not be mixed with general household waste. Air conditioners should be treated at an authorized treatment facility for re-use, recycling and recovery and not be disposed of in the municipal waste stream. Please contact the installer or local authority for more information.

Unit specifications

Item	Description
Product dimensions	120 (W) x 120 (H) x 19 (D) mm (not including protruded section)
Weight	0.20 kg
Power supply	DC 18 V
Power consumption	0.6 W
Usage environment	Temperature: 0 to 40 °C
Material	Casing: ABS

Names and functions of sections on the R/C (Operating section)

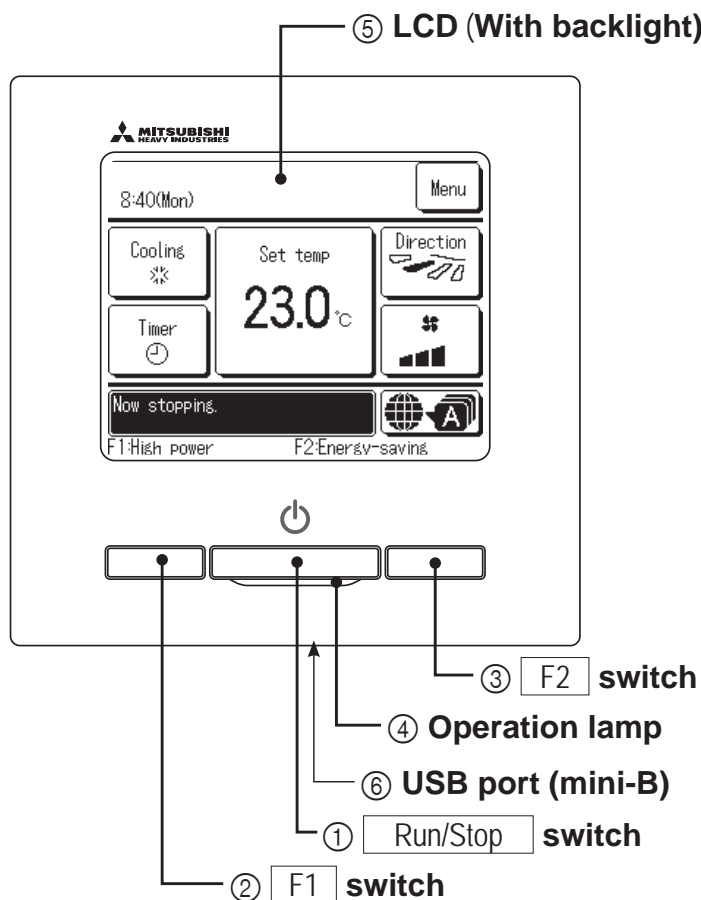

Touch panel system, which is operated by tapping the LCD screen with a finger, is employed for any operations other than the ① Run/Stop, ② F1 ③ F2 switches.

① Run/Stop switch

One push on the button starts operation and another push stops operation. (☞ page 8)

② F1 switch ③ F2 switch

This switch starts operation that is set in F1/F2 function setting (☞ page 72).
(☞ page 15)

④ Operation lamp

This lamp lights in green (yellow-green) during operation. It changes to red (orange) if any error occurs.
Operation lamp luminance can be changed.
(☞ page 42)

⑤ LCD (With backlight)

A tap on the LCD lights the backlight.
The backlight turns off automatically if there is no operation for certain period of time.
Lighting period of the backlight lighting can be

changed. (☞ page 41)

If the backlight is ON setting, when the screen is tapped while the backlight is turned off, the backlight only is turned on. (Operations with switches ①, ② and ③ are excluded.)

⑥ USB port


USB connector (mini-B) allows connecting to a personal computer.
For operating methods, refer to the instruction manual attached to the software for personal computer (remote control utility software).

Note

- When connecting to a personal computer, do not connect simultaneously with other USB devices.
Please be sure to connect to the computer directly, without going through a hub, etc.

Names and functions of sections on the R/C (Display)

*All icons are shown for the sake of explanation.

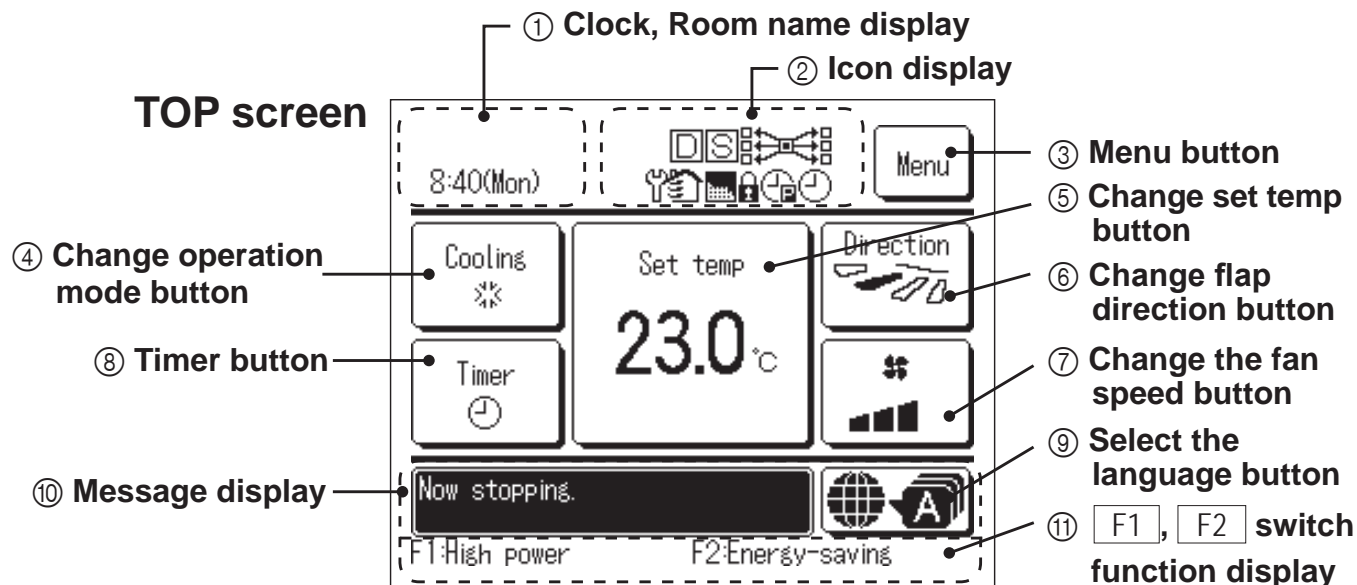



① Clock, Room name display


Displays the current time (page 38) and the room name (page 67).


② Icon display


Each icon is displayed when one of following settings is going on.


 When the demand control is effective.


 When setting is made from the sub R/C. (page 21)


 When the central control (Optional) is running.


 When the periodical inspection is necessary. (page 85)

 During the ventilation operation. (page 37)

 When "filter sign" is up. (page 82)

 When the Permission/Prohibition setting is made. (page 61)

 When the peak-cut timer is set. (page 25)

 When the weekly timer is set. (page 50)

③ Menu button

When setting or changing other than the following ④-⑧, tap the menu button. Then menu items are displayed, select one and set.

④ Change operation mode button (page 9)

Displays the operation mode which is selected currently. Tap this button to change the operation mode.

⑤ Change set temp button (page 9)

Displays the temperature which is set currently. Tap this button to change the set temperature.

⑥ Change flap direction button (page 10)

Displays the flap direction which is selected currently. When the 3D auto flow operation is enabled, 3D auto display will appear. Tap this button to change the flap direction.

⑦ Change the fan speed button (page 13)

Displays the fan speed which is selected currently. Tap this button to change the fan speed.

⑧ Timer button (page 42)

Displays simplified contents of the timer which is set currently.
(When two or more timers are set, contents of the timer which will be operated immediately after is displayed.)
Tap this button to set the timer.

⑨ Select the language button

Select a language to be displayed on the R/C.

⑩ Message display

Status of air conditioner operation and messages of the R/C operations etc. are displayed.

⑪ F1, F2 switch function Display

Displays the function that is set for each F1, F2 switch.

The function for these switches can be changed in F1/F2 function setting (page 72)


Menu item

Main menu		
Basic operation		
Run		8
Stop.....		8
Change operation mode		9
Change set temp		9
Change flap direction		10
Change the fan speed		13
Zone ON/OFF operation		13
Zone name setting.....		14
F1, F2 switch operation.....		15
Anti draft ON/OFF operation		16
High power operation		17
Energy-saving operation		18
Silent mode control		75
Useful functions		
Individual flap control.....		31
Anti draft setting.....		35
Auto anti draft ctl		77
Timer		42
Set ON timer by hour		44
Set OFF timer by hour		46
Set ON timer by clock.....		47
Set OFF timer by clock		49
Weekly timer		50
Confirm		54
Favorite setting		58
Home leave mode.....		55
Ventilation operation		37
Select the language		76
Silent mode control		75
Wireless interface setting		79
Control mode & Eco level.....		81
Energy-saving setting		
Sleep timer		24
Peak-cut timer		25
Automatic temp set back		28
Motion sensor control		29
Filter		
Filter sign reset		82
User setting		
Initial settings		38
Clock setting		38
Date & time display		39
Summer time		40
Contrast		40
Backlight		41
Controller sound		41
Operation lamp luminance		42
Administrator settings		60
Permission/Prohibition setting		61
Outdoor unit silent mode timer		62
Setting temp range		63
Temp increment setting		65
Set temp display		65
R/C display setting		66
Change administrator password		71
F1/F2 function setting		72
Refrigerant leak detector setting		73

Main menu	
Service setting	
Installation settings	
Installation date	Please refer to the installation manual.
Company information	
Test run	
Static pressure adjustment	
Change auto-address	
Address setting of main IU	
IU back-up function	
Motion sensor setting	
Remote controller alarm sound setting	
Auto anti draft control setting	
UV-C drain setting	
R/C function settings	
Main/Sub of R/C	Please refer to the installation manual.
Return air temp	
R/C sensor	
R/C sensor adjustment	
Operation mode	
°C / °F	
Fan speed	
External input	
Upper/lower flap control	
Left/right flap control	
Ventilation setting	
Auto-restart	
Auto temp setting	
Auto fan speed	
IU settings	
Fan speed setting	Please refer to the installation manual.
Filter sign	
External input 1	
External input 1 signal	
External input 2	
External input 2 signal	
Heating thermo-OFF temp adjustment	
Return temperature adjustment	
Fan control in cooling thermo-OFF	
Fan control in heating thermo-OFF	
Anti-frost temp	
Anti-frost control	
Drain pump operation	
Keep fan operating after cooling is stopped	
Keep fan operating after heating is stopped	
Intermittent fan operation in heating	
Fan circulator operation	
Control pressure adjust	
Auto operation mode	
Thermo. rule setting	
Auto fan speed control	
IU overload alarm	
External output setting	
Service & Maintenance	
IU address	Please refer to the installation manual.
Next service date	
Operation data	
Error display	
Saving IU settings	
Special settings	
Indoor unit capacity display	
Safety system maintenance	
UV-C drain service setting	
Contact company	
Contact company	84

2. Menu items


Run

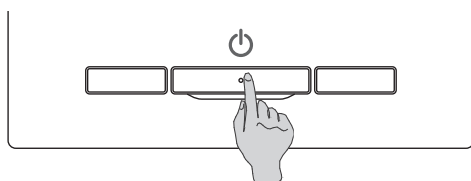

Push the **Run/Stop** switch.


Operation lamp (green) lights and operation starts.

Stop

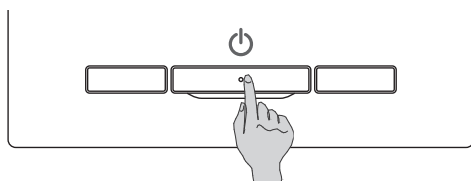

Press the **Run/Stop** switch while the unit is in operation.

The operation lamp turns off and the operation stops.

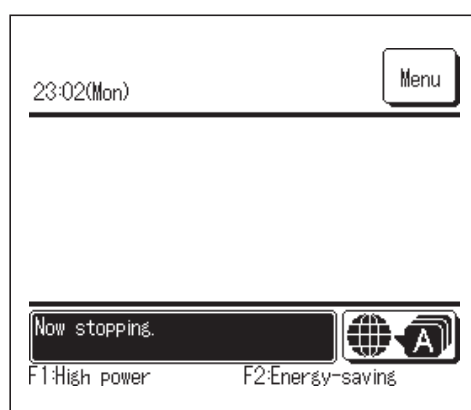

When the operation stops, all operation buttons on the screen turn off.

When the set lighting time of backlight (☞page 41) is counted up, the backlight turns off.

When the screen is tapped, the backlight lights, and all operation buttons are displayed.

Note

- Do not shut down the power supply immediately after the stop of operation. It should be waited for more than 5 minutes till the residual operation time of drain motor is counted up. Otherwise, it could cause water leakage or breakdown.


Advice

- A message "Invalid request" may be displayed when a button is pushed. This is not a fault but it is because the button operation is set to the "Disable". (☞page 61)
- The unit starts to operate initially with the following settings after the power on. These settings can be changed as desired.


Central control OFF
Operation mode With auto mode: Auto cooling
 Without auto mode: Cooling
Set temp 23.0°C
Fan speed 3-speed
Flap direction When cooling: position 2, when heating: position 3 (☞page 10)

*When an FDK with a left/right flap is connected, left/right flap direction: center, 3D AUTO: disabled
- In the following cases, a message "Operation mode is invalid." is displayed and it changes to the fan operation, because operation modes are not matched.
 - ① When Heating (including auto heating) is selected for Operation mode while using an OU for cooling only.
 - ② When Heating is selected for Operation mode while controlling multiple units including units allowed for both cooling and heating and units for cooling only.
 - ③ When different operation modes are selected between IUs which are connected to a OU that do not allow mixed operation of cooling and heating.

Change operation mode

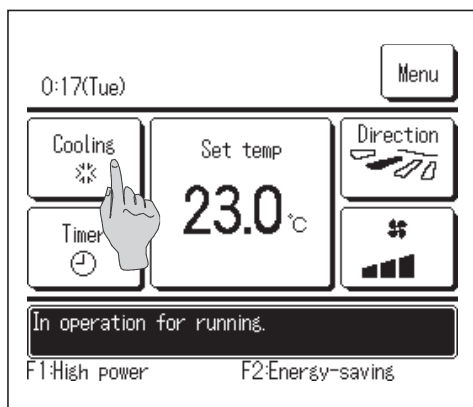

1 Tap the **Change operation mode** button on the TOP screen.

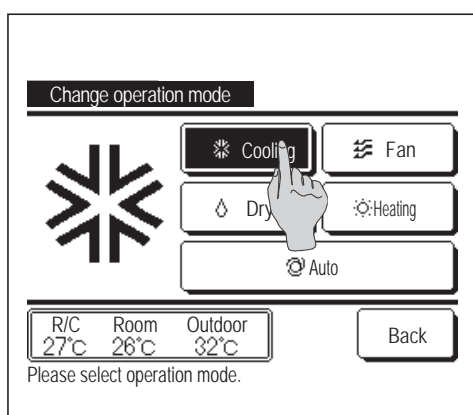

2 When the Change operation mode screen is displayed, tap the button of desired mode.

The operation mode changes, and the display returns to the TOP screen.

Icons displayed have the following meanings.



Cooling



Fan



Dry



Heating



Auto


■ Operation modes which cannot be selected depending on combinations of IU and OU are not displayed.

■ When the Auto is selected, the cooling and heating switching operation is performed automatically according to indoor and outdoor temperatures.


Advice



- If the air conditioner is a multi-type building air conditioning system, cooling/heating functions cannot be mixed for each of the connected IUs in certain cases. (See page 86) At that time, the fan activates, and "Operation mode is invalid." will be displayed.

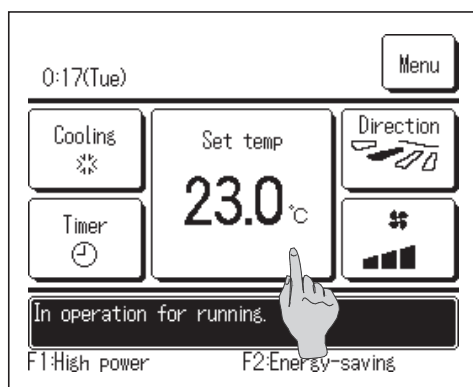Change set temp

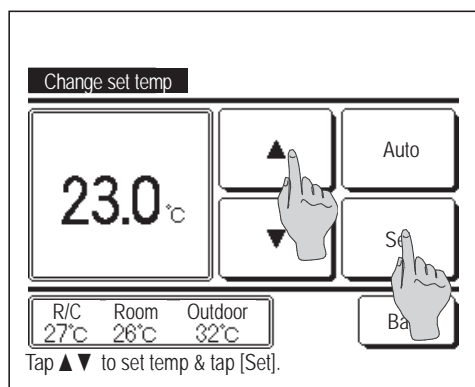

1 Tap the **Change set temp** button on the TOP screen.



2 When the Change set temp screen is displayed, select the temperature as desired with using   buttons.

3 After selecting the set temp, tap the  button. The display returns to the TOP screen.

■ For allowable temperature setting ranges, refer to the range setting of set temp (page 63).

■ Reference set temp




Cooling ... 26 to 28°C



Dry ... 24 to 26°C

Heating ... 20 to 24°C

Fan ... Setting temp is not required.

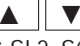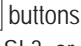■ If the  is selected for the set temp, the set temp display shows "0".


Temperature can be adjusted higher or lower with using   buttons. Note that  is not displayed and cannot be set when SC-SL2, SC-SL3, or SC-SL4 is connected.

■ If the  button is tapped without tapping the  button, the selected set temp is invalidated and the display returns to the TOP screen.

Advice

- If Power control for Motion sensor control is set to Enable, a temperature different from the set temperature may be displayed. (page 29)


Change flap direction

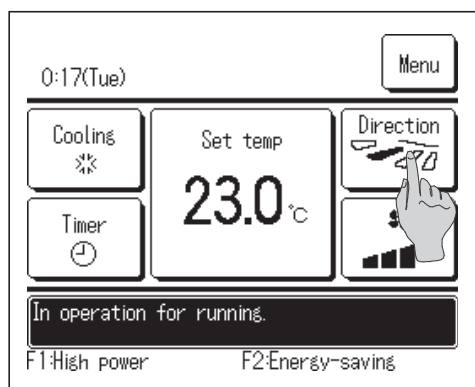


1 Tap the  button on the TOP screen.


When an FDK with a left/right flap is not connected: 

When one or more FDKs with a left/right flap are connected: 

■ If all the connected IUs are duct connected units, the  button will not be displayed.

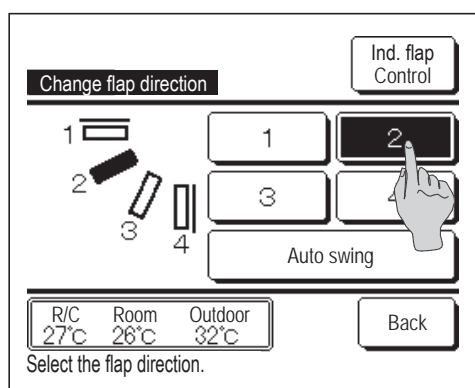



2 When the Change flap direction screen is displayed, tap the button of desired flap direction.


To swing the flap, tap the  button.

To fix the flap position, tap one of  to  buttons.

After selecting the flap direction,


When an FDK with a left/ right flap is not connected, the display returns to the TOP screen. ()

When an FDK with a left/right flap is connected, the display returns to the Select flap screen. ()

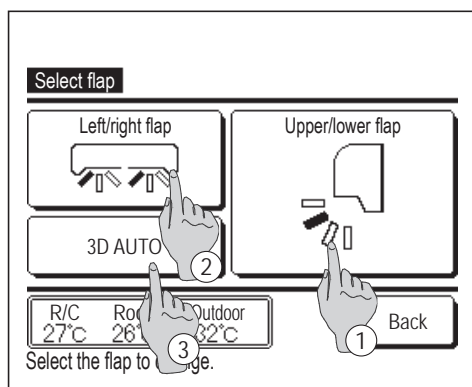


3 When one or more FDKs with a left/right flap are connected, the Select flap screen is displayed. Select the desired flap direction.

- ① To change the up/down flap direction, tap the **Upper/lower flap** button. The Change flap direction screen for the up/down flap is displayed. (➡2)
- ② To change the left/right flap direction, tap the **Left/right flap** button. The Change flap direction screen for the left/right flap is displayed. (➡4)
- ③ The 3D auto flow operation automatically controls the fan speed and flap direction to efficiently condition the air of the entire room. To switch to the 3D auto flow operation, tap **3D AUTO** to enable the operation. To disable the 3D auto flow operation, tap the **3D AUTO** again. The flap direction returns to the direction that was set before the 3D auto flow operation was enabled. The 3D auto flow operation will also be disabled when you change the up/down or left/right flap direction during the 3D auto flow operation.

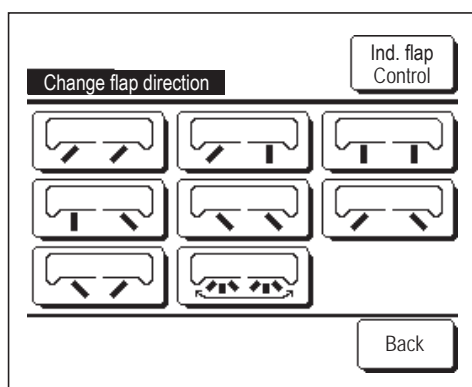

4 Tap the desired flap direction. After selecting the flap direction, the display returns to the Select flap screen. (➡1)

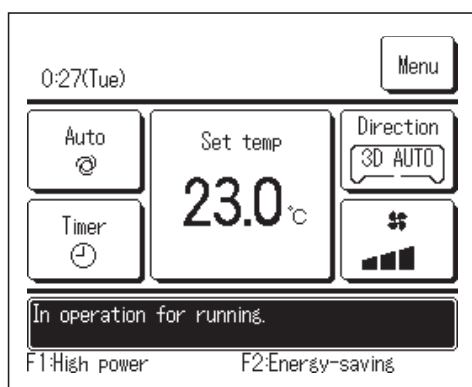

5 When the 3D auto flow operation is enabled, "3D AUTO" is displayed on the **Change flap direction** button, as shown on the left.

-
- When multiple IUs are connected to the remote control for a mixed environment consisting of FDKs with a left/right flap and IUs without a left/right flap, enabling the 3D auto flow operation will set the models without a left/right flap to a flap position set before the 3D auto flow operation was started.
 - Since the flap is controlled automatically in the following operation, it may differ from the display on the R/C.
 - When the room temperature is higher than the set temp (In case of the heating operation)
 - When the "In operation for heating standby." or "In operation for defrosting." is displayed (In case of the heating operation).
Cool air is blown horizontally not to blow directly to human body.
 - In a high humidity environment (during cooling operation)
 - When you select Auto swing while the Anti draft setting (☞page 35) is enabled, the flap will not swing and be set at flap position **1**.
 - Changing the left/right flap direction and 3D auto flow operation cannot be performed from the SC-SL2, SC-SL3, or SC-SL4. Also note that 3D auto flow operation will not be disabled when you change the flap direction from the SC-SL2, SC-SL3, or SC-SL4 during a 3D auto flow operation.


Advice

- If the humidity around the IU is high, the flap position may differ from the set position in order to prevent condensation forming on the IU. In that case, the message "During condensation prevention control." will be displayed. (☞page 87)
When the humidity drops, the flap returns to its original position.


Note

- Do not manually move the flaps or panel with anti draft by force. It could damage these flaps and panels.
- Do not blow air downward for a long period of time during the cooling operation. Condensation may be generated and water may drip from the side panel. (In case of Ceiling suspended type)
- For FDKs with a left/right flap, it is recommended that the flap should be set toward the right side when there is a wall on the left, or set toward the left side when there is a wall on the right. For more information, refer to the Notes in the Individual flap control section (☞page 34).

Change the fan speed

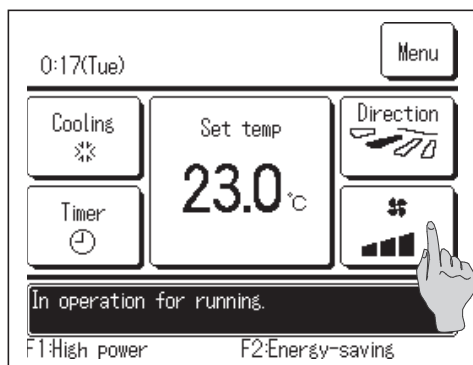

1 Tap the **Change the fan speed** button on the TOP screen.

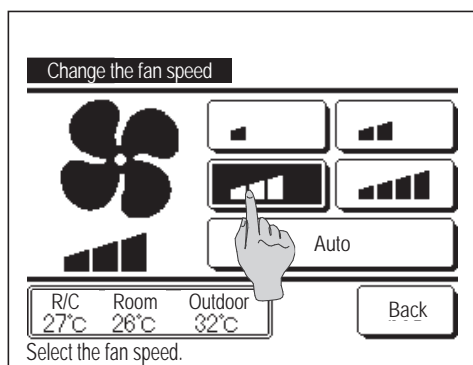

2 When the Change the fan speed screen is displayed, tap the button of desired fan speed.

After setting the fan speed, the display returns to the TOP screen.

- Fan speeds which can be set vary depending on the models of IU.
- When the **Auto** is selected, the fan speed is changed automatically depending on the capacity.


Note that **Auto** is not displayed and cannot be set when SC-SL2 or SC-SL3 is connected.

Advice


- If the humidity around the IU is high, the fan speed may differ from the set fan speed in order to prevent condensation forming on the IU. In that case, the message "During condensation prevention control." will be displayed. (☞page 87)
When the humidity drops, the fan speed returns to its original speed.

Zone ON/OFF operation (for zone control)

The "Zones" button appears on the TOP screen when zone settings were performed by **Menu** ⇒ **Service setting** ⇒ **Installation setting** ⇒ **Duct unit setting** ⇒ **Zone setting**.

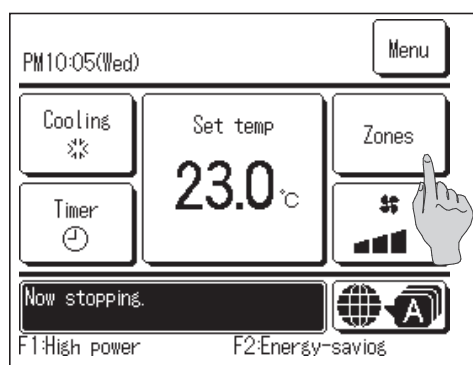

Tap the **Zones** button.

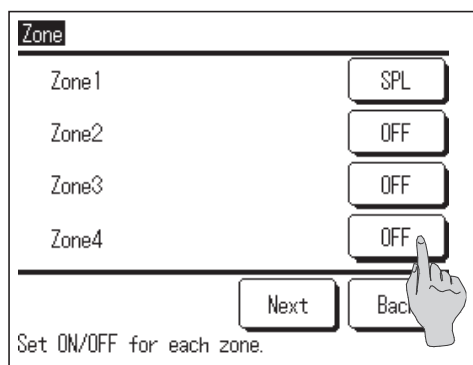

Sets **ON** / **OFF** (OPEN/CLOSE) for each zone.

Depending on IU model and installation settings, **Next** button will appear and you can set up to 8 zones.




*1: If there is no common zone, the spill zone is OFF, and one or more other zone are OFF, the spill zone will open automatically and **SPL** will be displayed.

Advice

Common zone: A zone in which a damper is not installed. Spill zone: A zone in which a damper open automatically.

Zone name setting (for zone control)

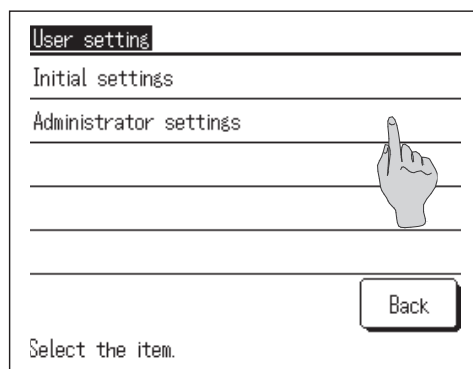


The screen shows a menu with the following options: **User setting**, Initial settings, Administrator settings, and a blank line. A hand icon is pointing at the Administrator settings option. At the bottom right is a **Back** button. The text "Select the item." is at the bottom left.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings**.


The administrator password input screen is displayed.

Enter the administrator password.

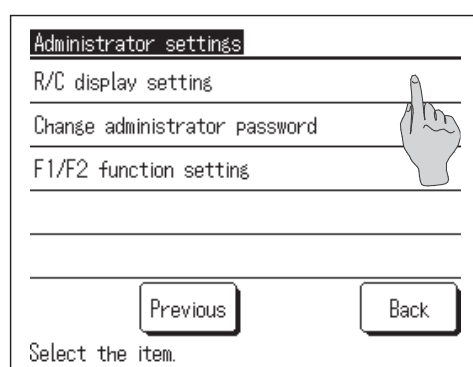


The screen shows a menu with the following options: **Administrator settings**, R/C display setting, Change administrator password, F1/F2 function setting, and a blank line. A hand icon is pointing at the R/C display setting option. At the bottom are **Previous** and **Back** buttons. The text "Select the item." is at the bottom left.

- 2 When the administrator setting menu is displayed, select **R/C display setting** ⇒ **Zone name**.

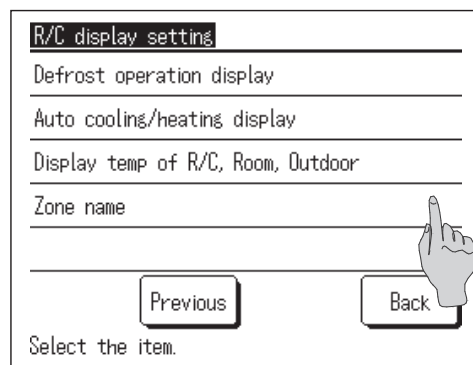


The screen shows a menu with the following options: **R/C display setting**, Defrost operation display, Auto cooling/heating display, Display temp of R/C, Room, Outdoor, Zone name, and a blank line. A hand icon is pointing at the Zone name option. At the bottom are **Previous** and **Back** buttons. The text "Select the item." is at the bottom left.

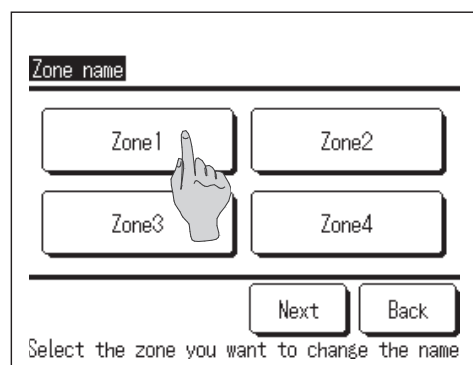

The screen shows a grid of four buttons labeled **Zone1**, **Zone2**, **Zone3**, and **Zone4**. A hand icon is pointing at the Zone3 button. Below the grid are **Next** and **Back** buttons. The text "Select the zone you want to change the name" is at the bottom left.

- 3 Tap the zone you want to set a zone name for. Tap **Next** button to set Zone5~8.

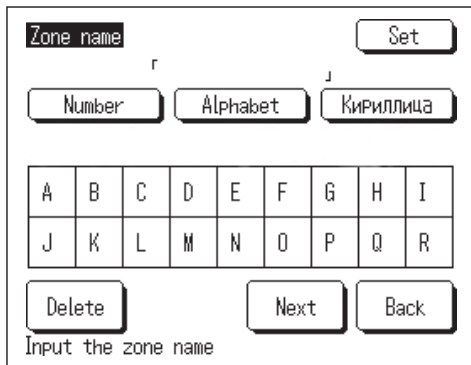

Zone name Set

Number Alphabet Кириллица

A	B	C	D	E	F	G	H	I
J	K	L	M	N	O	P	Q	R

Delete Next Back

Input the zone name


4 The zone name input screen is displayed.

The zone name can be set with up to 8 2-byte letters (16 1-byte letters).

You can enter alphanumeric or Cyrillic.

Tap the Back or Next button to display next character group.

When you have finished inputting the room name, tap Set.

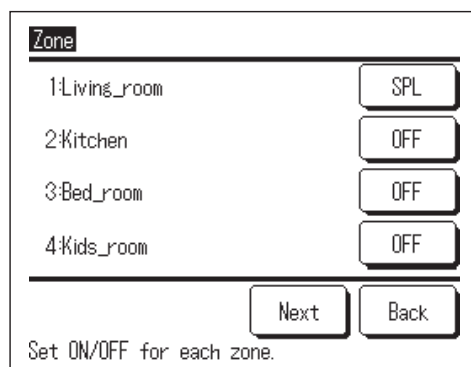

Zone

1:Living_room	SPL
2:Kitchen	OFF
3:Bed_room	OFF
4:Kids_room	OFF

Next Back

Set ON/OFF for each zone.


5 The zone name that was set is displayed on the zone operation screen.

F1/F2 switch operation

You can set any of the following functions to the F1 and F2 switches.

The F1 / F2 switches act as shortcuts; it can be much easier and faster than starting an operation from the usual Menu on the TOP screen.

- High power operation ... [page 17](#)
- Energy-saving operation ... [page 18](#)
- Silent mode control ... [page 75](#)
- Home leave mode ... [page 55](#)
- Favorite setting operation ... [page 59](#)
- Filter sign reset ... [page 82](#)
- Anti draft ON/OFF ... [page 16](#)
- Auto anti draft ctl ... [page 77](#)

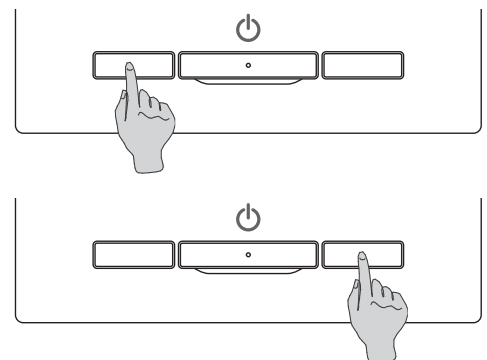

Changing the function of the F1 or F2 switch can be performed with the F1/F2 function setting ([page 72](#)).

The following functions are set as factory settings.

You may change these settings as desired.

- F1 switch ...High power operation
- F2 switch ...Energy-saving operation

Advice

- When using a standard FDT/FDTC panel (a panel without anti draft function), set functions other than the Anti draft ON/OFF function to the F1 and F2 switches. F1/F2 function setting ([page 72](#))
- If anti draft is turned on (operated) during the use of a standard FDT/FDTC panel, louvers may not automatically swing, which is not a malfunction.


Anti draft ON/OFF operation (for using panel with anti draft)

Anti draft can be turned ON/OFF (operated/stopped) with a single tap of the button.

To turn ON/OFF the anti draft with the **F1** or **F2** switch, the anti draft ON/OFF function needs to be preset to the **F1** or **F2** switch. (☞page 72)

Initially, Anti draft ON/OFF or high power operation is set to the **F1** switch. (It is automatically determined according to the connected indoor unit.)

■When the sub R/C is set, Anti draft ON/OFF setting cannot be used.

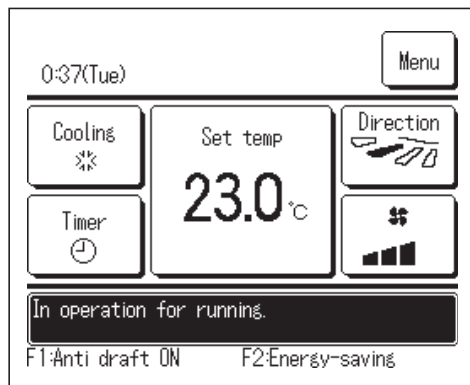

- 1 Push the **F1** (**F2**) switch. Anti draft is turned ON (operated). "Anti draft ON" is displayed in the **F1** (**F2**) switch function display area.

- The enabled operation mode and the enabled anti draft of the blow outlets operate based on the details set in the Anti draft setting.
- If anti draft is turned on (operated) during the use of the standard FDT, FDTC panel, louvers may not automatically swing, which is not a malfunction.
- While the unit is stopped, anti draft does not operate even when "Anti draft ON" is displayed. Anti draft will operate when you press the **Run/Stop** switch to start the unit operation.
- If no indoor unit equipped with anti draft function is connected, a message "Invalid request." is displayed on the R/C screen.
- Depending on how the Permission/Prohibition setting (☞page 61) is set, the administrator password input screen may be displayed.

Advice

- If the humidity around the IU is high even after anti draft is set to ON, the anti draft may stop in order to prevent condensation forming on the IU. In that case, the message "During condensation prevention control." will be displayed. (☞page 87) When the humidity drops, the anti draft will be reactivated.

Anti draft ON/OFF setting			
000 ON	001 OFF	002 ON	003 OFF
004 ON	005 OFF	006 ON	007 OFF
008 ON	009 OFF	010 ON	011 OFF
012 ON	013 OFF	014 ON	015 OFF
ALL ON		ALL OFF	
Back			

- 2 Press the **F1** (**F2**) switch. Anti draft is turned OFF (stopped). "Anti draft OFF" is displayed in the **F1** (**F2**) switch function display area.

- 3 When two or more indoor units equipped with anti draft function are connected to the R/C, the indoor unit No. and the ON/OFF state of each anti draft are displayed by pressing the **F1** (**F2**) switch. Set ON or OFF for each indoor unit.

Anti draft is turned OFF by tapping ON and turned ON by tapping OFF.

All of the connected indoor units that are equipped with anti draft function are turned ON by pressing the **ALL ON** button.

All of the connected indoor units that are equipped with anti draft function are turned OFF by pressing the **ALL OFF** button.

In the **F1** (**F2**) switch function display area, the anti draft ON/OFF state of the indoor unit that has the smallest address among the indoor units equipped with anti draft function is displayed.

High power operation


The high power operation adjusts the room temperature quickly to a pleasant level by increasing the operation capacity.

The high power operation continues for 15 minutes at the maximum and returns to the normal operation automatically.

When the operation mode is changed, the high power operation returns to the normal operation, too.

High power operation must be set to the **F1** or **F2** switch (→page 72).

High power operation is set to the **F1** switch as the factory setting.

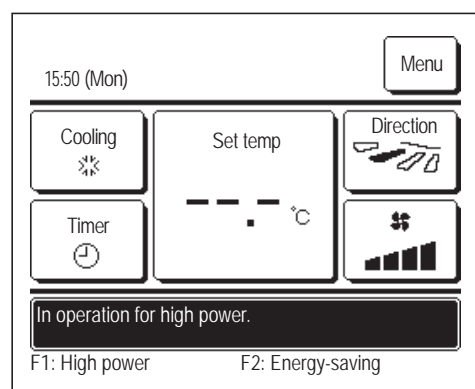

1 Push the **F1** (**F2**) switch to start the high power operation.

■ Operation will start when the **F1** (**F2**) switch is pushed, even if **Run/Stop** switch is off.

■ High power operation is only allowed when Heating or Cooling is selected for the operation mode.

Message "In operation for high power." is displayed on the R/C screen, and "—, —°C" is displayed on the Set temp button during the high power operation.

■ Set temp and change fan speed operations are disabled during high power operation.

2 High power operation is terminated when you perform one of the following.


- When you terminate through a **Run/Stop** operation
- When you change the operation mode
- When 15 minutes have elapsed since the high power operation started
- When you terminate the high power operation with the **F1** (**F2**) switch

Energy-saving operation

Use this operation to save energy. Set temp is fixed at 28°C in the cooling operation or 22°C in the heating operation. Since the capacity is controlled automatically based on the outdoor temperature, energy can be saved without losing comfort.

Energy-saving operation must be set to the **F1** or **F2** switch (→ page 72)

Energy-saving operation is set to the **F2** switch as the factory setting.

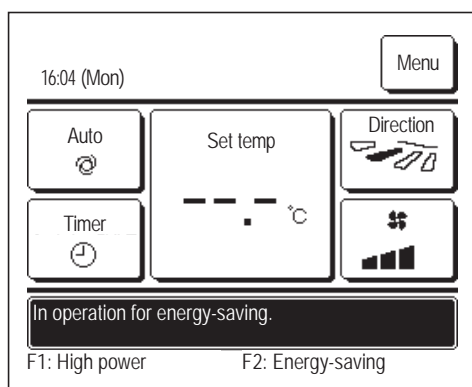

1 Push the **F1** (**F2**) switch to start the energy-saving operation.

- Operation will start even if you press the **F1** (**F2**) switch while the unit is stopped.
- Energy-saving operation is only allowed when Heating, Cooling or Auto is selected for the operation mode.

Message "In operation for energy-saving." is displayed on the screen during the energy-saving operation. Set temp is fixed at "28.0°C" in the cooling operation or "22.0°C" in the heating operation. Set temp shows "- °C" in the automatic operation mode.

- Set temp cannot be changed during the energy-saving operation. If it is attempted, a message "Invalid request" is displayed on the screen.

2 Energy-saving operation is terminated when you perform the following.

- When you terminate through a **Run/Stop** operation
- When you change the operation mode
- When you terminate the energy-saving operation with the **F1** (**F2**) switch

3. Quick reference of menu items

Quick reference of menu items


It is necessary to input the Administrator password for menu items showing.

Setting and display items		Details	
Useful functions	Individual flap control	Set the moving range (upper and lower limit positions) of the flap at each blow outlet of IU. Set also the left limit position-rights limit position if FDK is used.	page 31
	Anti draft setting	If the panel with anti draft is used, set enable/disable of the each operation mode and anti draft operation of each blow outlet.	page 35
	Auto anti draft ctrl	If the auto anti draft control is used, set auto anti draft control of each blow outlet and enable/disable of the allow to air flow volume up.	page 77
	Timer	Set ON timer by hour	Set the time to operate the unit after stopping the operation within the range of 1 - 12 hours (at 1-hour intervals). page 44
		Set OFF timer by hour	Set the time to stop the operating unit within the range of 1 - 12 hours (at 1-hour intervals). page 46
		Set ON timer by clock	Set the clock time to start operation. ■ The time can be set at 5-minute intervals. ■ It can be selected from once (only one day) or every time (every day). *Clock setting is necessary to set the timer. page 47
		Set OFF timer by clock	Set the time to stop operation. ■ The time can be set at 5-minute intervals. ■ It can be selected from once (only one day) or every time (every day). *Clock setting is necessary to set the timer. page 49
		Weekly timer	On timer or Off timer on weekly basis can be set. ■ 8-operation patterns per day can be set at the maximum. ■ The time can be set at 5-minute intervals. ■ Holiday setting (including temporary day off) is available. *Clock setting is necessary to set the time. page 50
	Favorite setting Administrator password		Set each operation mode and setting temperature, fan speed, flap direction for Favorite setting 1 or Favorite setting 2. page 59
	Home leave mode Administrator password		When the unit is not used for a long period of time, the room temperature is maintained at a moderate level, avoiding extremely hot or cool temperatures. ■ Cooling or heating is operated according to the outdoor temperature and the set temp. ■ Set temp and fan speed can be set. page 55
	External ventilation		The ventilation is turned on or off if ventilation equipment is attached. page 37
	Select the language		Set the language to be displayed on the R/C. page 76
	Silent mode control		The period of time to operate the unit by prioritizing the quietness can be set. ■ Start and end can be set for the silent mode. page 75
	Wireless interface setting		If the wireless interface is used, set the IU to be operated by a dedicated application via a wireless interface. page 79
	Control mode & Eco level		Set the control mode and eco level for IU. page 81
Energy-saving setting Administrator password	Sleep timer		Set the time period from start to stop of operation. ■ The selectable range of setting time is from 30 to 240 minutes (at 10-minute intervals). ■ When the setting is "Enable", this timer will activate whenever any operation starts. page 24
	Peak-cut timer		Set the times to start and stop the capacity limiting operation and the peak-cut %. ■ 4 operation patterns per day can be set at the maximum. ■ The setting time can be changed at 5-minute intervals. ■ The selectable range of peak-cut % is from 0.40 to 80% (at 20% intervals). ■ Holiday setting (including temporary day off) is available. *Clock setting is necessary. page 25
	Automatic temp set back		It returns to the set temperature when the set time is counted up. ■ The selection range of the set time is from 20 to 120 minutes (at 10-minute intervals). page 28
	Motion sensor control		If the motion detector is used, set enable/disable of Power Control and autosave. page 29

Setting and display items			Details	
Filter	Filter sign reset		Reset the filter sign. Set next cleaning date.	page 82
User setting	Initial settings	Clock setting	Set and correct the current date and time. ■ When the power supply is interrupted for 80 hours or less, the clock continues to operate with the built-in backup batteries. If it is interrupted for more than 80 hours, it is necessary to renew the setting.	page 38
		Date & time display	Set whether the date and time are displayed or not, and select 12H or 24H and AM or PM position.	page 39
		Summer time	Current time is advanced or delayed by 1 hour.	page 40
		Contrast	Contrast of LCD can be adjusted.	page 40
		Backlight	Select whether the backlight is used or not, and set the lighting time.	page 41
		Controller sound	Select whether the controller sound is actuated at the touch panel operation or not.	page 41
		Operation lamp luminance	Adjust operation lamp luminance.	page 42
	Administrator settings Administrator password	Permission/Prohibition setting	■ Set the permission/prohibition for each of following operations: [Run/Stop] [Change set temp] [Operation mode] [Change flap direction] [Change the fan speed] [High power operation] [Energy-saving operation] [Timer] ■ Set the administrator password request during operation. [Individual flap control] [Weekly timer] [Select the language] [Filter sign reset]	page 61
		Outdoor unit silent mode timer	The period of time to operate the unit by prioritizing the quietness can be set. ■ Starting and stopping times can be set for the silent mode operation. ■ The time can be set at 5-minute intervals.	page 62
		Setting temp range	Restrict the setting range of temperature. ■ Temperature range can be restricted depending on operation modes.	page 63
		Temp increment setting	Set the interval for setting temperature (0.5°C/1.0°C).	page 65
		Set temp display	Set temperature display method can be selected.	page 65
		R/C display setting	Register the names of remote control and indoor unit. Set Yes or No for the need of indoor temperature display. Set Yes or No for the need for the display of error code, heating standby, defrosting operation on and automatic cooling/heating.	page 66
		Change administrator password	Change the administrator password.	page 71
		F1/F2 function setting	Set the functions of F1 and F2 switch. Available functions: [High power operation] [Energy-saving operation] [Silent mode cont.] [Home leave mode] [Favorite set 1] [Favorite set 2] [Filter sign reset] [Anti draft ON/OFF]	page 72
		Refrigerant leak detector setting	Set the refrigerant leak detector. Available items: [Controller sound] [LED brightness] [Threshold for refrigerant density alarm]	page 73
Contact company & Error display			Address of the service contact is displayed.	page 84

It is necessary to input the administrator password for menu items indicated with Administrator password

Restrictions on the sub R/C

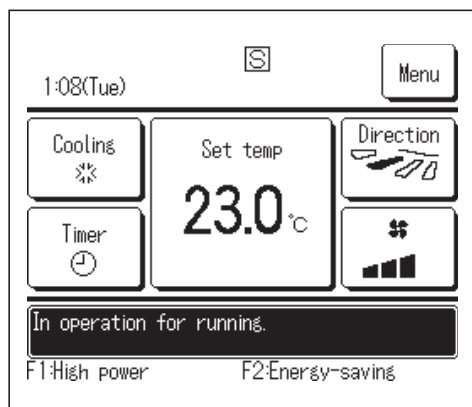


When one IU is controlled with 2 R/Cs, the following settings cannot be made on the sub R/C. It is necessary to use the main R/C.

In case of the sub R/C, the icon  is displayed on the R/C screen.

○: operable ×: not operable

R/C operations			Main	Sub
Run/Stop, Change set temp, Change flap direction, Auto swing, Change fan speed operations			○	○
Anti draft			○	×
High power operation, Energy-saving operation			○	○
Silent mode control			○	×
Useful functions	Individual flap control		○	×
	Anti draft setting		○	×
	Auto anti draft ctl		○	×
	Timer		○	○
	Weekly timer		○	×
	Favorite setting		○	○
	Home leave mode		○	×
	External ventilation		○	○
	Select the language		○	○
	Silent mode control		○	×
	Wireless interface setting		○	×
Control mode & Eco level			○	×
Energy-saving setting			○	×
Filter	Filter sign reset		○	○
User setting	Initial settings		○	○
	Administrator settings	Permission/Prohibition setting	○	×
		Outdoor unit silent mode timer	○	×
		Setting temp range	○	×
		Temp increment setting	○	×
		Set temp display	○	○
		R/C display setting	○	○
		Change administrator password	○	○
		F1/F2 function setting	○	○
Refrigerant leak detector setting		○	×	

Operations on menu screens

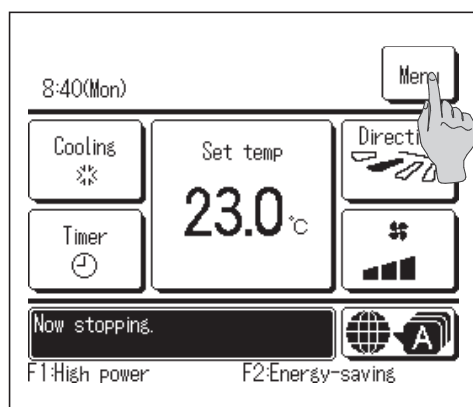


- 1 Tap the **Menu** button on the TOP screen.


Main menu screen is displayed.

When a desired menu item is tapped, setting screen for each item is displayed.


When there are two or more pages, the **Next** button is displayed at the leading page and the **Previous** button is displayed at the last page. The **Next** and **Previous** buttons are displayed on pages in between.

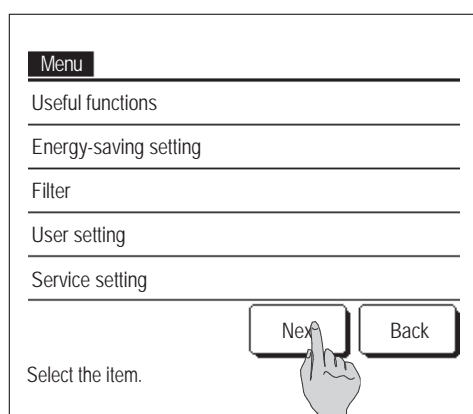

- 2 When the **Next** button is tapped, next main menu screen is displayed.

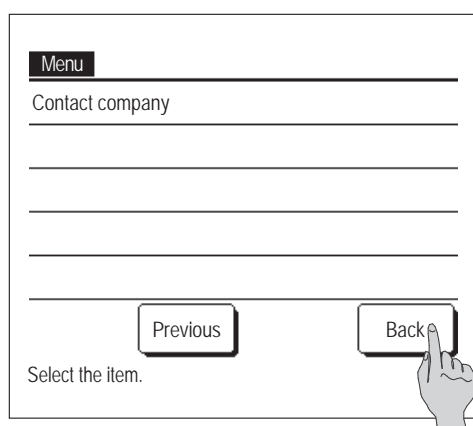


- 3 When the **Back** button is tapped, the display returns to the TOP screen.

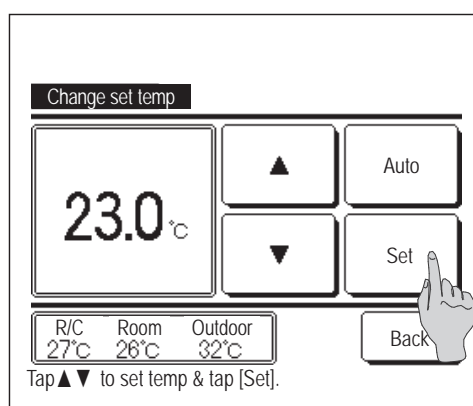

- 4 When the **Set** button is displayed on the setting screen for each item, tapping this button confirms the setting.

■ If you tap **Back** without tapping the **Set** button, the settings made will not be applied, and the display returns to the original screen.

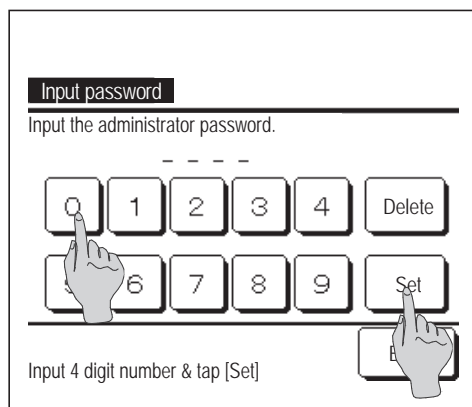

- 5** When an item is referenced to **Administrator password** in this manual, the Input password screen is displayed after selecting the menu.

Enter the administrator password (4-digit number) and tap the **Set** button.

When the password is unknown or wrong, the setting cannot be changed.

Advice

- The administrator password is provided so that these operations and settings are restricted to administrators/managers only (such as the owner of the building).
 - For the administrator password at the factory setting, refer to the Installation Manual.
- When your administrator password is forgotten, initialize the password by referring to the Installation Manual.


Cautions for each setting screen

- When returning to the screen mentioned below from each setting screen, operate the following buttons or switches.
 - Return to Main screen ... **Menu** button
 - Return to the last previous screen ... **Back** button
 - Return to TOP screen ... **Run/Stop** switch
- When the **Back** button is tapped without tapping the **Set** button on the way of setting, contents of the setting are invalidated, and the display returns to the last previous screen. If the **Run/Stop** switch is pushed on the way of setting, contents of the setting are invalidated, the setting mode is terminated and the display returns to the TOP screen.
- If no button is operated for approx. 5 minutes on the way of setting each item, the display returns to the TOP screen automatically. Contents of the setting on the way become invalid.
- Message "Invalid request" may be displayed when a button is pushed. This is not a fault but it is because the button is set to the Prohibition.
(☞ page 61)
- It is necessary to stop the air conditioner by pushing the **Run/Stop** switch before starting the following settings. If the Set button is tapped on the menu screen while the air conditioner is operating, the message "Invalid request." is displayed.

■ Individual flap control	■ Anti draft setting	■ Select the language
■ Energy-saving setting	■ Administrator settings	

4. Settings and operations


Energy-saving setting [Administrator password]

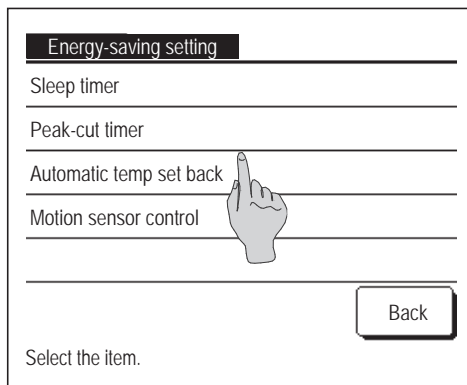

- 1 Tap the **Menu** button on the TOP screen and select **Energy-saving setting**. The Energy-saving setting menu screen is displayed.
- 2 When the Energy-saving setting screen is displayed, select a desired item.
 - Sleep timer page 24
 - Peak-cut timer page 25
 - Automatic temp set back page 28
 - Motion sensor control page 29

■ Sleep timer

Stops operation when the amount of time set has elapsed since the start of each operation.

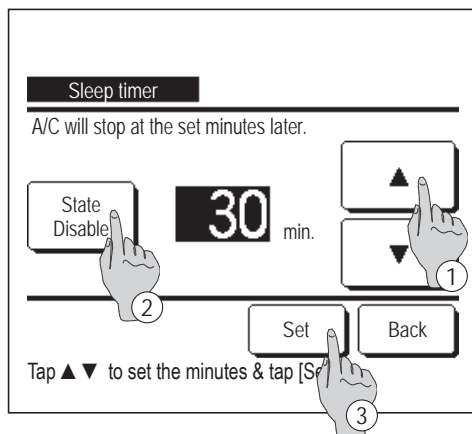

- 1 Tap the **Menu** button on the TOP screen and select **Energy-saving setting** ⇒ **Sleep timer**. The Sleep timer screen is displayed.
- 2 Select a desired time with ① buttons. Setting range: 30 to 240 minutes, at 10-min intervals.
- 3 Tap the ② **State** button to switch between "State Enable" and "State Disable".
 - "Enable": operation stops at the set time every time.
 - "Disable": the sleep timer does not operate.


Unless the Sleep timer is used, set at the "State Disable".
- 4 After the setting, tap the ③ **Set** button. The display returns to the Energy-saving setting menu screen.

■Peak-cut timer

Set the times to start and stop the capacity (upper limit) limiting operation and the peak-cut %.

Advice


- When the peak-cut timer is used, be sure to make the Clock setting in advance (☞page 38).
- The peak-cut timer control may not be performed depending on combination of IU and OU.

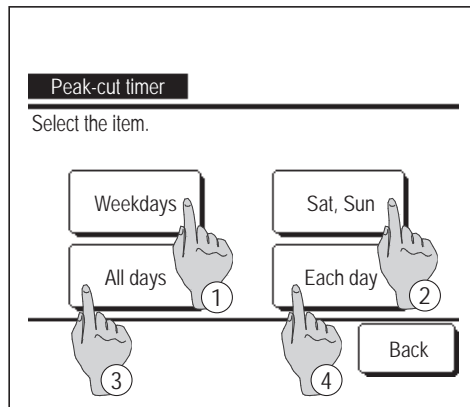

- 1 Tap the **Menu** button on the TOP screen and select **Energy-saving setting** ⇒ **Peak-cut timer**.

When the setting range selection screen for the peak-cut timer is displayed, select the day of the week to be set.

- ① Weekdays : Monday - Friday
- ② Sat. Sun : Saturday, Sunday
- ③ All days : Monday - Sunday
- ④ Each day : Moves to the day of the week setting screen. (☞2)

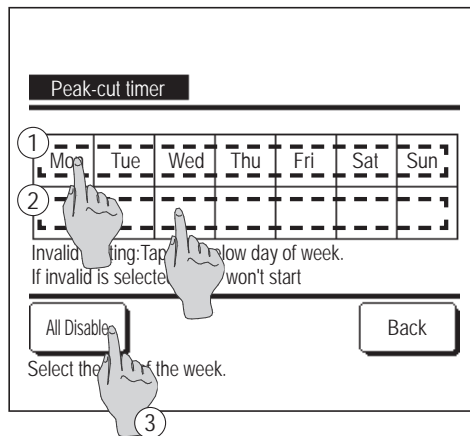

- 2 If a desired day of the week ① is tapped on the display, contents of current setting for the day are displayed. (☞5)

- 3 For the holiday setting, tap the block ② under a day to switch between "☒" (the holiday setting) and "(Blank)" (reset).


Timer does not operate on the day set as holiday.

Two or more holidays can be set.

■To enable the timer on the day set as holiday, it is necessary to reset the holiday setting.


- 4 When tapping ③ "All Disable" button, the timer does not operate on all days of the week.

When the timer is used, be sure not to set "All Disable".

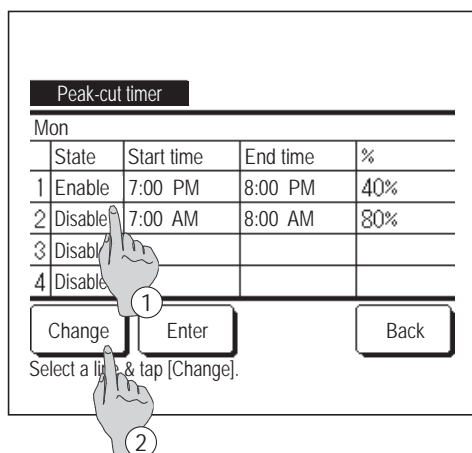

5 Screen to check contents of current setting is displayed.

When the contents are changed or new setting is added, select a ① setting line No. and tap the ② **Change** button.

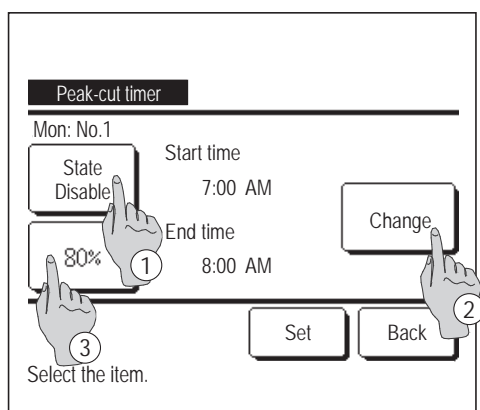

6 Detail setting screen for the timer setting contents is displayed.


- ① Tap the **State** button to switch between "State Enable" and "State Disable".
- ② If the **Change** button is tapped, the start time and the end time can be set. (→7)
- ③ If the **Peak-cut** button is tapped, the peak-cut % can be set. (→9)

7 Set the Start time.

Set the hour and minute with the **▲** **▼** buttons.

Setting time can be set at 5-min intervals.

Tap the **Set** button after the setting. (→8)

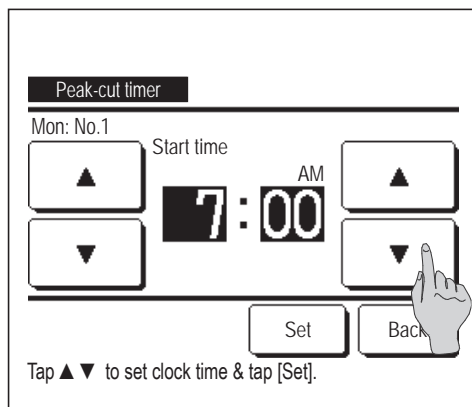


8 Set the End time.


Set the hour and minute with the **▲** **▼** buttons.

End time can be set from 5 minutes after the Start time up to 24:00 at 5-min intervals

Tap the **Set** button after the setting.

(→10)

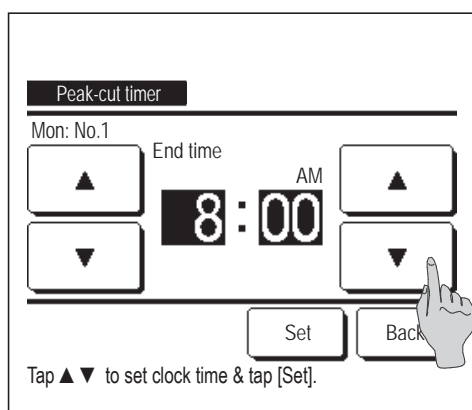

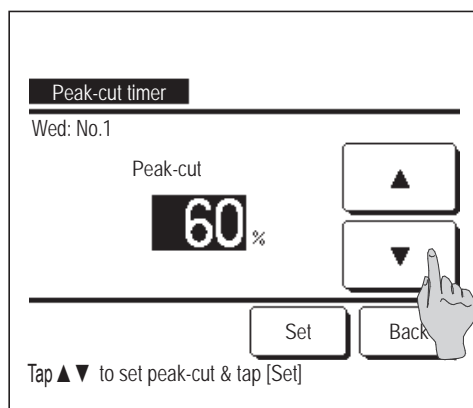

9 Set the peak-cut %.


Set the peak-cut % with the buttons.

The peak-cut % can be set at 0%, 40%, 60% or 80%.

The lower the peak-cut % is, the higher the effect of energy-saving becomes.

Tap the button after the setting.


(10)

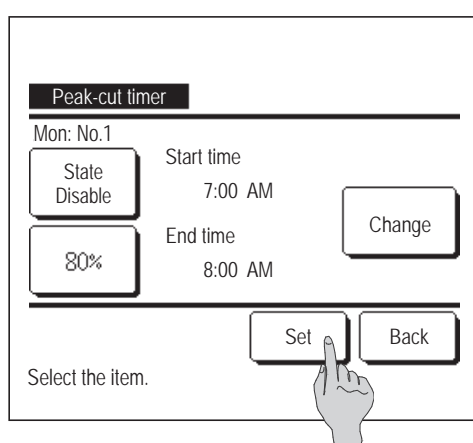

10 The setting content check screen (6) is displayed. If the button is tapped, the contents are confirmed and a day of the week setting content check screen (5) is displayed.


11 If the settings are corrected or added further within the same day, repeat the setting. (5)

■ When contents of the setting are duplicated, the priority is given to the set contents of smaller peak-cut %.

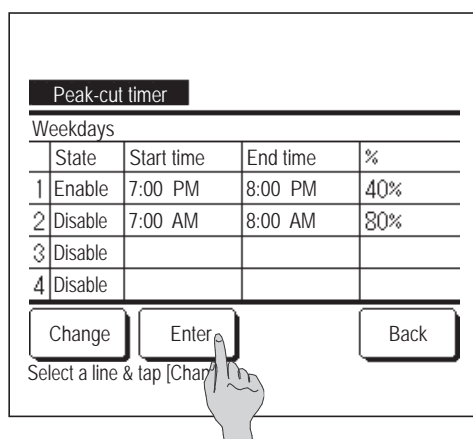

12 Display a day of the week setting content check screen. To save the setting, tap the button.

- a) In case of group setting: (1-①Weekdays, 1-②Sat, Sun, 1-③All days) Move to the group setting check screen. (13)
- b) In case of individual setting: (1-④Each day) Save the setting and move to a day of the week selection screen (2)

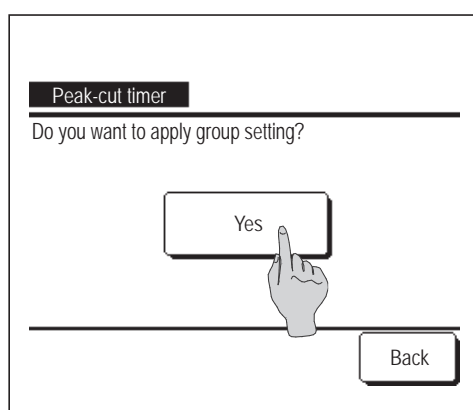

13 Display the group setting acknowledge screen.


Tap the button to save the setting.

The display changes to a day of the week setting check screen after the saving. (2)

14 When making the setting after changing a day of the week, repeat the setting from the step 2.

■ Automatic temp set back

It returns to the set temperature when the set time is counted up.

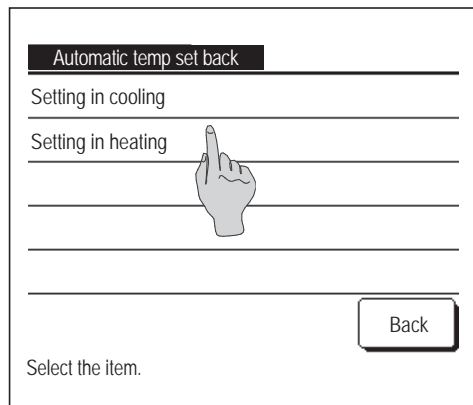

- 1 Tap the **Menu** button on the TOP screen and select **Energy-saving setting** ⇒ **Automatic temp set back**. The Automatic temp set back screen is displayed.


Tap **Setting in cooling** when setting for the cooling operation or **Setting in heating** when setting for the heating operation.

The Setting in cooling operation includes the cooling, dry and auto.

The Setting in heating is for the heating operation only.

Setting time range: 20 - 120 min, at 10-min intervals


Set temp range: It can be set within the preset temp range set according to the set temp range menu. (page 63)

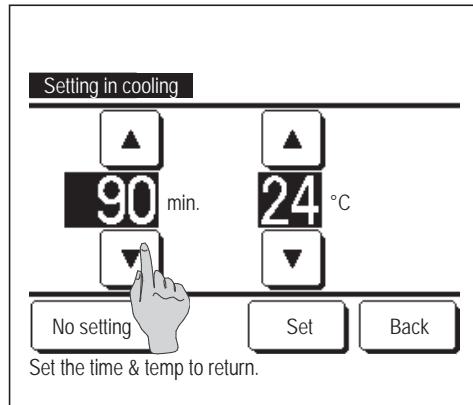

- 2 Set desired time and temperature with the **▲** **▼** buttons.

When the **Set** button is tapped, contents of setting are confirmed, and the display returns to the last previous screen.

When the **No setting** button is tapped, "-- min. -- °C" is displayed, and the "Automatic temp set back" is not performed.

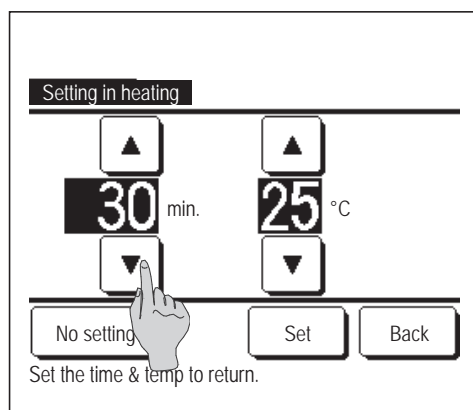


- 3 The same setting method as the Setting in the cooling operation can be applied to the Setting in heating.

■ Motion sensor control (for IUs with motion sensors)

Presence of humans and the amount of motion are detected by a motion sensor to perform various controls.


■ When the R/C is set as the sub R/C, the motion sensor control cannot be set.

- 1 Tap the **Menu** button on the TOP screen and select **Energy-saving setting** ⇒ **Motion sensor control**.
The motion sensor control screen and contents of the current setting are displayed.

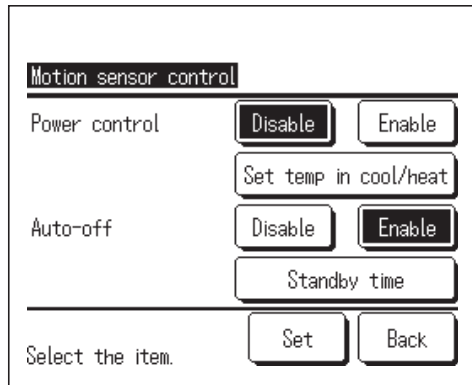

- 2 Select Enable/Disable for power control. When enable, the set temperature is corrected in incremental up to ± 3.0 depending on the amount of motion.

Tap the **Set temp in cool/heat** button.

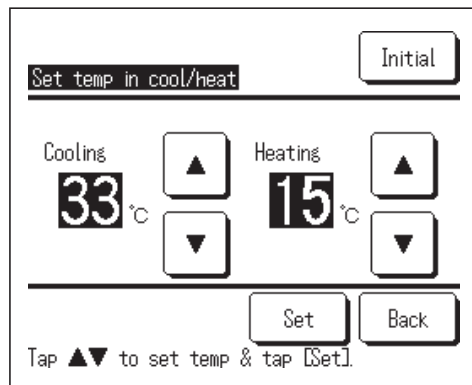


- 3 Use the **▲** / **▼** button to set the temperature, and tap the **Set** button. Temporarily set the set temperature. The possible range is as follows:

Cooling: 25 to 35°C (1°C intervals, Factory settings: 33°C)

Heating: 10 to 20°C (1°C intervals, Factory settings: 15°C)

If the amount of motion continues to be small, set temp is changed to the set temperature, and the power of the air conditioner is reduced. "Power control ON" will be displayed while power control is set to ON. Also, the corrected temperature will be displayed for set temp.

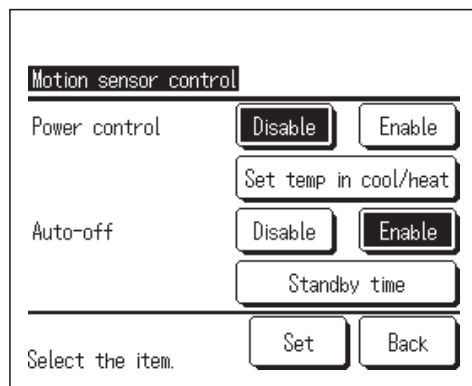

- 4 Select Enable/Disable for auto-off. When enable, it judges by the amount of motion that there are no human around. After one hour, the unit will be in the "operation wait" state.

Tap the **Standby time** button.

- 5 Use the / button to set the time, and tap the button. You can set the time between 1 to 50 hours in 1-hour intervals. Temporarily set the period required between the time when it continuously judges that there are no human after the "Operation wait" state is set and the time when "Complete stop" is set.

Operation wait:

The unit stops but will resume operation when human presence is detected. When the unit is in "Operation wait", "In auto-off mode" will be displayed on the message display.

Complete stop:

When auto-off is enabled, the unit stop.

The unit will not resume operation even when human presence is detected.

The message "In auto-off mode" will disappear from the message display, and the operation lamp will turn off.

To restart the operation, push the switch.

- 6 After you set each item, tap the button.

Motion sensor control is set.

* If you do not tap the button on this screen, motion sensor control will not be executed.

■To execute motion sensor control

If motion sensor setting is not enabled even if the settings described above have been made, motion sensor control will not be executed.

Check that motion sensor setting is set to enable. If it is set to disable, change it to enable.

Tap the button on the top screen and select

⇒ ⇒

.

Individual flap control

Motion range (upper, lower, left, or right limit positions) of the flap at each blow outlet can be set to a desired range.

■ When the R/C is set as the sub R/C, the individual flap control cannot be set.

- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Individual flap control**, or tap the **Change flap direction** button on the TOP screen and select **Ind. flap control**, and then enter the administrator password.

When one IU is connected to the R/C: ➡ 3


When two or more IUs are connected to the R/C: ➡ 2

Advice

- Individual flap control should be set when the unit is stopped.
- When you perform Individual flap control while the unit is in operation, the acknowledge screen for unit stop is displayed.

The screenshot shows a screen titled 'IU select'. It features a grid of eight buttons labeled with IU addresses: 000, 001, 002, 003 in the top row, and 004, 005, 006, 007 in the bottom row. A hand icon is pointing at the '001' button. Below the grid are two buttons labeled 'Next' and 'Back'. At the bottom left, the text 'Select an IU address.' is displayed.

- 2 When two or more IUs are connected to the R/C, a list of IUs is displayed. Tap the IU to be set.

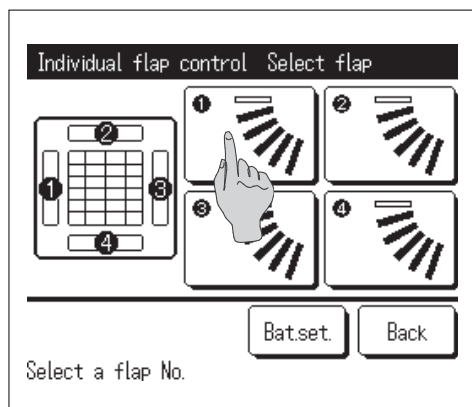

3 Select the number of the flap of which the motion range is changed. (→4)


- When there are two or more flaps at the blow outlet, such as the FDT type, the flap at blow outlet No. ① will keep moving while the blow outlet selection screen is displayed. The figure displayed on the screen shows the installed unit viewed from the floor side. Select the flap based on this figure. When you have selected the blow outlet, the flap with the number you selected will move.

Advice


- This operation is not performed when individual flap control is set during operation.

- You can set all flaps at once by tapping the **Bat.set.** button (except for FDKs with a left/right flap).


- When there is only one flap at the blow outlet, such as the ceiling suspended type only the flap that can be set will be displayed.

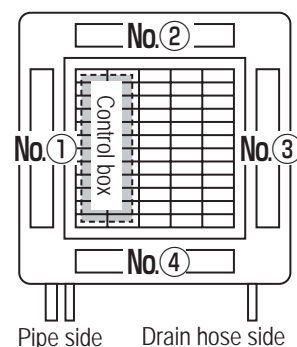

**Louver No.
[For FDT]**

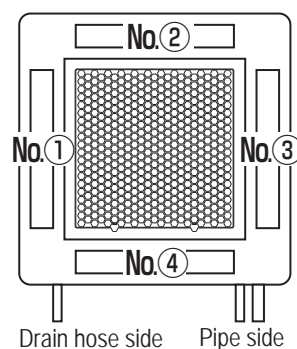


**Louver No.
[For FDTC]**

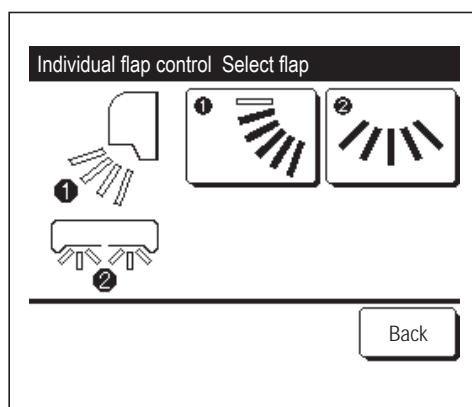

For an FDK with a left/right flap, select the upper/lower flap or left/right flap.


When you select the upper/lower flap (①): →4

When you select the left/right flap (②): →8

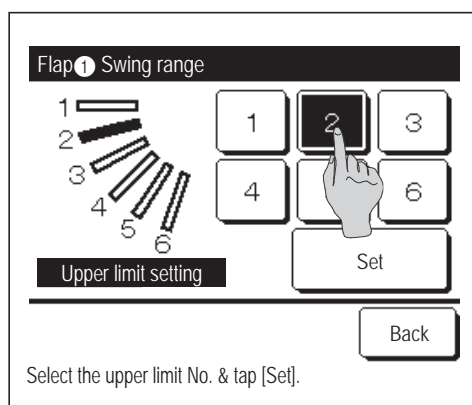

4 Select one of the upper limit positions from 1 to 6 for the flap motion range.


After you select the range, tap the **Set** button.

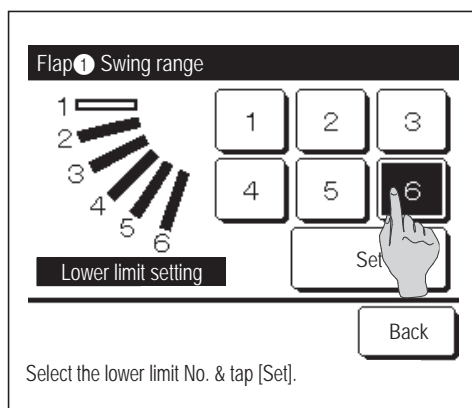


- 5** Select one of the lower limit positions from **1** to **6** for the flap motion range.

The range of motion between the upper and lower limit positions will be displayed in black.

After you select the range, tap the **Set** button.

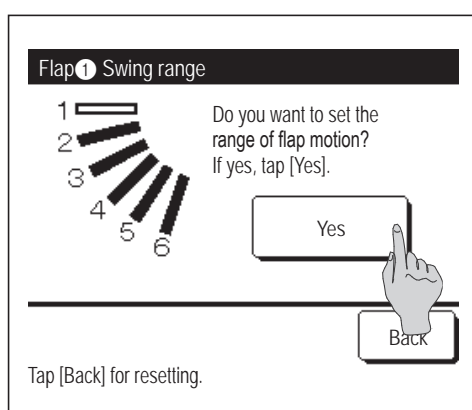

- 6** Acknowledge screen for the flap motion range is displayed.

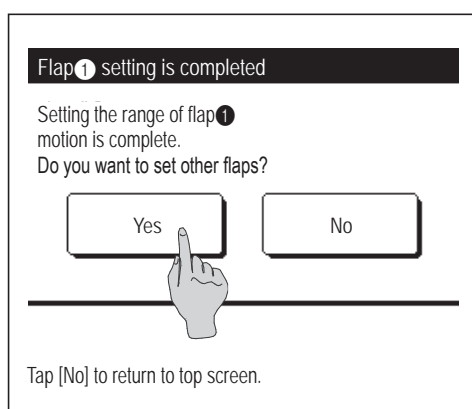


- 7** Acknowledge screen for the completion of setting is displayed.

To change other flap motion ranges, tap the **Yes** button (→ **3**).


To terminate the setting, tap the **No** button. The display returns to the TOP screen.

[When left/right flap is selected for an FDK with a left/right flap]

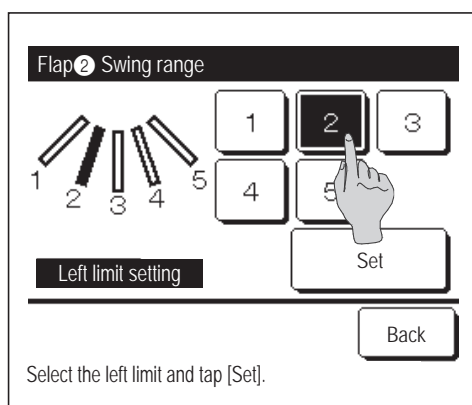

- 8** Select one of the left limit positions from **1** to **5** for the flap motion range.


After you select the range, tap the **Set** button.

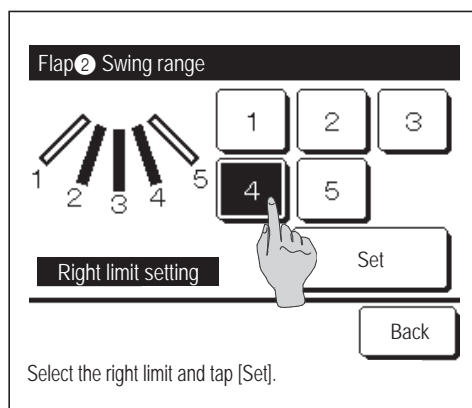


- 9** Select one of the right limit positions from to for the flap motion range.

The range of motion between the left and right limit positions will be displayed in black.

After you select the range, tap the button.

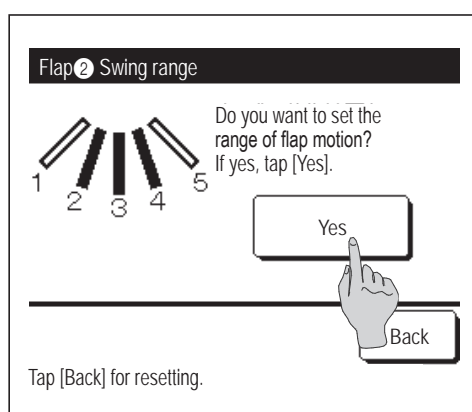

- 10** Acknowledge screen for the flap motion range is displayed.

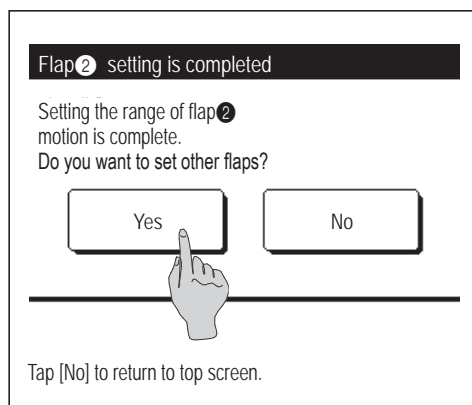

- 11** Acknowledge screen for the completion of setting is displayed.


To change other flap motion ranges, tap the button. (→ 3)

To terminate the setting, tap the button. The display returns to the TOP screen.

Advice

When the unit is installed within 50 cm from a wall, it is recommended that you change the range of the left/right flap motion as follows:

- When installed at the right end of the wall
Left/right flap motion range to
- When installed at the left end of the wall
Left/right flap motion range to

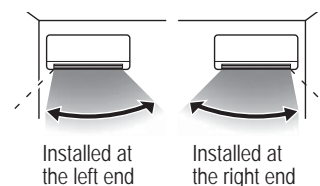

Anti draft setting (for using panel with anti draft)


You can set ON/OFF (operation/stop) of the anti draft function and can also enable/disable the motion of panel with anti draft for each blow outlet for each operation mode.

■ When the R/C is set as the sub R/C, the anti draft setting cannot be set.

- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Anti draft setting**.

The Anti draft setting menu is displayed.

■ Depending on how the Permission/Prohibition setting (page 61) is set, the administrator password input screen may be displayed.

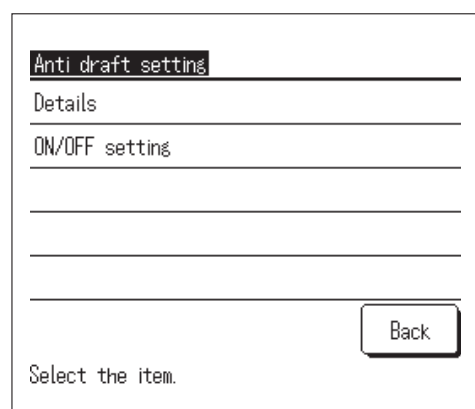


- 2 Tap a desired item.

- ① Details..... You can set Enable or Disable for anti draft motion performed at each blow outlet in each operation mode. (page 35)
- ② ON/OFF setting.... You can set ON/OFF (operation/stop) of anti draft function for the enabled blow outlet set in ① Details. (page 37)


Advice

- If the humidity around the IU is high even after anti draft is set to ON, the anti draft may stop in order to prevent condensation forming on the IU. In that case, the message "During condensation prevention control." will be displayed. (page 87)
When the humidity drops, the anti draft will be reactivated.

Details

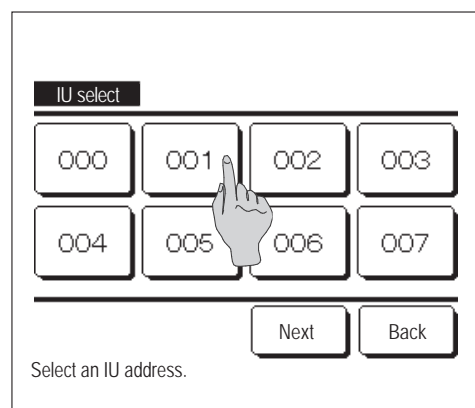

- 1 When two or more IUs are connected to the R/C, a list of IUs is displayed. Tap the IU to be set.

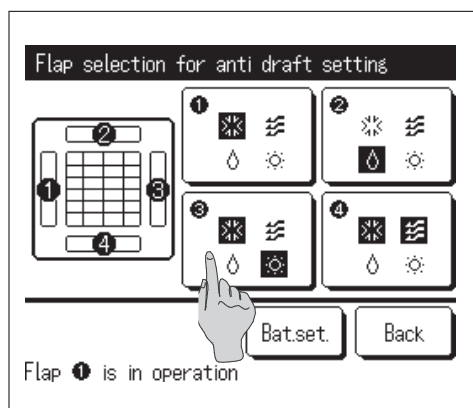

2 Select the blow outlet number to set anti draft.

- The flap at blow outlet No. ① will keep moving while the blow outlet selection screen is displayed. Select the flap based on this figure. When you have selected the blow outlet, the flap with the number you selected will move. The figure displayed on the screen shows the installed unit viewed from the floor side.


Advice

- This operation will not be performed when anti draft setting is set during operation.


- You can set all blow outlets at once by tapping the **Bat.set.** button.

An icon that indicates the operation mode (page 9) is shown on each blow outlet button.


When the anti draft setting is enabled, the icon color will be reversed (for example, in the left figure, blow outlets which have the anti draft setting enabled during cooling are numbers ①, ③, and ④).

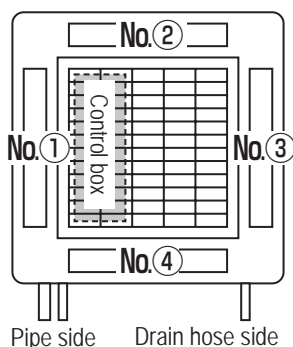

**Blow outlet No.
[For FDT]**

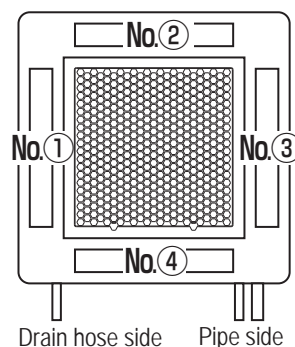

**Louver No.
[For FDTC]**

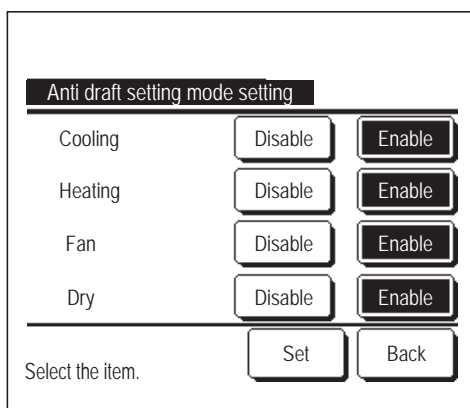

3 Select enable/disable for each operation mode.

After you make the selection, tap the **Set** button.

The display returns to the blow outlet selection screen.

■ON/OFF setting

Anti draft ON/OFF setting

000 ON	001 OFF	002 ON	003 OFF
004 ON	005 OFF	006 ON	007 OFF
008 ON	009 OFF	010 ON	011 OFF
012 ON	013 OFF	014 ON	015 OFF

ALL ON ALL OFF Back

- 1 The indoor unit No. and the ON/OFF state of each anti draft function are displayed to allow ON/OFF setting of the anti draft. Anti draft is turned OFF by tapping ON and turned ON by tapping OFF.

When two or more indoor units equipped with anti draft function are connected to the R/C, the two or more indoor units are displayed.

All of the connected indoor units that are equipped with anti draft function are turned OFF by pressing the **All OFF** button.

All of the connected indoor units that are equipped with anti draft function are turned ON by pressing the **All ON** button.

Ventilation operation (when ventilation device is installed)

The ventilation is turned on or off if the ventilation device is installed.

- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **External ventilation**.

■The ventilation operation is enabled in case that the External ventilation is set "Independent" (refer to the installation manual for details).

■In case that the External ventilation is set "Disable" or "Interlocking" the ventilation operation is disable.

External ventilation

Venti. ON Venti. OFF

Select Venti. ON/OFF. Back

- 2 The External ventilation screen is displayed.


If the **Venti. ON** button is tapped, the ventilation operation starts.

To stop the ventilation operation, tap the **Venti. OFF** button.

■In case that the Ventilation is set "Interlocking", the ventilation operates interlocked with Run/Stop operation of air conditioner (refer to Installation Manual).


Initial settings

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Initial settings**.

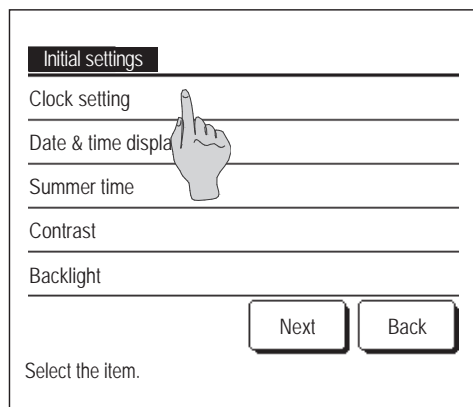

- 2 When the "Initial settings" menu screen is displayed, tap a desired item.


- Clock setting page 38
- Date & time display page 39
- Summer time page 40
- Contrast page 40
- Backlight page 41
- Controller sound page 41
- Operation lamp luminance page 42

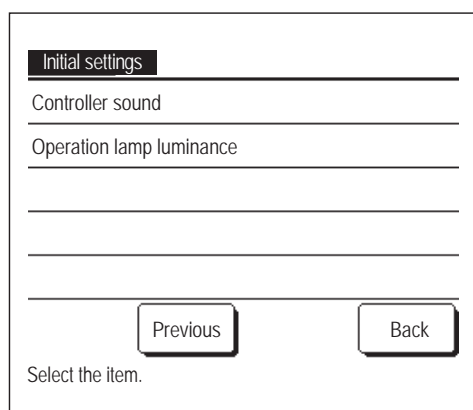

■Clock setting

You can set and correct the current date and time.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Initial settings** ⇒ **Clock setting**.

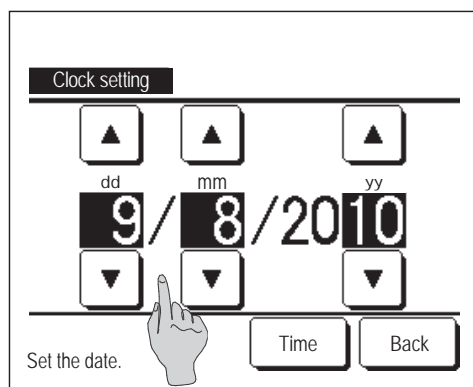


- 2 The "Clock setting" screen is displayed.

Set the "dd/mm/yy" with the buttons.

Tap the **Time** button after the setting.

■The "clock setting" is necessary for the following settings.

- Peak-cut timer
- Set ON timer by clock, Set OFF timer by clock
- Weekly timer
- Outdoor unit silent mode timer
- Filter sign reset, Setting next cleaning date

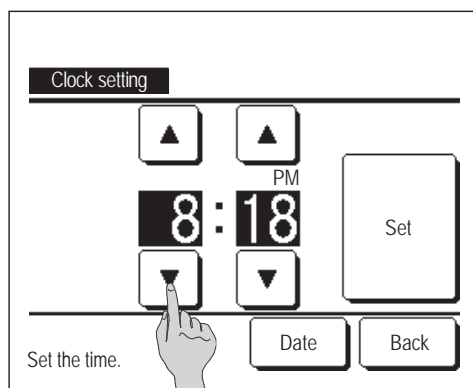

- 3** Set the "hour : minute" with the buttons on the clock setting screen.


Tap the button after the setting.

To change "dd/mm/yy" tap the button.

■Date & time display

You can set and correct the date & time display.

- 1** Tap the button on the TOP screen and select ⇒ ⇒ .

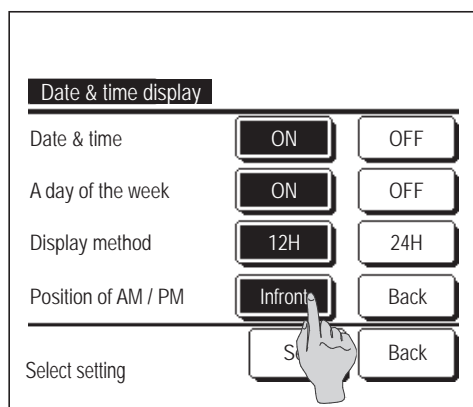

- 2** The Clock setting screen is displayed.

Tap / for the Date and time.

Tap / for A day of the week.

Tap Display method "12H or 24H".

Hours ... If it is 3:50 PM, it displays "3:50PM".

Hours ... If it is 3:50 PM, it displays "15:50".

Set the position of AM/PM.

Set ... "PM3:50" is displayed.


Set ... "3:50PM" is displayed.

- 3** Tap the button after the setting.

■Summer time

You can adjust the current time by one hour.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Initial settings** ⇒ **Summer time**.

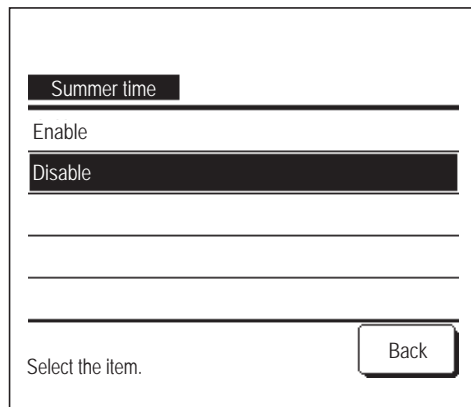

- 2 The Summer time setting screen is displayed.


Changing from **Disable** to **Enable** ... (Current time + 1 hr) is displayed.

Changing from **Enable** to **Disable** ... (Current time – 1 hr) is displayed.

■Contrast

You can adjust the contrast of the LCD.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Initial settings** ⇒ **Contrast**.

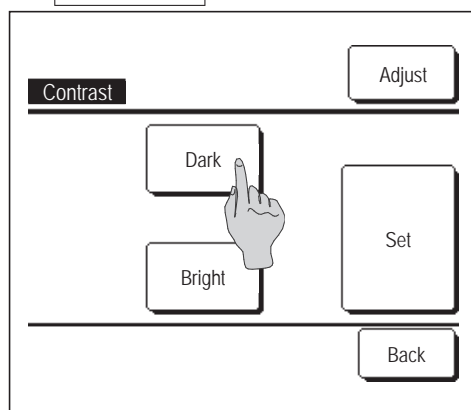


- 2 The Contrast Adjustment screen is displayed.

Tap the "Contrast" on the Initial settings menu screen. The contrast on the screen changes by tapping the **Dark** or **Bright** button to select a desired contrast.

- 3 Tap the **Set** button after the setting.

[When the contrast differs between the top and bottom of the screen]

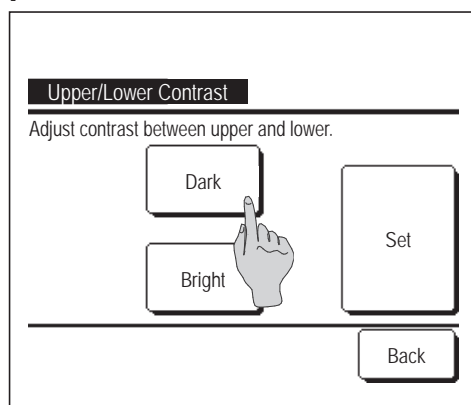

- 4 Tap the **Adjust** button to display the Upper/Lower Contrast screen.


- 5 The contrast of the lower half of the screen changes when you tap the **Dark** / **Bright** button. Adjust the contrast so that the upper and lower halves of the screen match.

- 6 After you make the settings, tap the **Set** button.

■Backlight

You can turn ON/OFF the backlight and set the lighting period.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Initial settings** ⇒ **Backlight**.

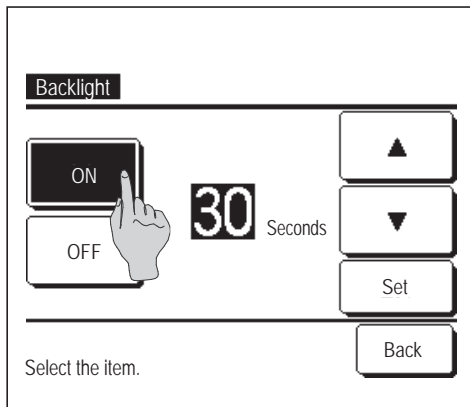

- 2 The Backlight setting screen is displayed.

Tap the ON or OFF buttons for the backlight lighting and the lighting Period (5 - 90 sec, at 5-sec intervals).

ON ... The "Backlight" lights when the LCD is tapped.

If no operation is made for the set time, it turns off automatically.


OFF ... The "backlight" does not light even if the LCD is tapped.

- 3 Tap the **Set** button after the setting.

■Controller sound

You can set to have the controller sound ON/OFF when the touch panel is operated.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Initial settings** ⇒ **Controller sound**.

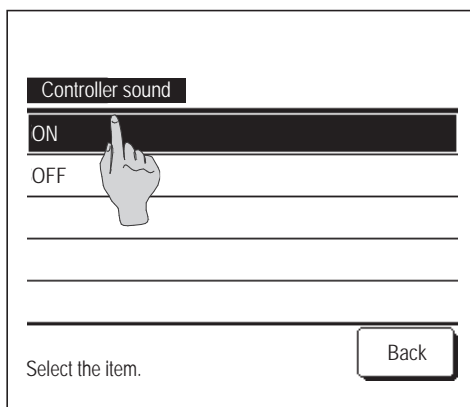

- 2 The Controller sound setting screen is displayed.

Tap ON or OFF for the controller sound.


ON ... When a button on the screen is tapped, a "beep" sounds.

OFF ... There is no beep.

■Operation lamp luminance

You can adjust the operation lamp luminance.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Initial settings** ⇒ **Operation lamp luminance**.

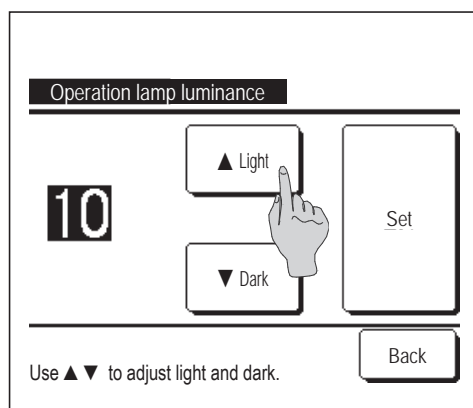


- 2 The Operation lamp luminance adjustment screen is displayed.
You can adjust the luminance of the operation lamp to a desired level by tapping the **▲ Light** / **▼ Dark** button.
- 3 After you make the settings, tap the **Set** button.

Timer

Advice

· The Clock setting (☞page 38) must be made when the Set ON timer by clock or Set OFF timer by clock is used.

- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Timer**

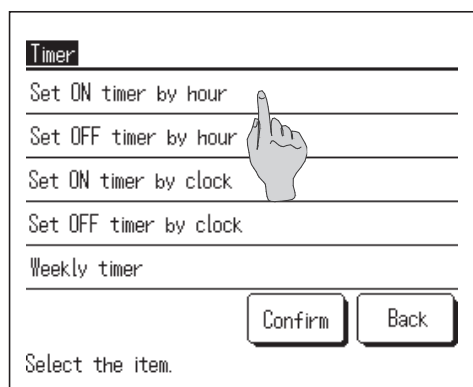

- 2 Tap a desired item on the Timer menu.
 - Set ON timer by hour☞page 44
 - Set OFF timer by hour☞page 46
 - Set ON timer by clock☞page 47
 - Set OFF timer by clock☞page 49
 - Weekly timer☞page 50
 - Confirm☞page 54

When the timer is set, the **Confirm** button is displayed.

The button is not displayed unless the timer is set.

■ Operation of each timer

• Sleep timer (☞ page 24)

Stops the operation of the unit when the amount of time set has elapsed since the start of the operation. When the setting is enabled, this timer will activate whenever any operation starts.

• Set ON timer by hour (☞ page 44)

When the set time elapses, the air conditioner starts.

Operating conditions at the start of operation can be set.

Operation takes place once at each setting.

• Set OFF timer by hour (☞ page 46)

When the set time elapses, the air conditioner stops.

Operation takes place once at each setting.

• Set ON timer by clock (☞ page 47)

The air conditioner starts at the set time.

Operating conditions at the start of operation can be set.

Only one day (Once) operation or operation Everyday can be set.

• Set OFF timer by clock (☞ page 49)

The air conditioner stops at the set time.

Only one day (Once) operation or operation Everyday can be set

• Weekly timer (☞ page 50)

On timer and Off timer on weekly basis can be set.

■ Setting of each timer can be combined. Allowable combination settings are as shown below.

Allowable combination setting (○: Allowed, ×: Prohibited)

	Sleep	OFF: Hours	ON: Hours	OFF: Clock	ON: Clock	Weekly
Sleep		×	×	○	○	○
OFF: Hours	×		×	×	×	×
ON: Hours	×	×		×	×	×
OFF: Clock	○	×	×		○	×
ON: Clock	○	×	×	○		×
Weekly	○	×	×	×	×	

If a prohibited combination setting is made, a message "The combination can't be accepted" is displayed for 3 seconds.

■ Priority order of the timer settings (①→③) is as follows.

① Set OFF timer by hour/clock, weekly OFF timer

② Sleep timer


③ Set ON timer by hour/clock, weekly ON timer

■ On the TOP screen, the timer is displayed from the earliest one out of OFF time of the sleep timer, ON time and OFF time.

■Set ON timer by hour

When the set time elapses, the air conditioner starts.

- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Timer** ⇒ **Set ON timer by hour**.

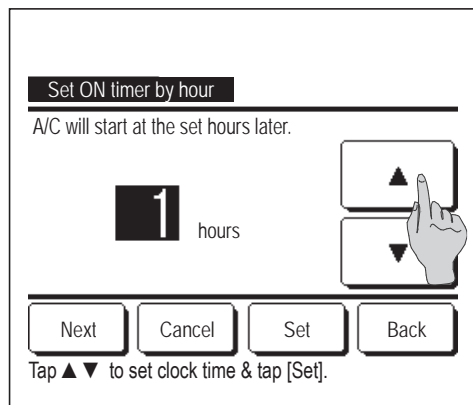


- 2 The Set ON timer by hour setting screen is displayed.

Select desired hours for the period to start operation by timer with the **▲** **▼** buttons.

Range of setting time: 1 to 12 hours (at 1-hr intervals)

- 3 When operating conditions at the start of operation are set, tap the **Next** button. (→ 4)

When operating conditions are not set, tap the **Set** button.

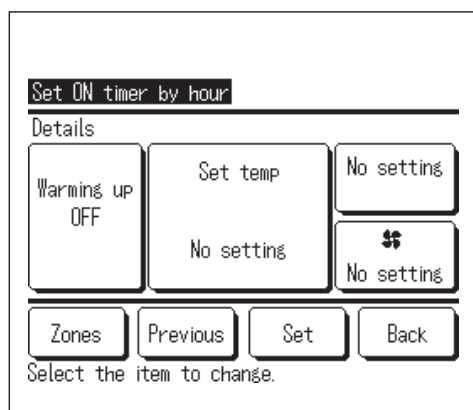

- 4 Set the following operating conditions.

① Warming up ON/OFF (the Main R/C only)

② Operation mode ... → 5

③ Set temp ... → 6

④ Fan speed ... → 7

⑤ Zones (*) ... → 8


■ Warming up setting can be made with the main R/C only.

■ Set the operation mode before setting the set temperature.

(*) RC-EXZ3D only


Advice **Warming up**

- To warm up the room temperature closed to the set temperature at the set start time of the operation, the microcomputer estimates the start time of the operation based on the last warming up operation and starts the operation 5 to 60 minutes earlier.
- When the warming up is turned ON, set the timer at one hour earlier or more than the start operation by timer.
If it is set in less than one hour, a message "Warming up cancelled" is displayed on the screen. (This is used as the Set ON timer by hour and clock.)

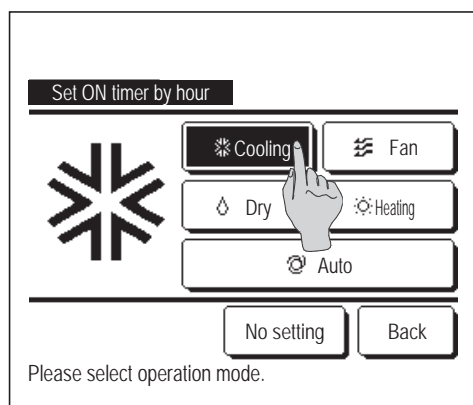

- 5 Tap a desired operation mode.


If the **No setting** button is tapped, it starts operation at the last action. (→ 4)

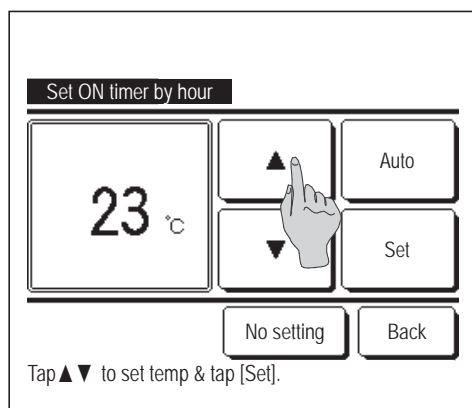

- 6** Select a desired temperature (at 1°C intervals) with the buttons. Or tap the button and select the auto temp setting.


Tap the button after the adjustment. (👉4)

When the button is tapped, "-- °C" is displayed, and it starts operation at the last setting temperature.

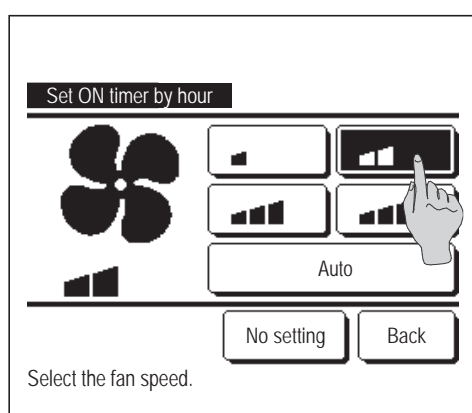

- 7** Tap a desired fan speed.

If the button is tapped, it operates at the last action. (👉4)

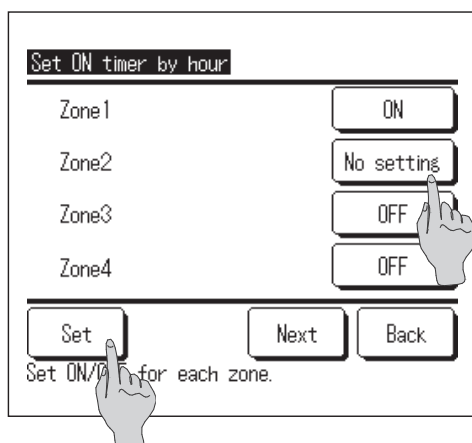

- 8** Tapping the button makes it possible to perform zone operation settings at the time of timer working. Set / / (No setting/OPEN/CLOSE) for each zone during timer operation. (*) RC-EXZ3D only



Setting will operate in the previous zone state at the time of timer working.

Tap button to set Zone5~8.

After the setting, tap the button.

The display returns to the previous screen.


- 9** After setting the desired contents at the screen of the step 4, tap the button.

Operation will start at set hours later.

■Set OFF timer by hour

When the set time elapses, the air conditioner stops.

- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Timer** ⇒ **Set OFF timer by hour**.

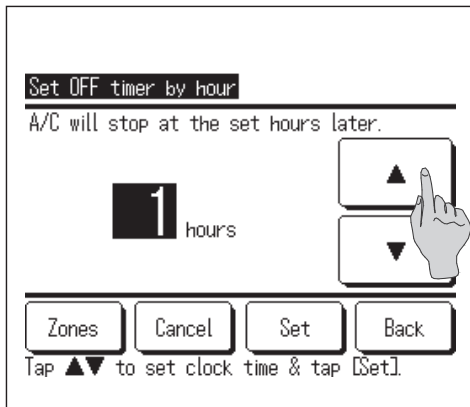

- 2 The Set OFF timer by hour setting screen is displayed.


Select desired hours to stop operation with the ▲ ▼ buttons.

Range of setting time: 1 to 12 hours (at 1-hr intervals)

- 3 The **Zones** button is displayed when performing zone settings. Tapping the **Zones** button makes it possible to perform zone operation settings at the time of timer working. (The **Zones** button is not displayed when not performing zone settings. Proceed to step 4.)

(*) RC-EXZ3D only


- 4 After the setting, tap the **Set** button. The display returns to the Timer menu screen.

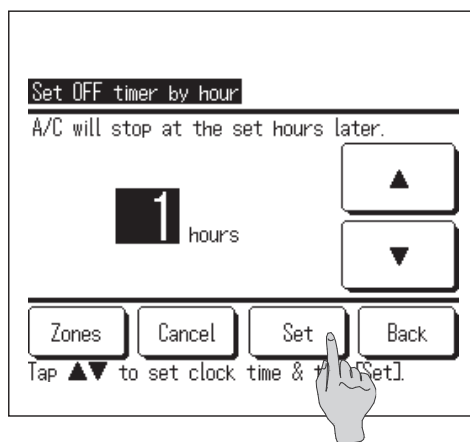

■Set ON timer by clock

Starts the operation of the unit at the set clock time.

- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Timer** ⇒ **Set ON timer by clock**.

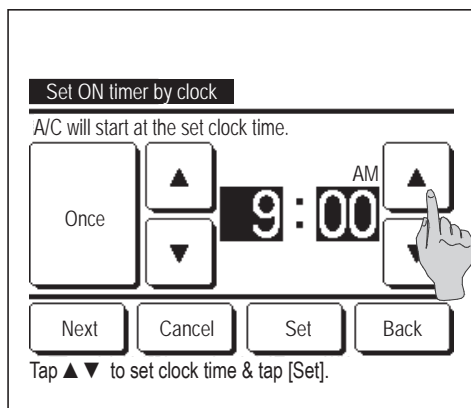

- 2 The Set OFF timer by hour setting screen is displayed.

Select a desired time to start operation (5-min intervals) with the **▲** **▼** buttons.


- 3 When operating conditions at the start of operation are set, tap the **Next** button to set operation conditions.

The operation conditions can be set the same way as the Set ON timer by hour settings (page 44 **4** to **7**)

If operating conditions are not set, tap the **Set** button.

The Set ON timer by clock can be operated one day (Once) or everyday.

If it is operated everyday, tap the **Once** / **Everyday** button to change the display to "Everyday".

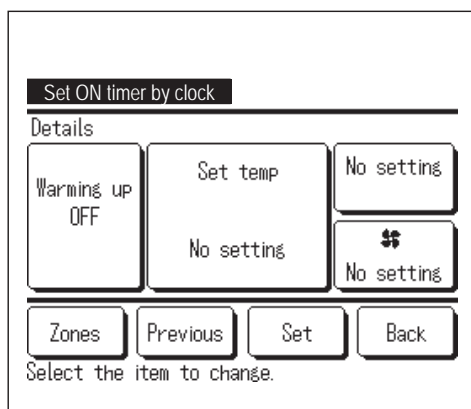

- 4 Set the following operating conditions.

① Warming up ON/OFF (the Main R/C only)

② Operation mode ... **5**

③ Set temp ... **6**

④ Fan speed ... **7**

⑤ Zones (*) ... **8**

■ Warming up setting can be made with the main R/C only.


■ Set the operation mode before setting the set temperature.

(*) RC-EXZ3D only

Advice


Warming up

- To warm up the room temperature closed to the set temperature at the set start time of the operation, the microcomputer estimates the start time of the operation based on the last warming up operation and starts the operation 5 to 60 minutes earlier.
- When the warming up is turned ON, set the timer at one hour earlier or more than the start operation by timer.
If it is set in less than one hour, a message "Warming up cancelled" is displayed on the screen. (This is used as the Set ON timer by hour and clock.)

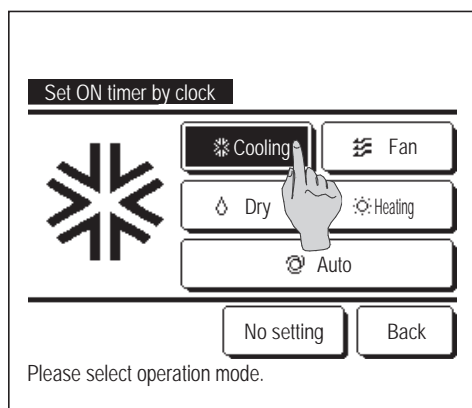

5 Tap a desired operation mode.

If the **No setting** button is tapped, it starts operation at the last action. (4)

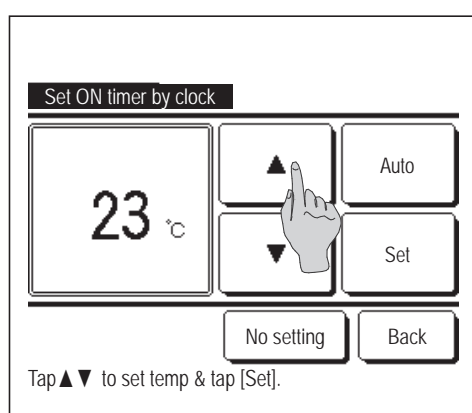


6 Select a desired temperature (at 1°C intervals) with the

▲ ▼ buttons. Or tap the **Auto** button and select the auto temp setting.


Tap the **Set** button after the adjustment. (4)

When the **No setting** button is tapped, "--°C" is displayed, and it starts operation at the last setting temperature.

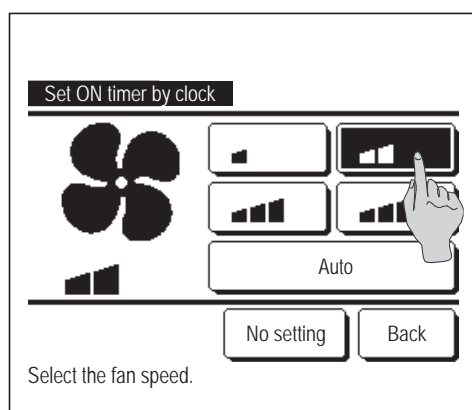

7 Tap a desired fan speed.

If the **No setting** button is tapped, it operates at the last action. (4)

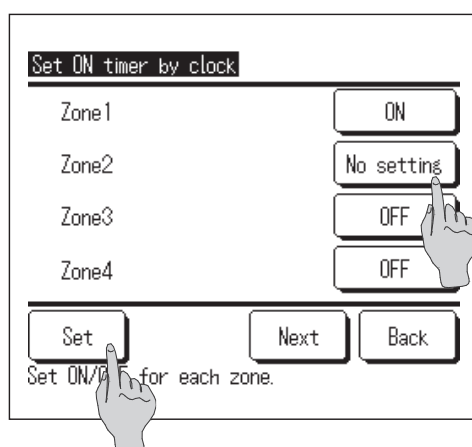

8 Tapping the **Zones** button makes it possible to perform zone operation settings during timer operation. Set **No setting** / **ON** / **OFF** (No setting/OPEN/CLOSE) for each zone at the time of timer working. (*) RC-EXZ3D only



Setting **No setting** will operate in the previous zone state at the time of timer working.

Tap **Next** button to set Zone5~8.

After the setting, tap the **Set** button.

The display returns to the previous screen.


- 9** After setting the desired contents at the screen of the step **4** on the previous page, tap the **Set** button.

Operation will start at set hours later.

■Set OFF timer by clock

Stops the operation of the unit at the set clock time.

- 1** Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Timer** ⇒ **Set OFF timer by clock**.

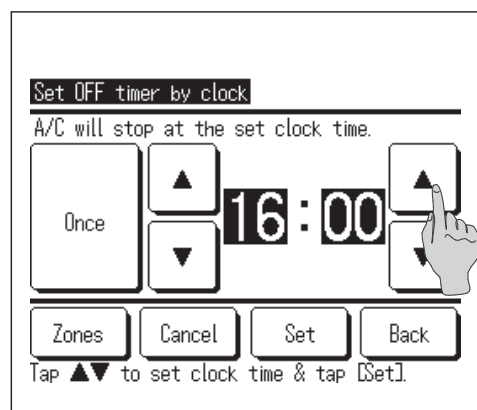


- 2** The Set OFF timer by clock setting screen is displayed.

Select a desired time to stop operation (5-min intervals) with the **▲** **▼** buttons.

- 3** The **Zones** button is displayed when performing zone settings. Tapping the **Zones** button makes it possible to perform zone operation settings at the time of timer working. (The **Zones** button is not displayed when not performing zone settings. Proceed to step **4**.)

(*) RC-EXZ3D only

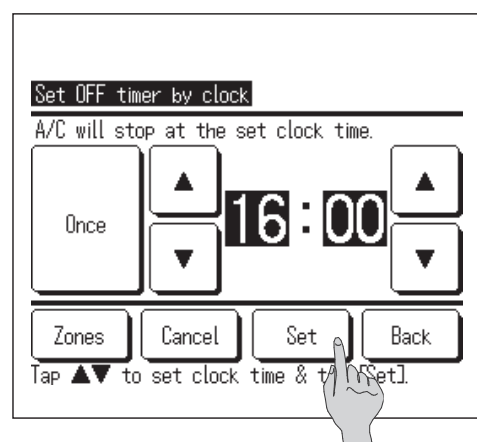

- 4** After the setting, tap the **Set** button. The display returns to the Timer menu screen.

The Set OFF timer by clock can be operated one day (Once) or everyday.

If it is operated everyday, tap the **Once** / **Everyday** button to change the display to **Everyday**.

■Weekly timer

You can set four on timer and off timer operations for each day of the week.


Advice

- The Clock setting (☞ page 38) must be made when the weekly timer is used.
- The weekly timer can be set from the main R/C only.

1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Weekly timer**.


Enter the administrator password if the administrator password input screen is displayed.

■ There are cases that the Input password screen is displayed by the Permission/Prohibition setting.
(☞ page 61)

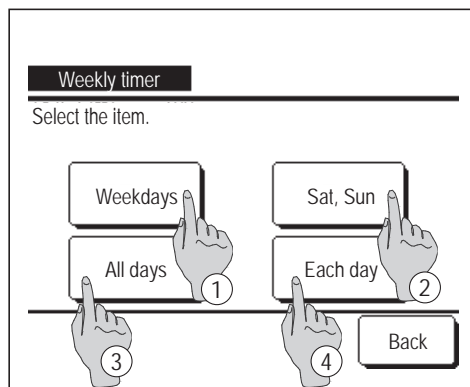

2 When the screen to select the setting range, select a day of the week to be set.

- ① Weekdays : Monday - Friday
- ② Sat. Sun : Saturday, Sunday
- ③ All days : Monday - Sunday
- ④ Each day : Moves to the day of the week setting screen. (☞ 3)

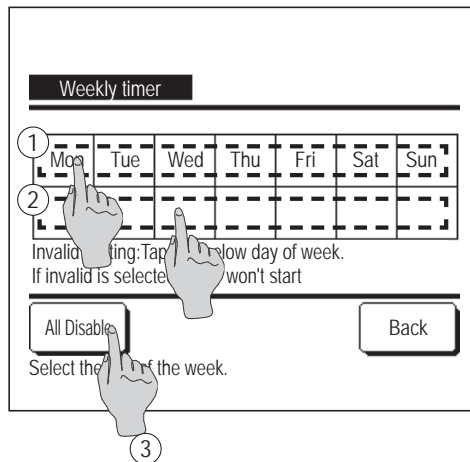

3 When a desired day of the week ① is tapped on the display, contents of current setting for the day are displayed. (☞ 5)

4 For the holiday setting, tap the block ② under the day to switch between "☒" (the holiday setting) and "(Blank)" (reset).


Timer does not operate on the day set as holiday.

Two or more holidays can be set.

■ To enable the timer on the day set as holiday, it is necessary to reset the holiday setting.


When tapping ③ "All Disable" button, the timer does not operate on all days of the week.

When the timer is used, be sure not to set "All Disable".

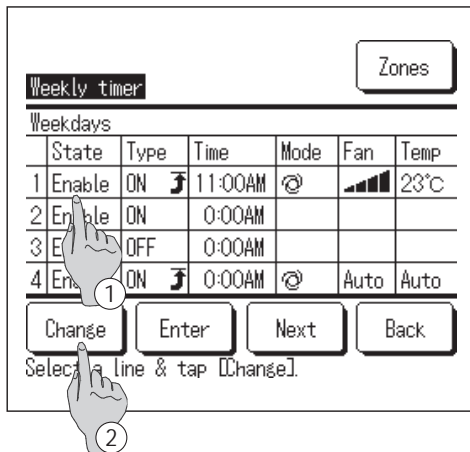

5 Screen to check contents of current setting is displayed.


When the contents are changed or new setting is added, select a ① setting line No. and tap the ② [Change] button.

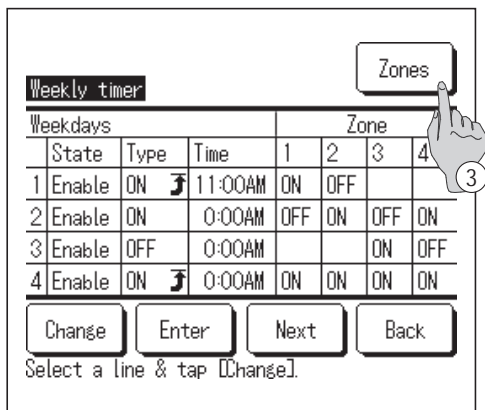

■ The ③ [Zones] button is displayed when performing zone settings. Tapping the ③ [Zones] button will display the set zone states.

Tap [Zones] button to display Zone5-8 settings.

(*) RC-EXZ3D only

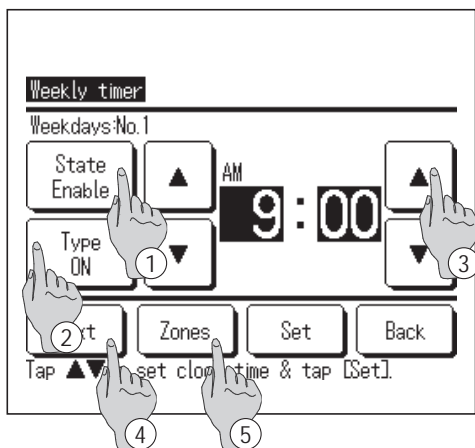

6 Detail setting screen for the timer setting contents is displayed.

① Tap the [State] button to switch between "State Enable" and "State Disable".


② Tap the [Type] button to switch between the "OFF timer" and the "ON timer".

③ Select a desired time (at 5-min intervals) with the ▲ ▼ buttons.

④ In case of "ON timer" when the [Next] button is tapped, operating conditions at the start of operation can be set. (☞7)

⑤ The [Zones] button is displayed when performing zone settings. Tapping the [Zones] button will display the set zone states.

(☞11) (*) RC-EXZ3D only

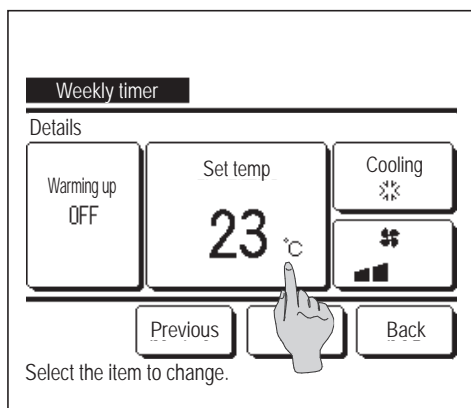

7 Set the following operating conditions.

① Warming up ON/OFF


(Operation starts 5 to 60 minutes earlier in order to warm up the room temperature closed to the set temp at the set start time of operation.)

② Operation mode ... 8

③ Set temp ... 9


④ Fan speed ... 10

■ Set the operation mode before setting the set temperature.

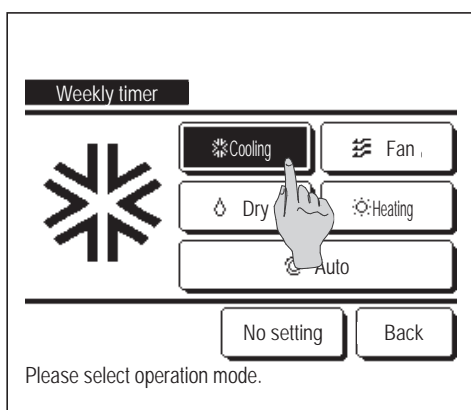

8 Tap a desired operation mode.

When the **No setting** button is tapped, it operates with the same operation mode at the last action. (7)

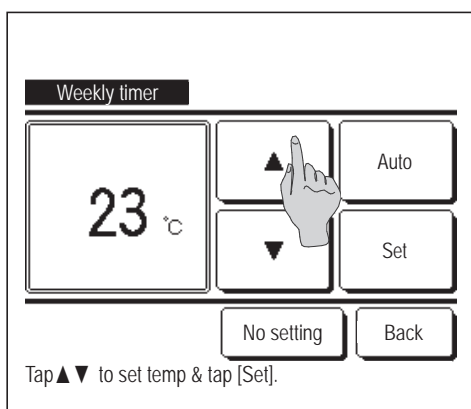


9 Select a desired temperature (at 1°C intervals) with the

▲ ▼ buttons. Or tap the **Auto** button to select the Auto temp setting.


Tap the **Set** button after the selection. (7)

When the **No setting** button is tapped, "-- °C" is displayed, and it starts operation at the last setting temperature.

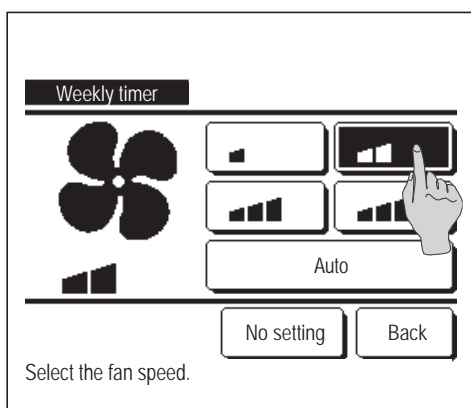


10 Tap a desired fan speed.

When the **No setting** button is tapped, starts operation at the last fan speed. (7)

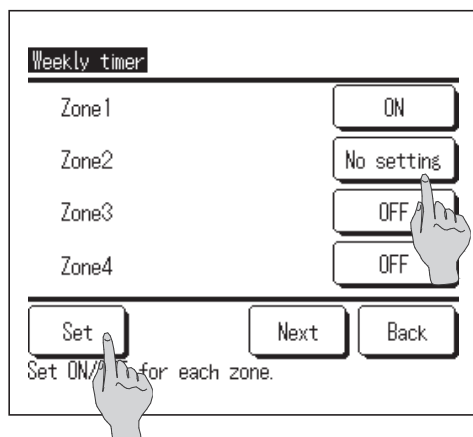

 - 11** Tapping the **Zones** button will transition to the zone operation setting screen. Set **No setting** / **ON** / **OFF** (No setting/OPEN/CLOSE) for each zone at the time of timer working.



Setting **No setting** will operate in the previous zone state at the time of timer working.

Tap **Next** button to set Zone5~8.

After the setting, tap the **Set** button.

The display returns to the previous screen.

(*) RC-EXZ3D only


- 12** After setting desired contents at the screen of **7**, tap the **Set** button.

- 13** Display the setting contents check screen. To register the setting, tap the **Enter** button.

(1) In case of group setting (2-①Weekdays, 2-②Sat/Sun, 2-③All days setting), move to the group setting screen. (➡ **14**)

(2) In case of the individual setting (2-④Each day setting), save the setting and move to a day of the week selection screen.


(➡ **3**)

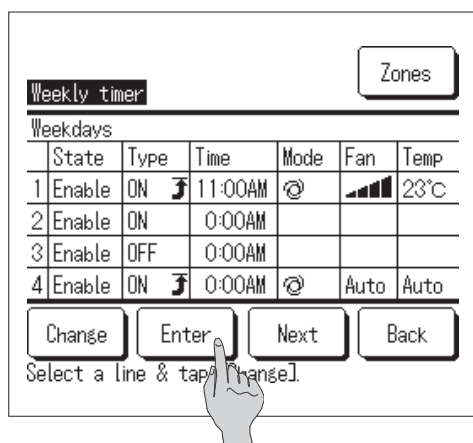


- 14** Display the group setting acknowledge screen. Tap the **Yes** button and save the setting.

The display changes to a day of the week setting check screen after saving. (➡ **3**)

When making the setting after changing a day of the week, repeat the setting from the step **3**.

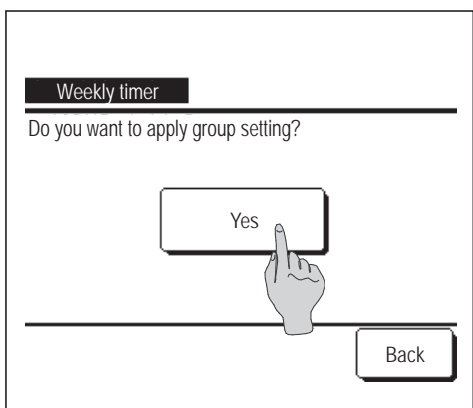

■Confirm

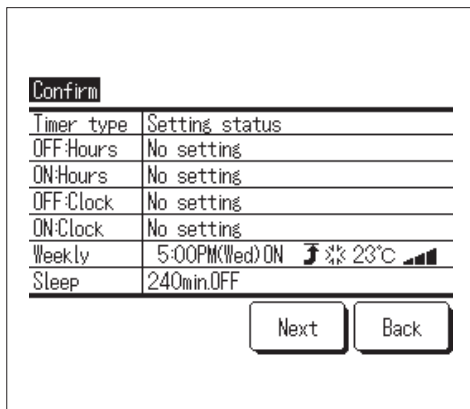


- 1 When you tap the **Confirm** button on the Timer menu screen, the contents of the current timer settings are displayed.

■When the warming up is set, " " is displayed in front of the operation mode on confirmation screen.

■The **Next** button is displayed when performing zone settings. Tapping the **Next** button will display the set zone states.

(*) RC-EXZ3D only

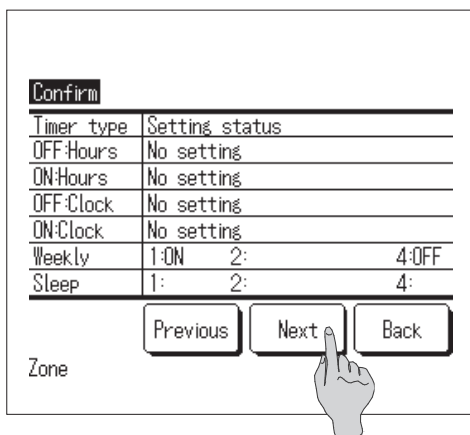

■Tapping the **Next** button will display Zone5~8.

(*) RC-EXZ3D only

Home leave mode [Administrator password]

Use this function to maintain the room temperature at a moderate level for avoiding extremely hot or cool after leaving home.

■Cooling and heating operations are controlled according to the outdoor air temperature.

■The set temperature and fan speed can be set.

Advice


- The Clock setting (☞page 38) must be made when the home leave mode is used.
- The home leave mode can be controlled from the main R/C only.

[To start operation from the Menu button]

- 1 Tap the Menu button on the TOP screen and select Useful functions ⇒ Home leave mode.

The administrator password input screen is displayed.


Input the administrator password.

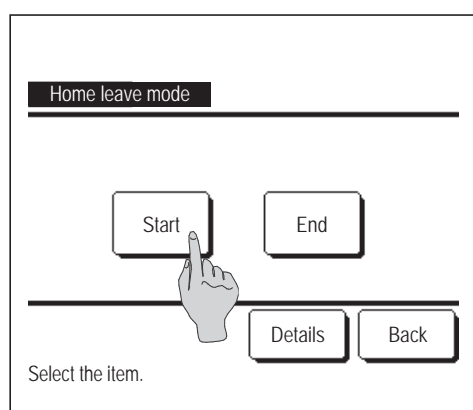

- 2 Display the Home leave mode (Start, End) screen.

Tap the Start button to start the home leave mode operation.

To stop the home leave mode operation, tap the End button.

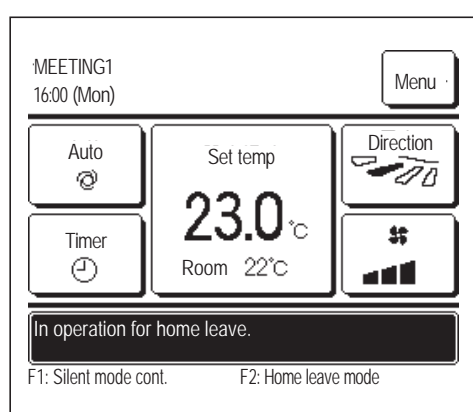

- 3 When the unit is in Home leave mode, "In operation for home leave." will be displayed on the message display.

[To start operation from the F1, F2 switches]

Use the F1/F2 function setting to change the function of the F1 (F2) switch to Home leave mode.

When you press the F1 (F2) switch, the administrator password input screen is displayed.

After you enter the password, the home leave mode will start.

To terminate the home leave mode, press the F1 (F2) button again.



Note

Home leave mode will be ended when you perform one of the following.

- When you switch the run/stop of the A/C. (Including the operation by timer)
- When you change the set temperature.
- When you change the operation mode.

[To change the operation conditions]


- 1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Home leave mode** ⇒ **Details**.

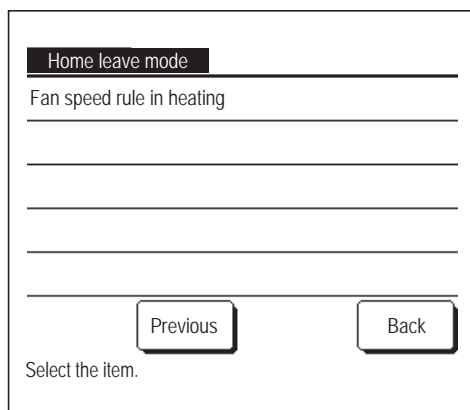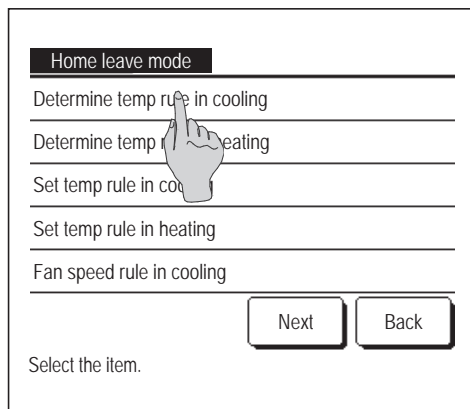


- 2 The Details setting menu is displayed. The following items can be set.

- ① Determine temp rule in cooling: Set the outdoor temperature to judge the operation mode in cooling.
Allowable setting range: 26°C to 35°C (at 3°C intervals)
Factory settings: 35°C (3)
- ② Determine temp rule in heating: Set the outdoor temperature to judge the operation mode in heating.
Allowable setting range: 0°C to 15°C (at 3°C intervals)
Factory settings: 0°C (4)
- ③ Set temp rule in cooling: Set the indoor temperature to start operation in cooling.
Allowable setting range: 26°C to 33°C (at 1°C intervals)
Factory settings: 33°C (5)
- ④ Set temp rule in heating: Set the indoor temperature to start operation in heating.
Allowable setting range: 10°C to 18°C (at 1°C intervals)
Factory settings: 10°C (6)
- ⑤ Fan speed rule in cooling: Set the fan speed in cooling mode.
Factory settings: Low (7)
- ⑥ Fan speed rule in heating: Set the fan speed in heating mode.
Factory settings: Low (8)


■ Items set at the details setting menu are effective for the operation at the next home leave mode.

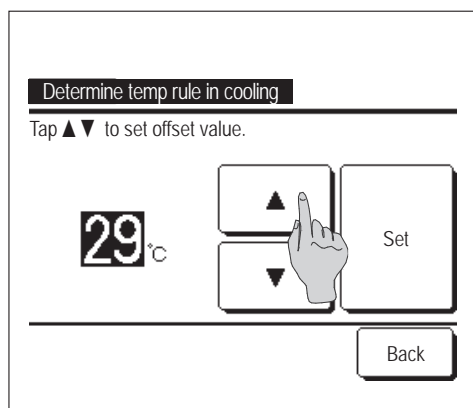


- 3** Set the outdoor temperature for the “Determine temp rule in cooling”.
Select a desired setting temperature (26°C to 35°C, at 3°C intervals).
with the buttons.
Tap the button after the setting.

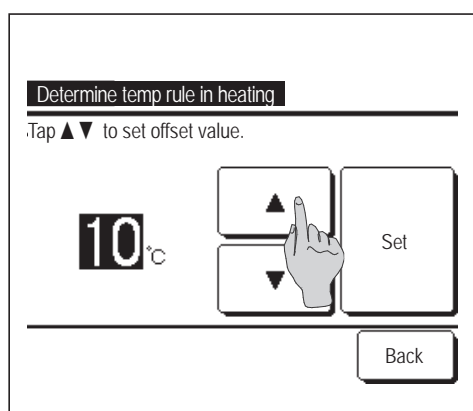


- 4** Set the outdoor temperature for the “Determine temp rule in heating”.
Select a desired set temp (0°C to 15°C, at 5°C intervals) with the
 buttons.
Tap the button after the setting.

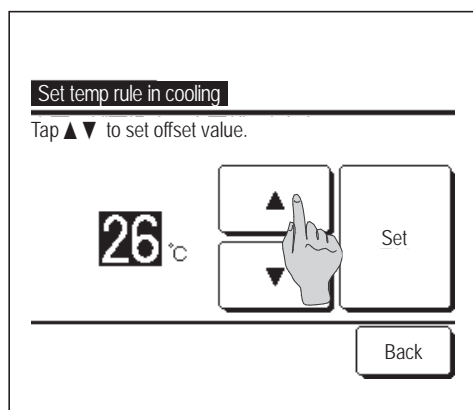

- 5** Set the indoor temperature to start operation in cooling after setting
the “Determine temp rule in cooling”.
Select a desired set temp (26°C to 33°C, at 1°C intervals) with the
 buttons.
Tap the button after the setting.

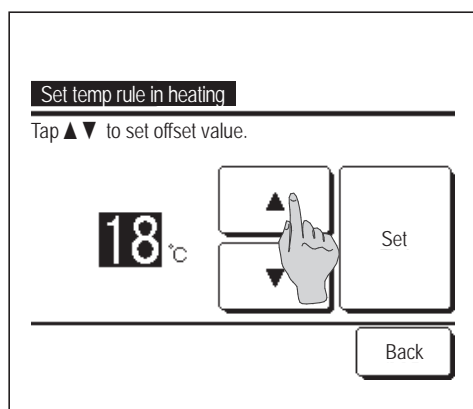


- 6** Set the indoor temperature to start operation in heating after setting
the “Determine temp rule in heating”.
Select a desired set temp (10°C to 18°C, at 1°C intervals) with the
 buttons.
Tap the button after the setting.

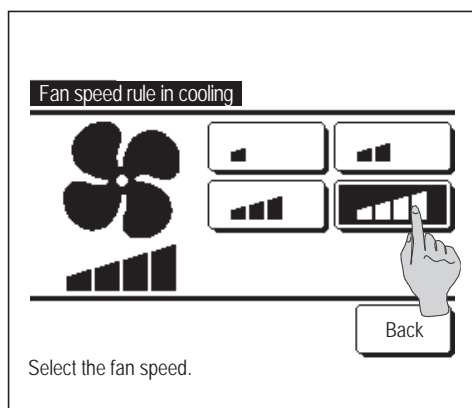

7 Set the fan speed in cooling mode.

Tap a desired fan speed.

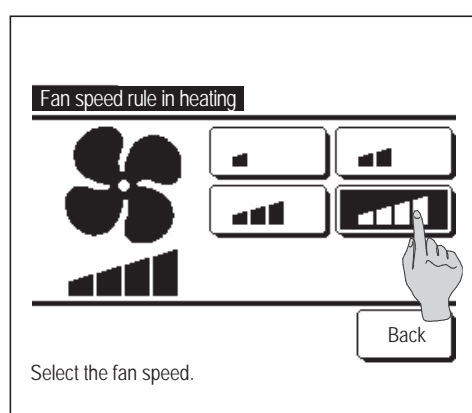

8 Set the fan speed in heating mode.

Tap a desired fan speed.

9 After the settings of steps **3** to **8**, the display returns to the Details setting menu **1**.


Tap the **Back** button to return to the Home leave mode screen. To start operation, tap the **Start** button.

Registering favorite settings

Operation mode, set temp, fan speed, fan direction can be registered as Favorite set 1 and Favorite set 2.

Allocating these settings to the **F1** and **F2** switches allows you to perform operations with these registered settings with a single tap of the button (☞ page 72).

Refer to the F1/F2 function setting (☞ page 72) on how to set the **F1** and **F2** switches.

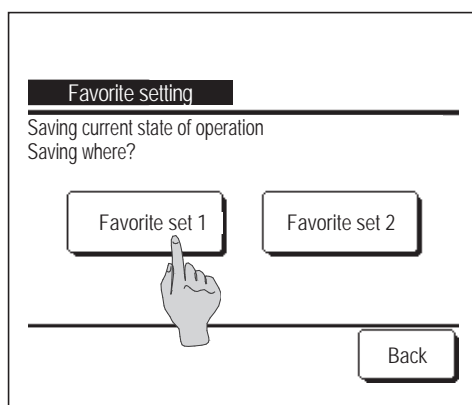

1 On the TOP screen, set the desired operation mode, set temp, fan speed, and flap direction.

Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Favorite setting**.

The administrator password input screen is displayed.

Enter the administrator password.

■ You cannot register the favorite settings during high power and energy-saving operations.

2 The save location selection screen for favorite settings is displayed.

Select the save location.


If there is any data that was previously saved, that data will be overwritten.

Favorite setting operation

You can start an operation with the operation mode, set temp, fan speed, flap direction registered to Favorite set 1 and Favorite set 2.

Settings for the operation mode, set temp, fan speed, flap direction can be registered from Favorite setting on the menu (☞ page 58).

Favorite setting operation must be set to the **F1** or **F2** switch (☞ page 72).

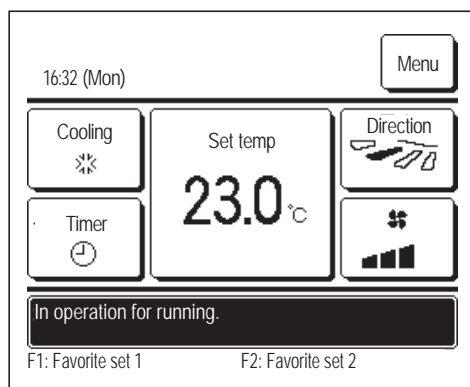

1 When you press the **F1** (**F2**) switch, the operation mode, set temp, fan speed, flap direction registered to Favorite set 1 or Favorite set 2 will be enabled.

- Operation will start even if you press the **F1** (**F2**) switch while the unit is stopped.
- You can change the operation mode, set temp, fan speed, flap direction after the operation has started with the favorite setting operation.
- Following power on, the unit starts to operate initially with the following settings for both Favorite set 1 and Favorite set 2.

Operation mode	...Cooling
Set temp	...28°C
Fan speed	...3-speed
Flap direction	...Position 2 (☞ page 10)

*When an FDK with a left/right flap is connected

Left/right flap direction	...Center
3D AUTO	...Disabled
- When Change set temp, Change operation mode, Change flap direction, Change fan speed are restricted by the Permission/Prohibition setting (☞ page 61), restricted items will not be reflected to the Favorite setting operation.

Administrator settings [Administrator password]

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings**.

The administrator password input screen is displayed.

Enter the administrator password.

Administrator settings

Permission/Prohibition setting

Outdoor unit silent mode timer

Setting temp range

Temp increment setting

Set temp display

Next Back

Select the item.

- 2 When the administrator setting menu is displayed, tap a desired item.

- Permission/Prohibition setting ... page 61
- Outdoor unit silent mode timer ... page 62
- Setting temp range ... page 63
- Temp increment setting ... page 65
- Set temp display ... page 65
- R/C display setting ... page 66
- Change administrator password ... page 71
- F1/F2 function setting ... page 72
- Refrigerant leak detector setting ... page 73

Administrator settings

R/C display setting

Change administrator password

F1/F2 function setting




Refrigerant leak detector setting

Previous Back

Select the item.

■Permission/Prohibition setting

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **Permission/Prohibition setting**. The Permission/Prohibition setting menu is displayed.

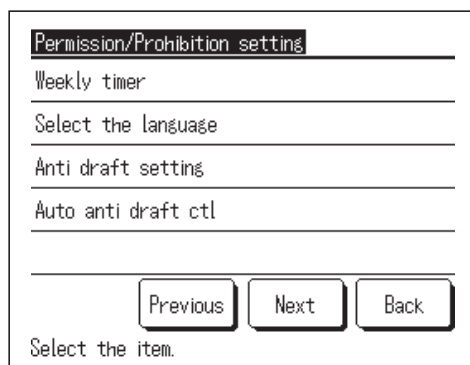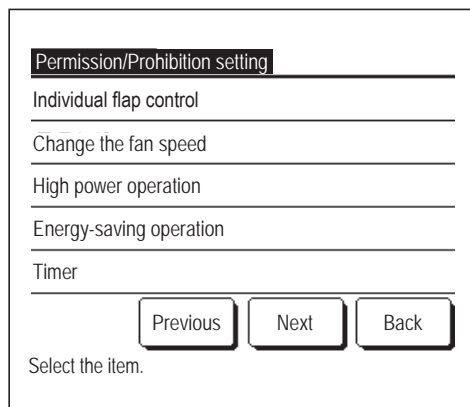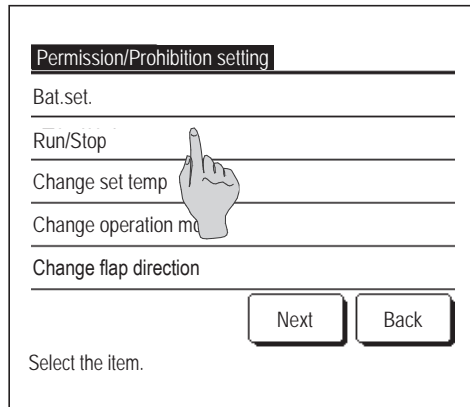

- 2 Following items can be selected, and the Permission or Prohibition can be set for them.


If the Permission is set, the operation is accepted.

If the Prohibition is set, the message "Invalid request" is displayed for 3 seconds.

Some items may require the administrator password.

■Operation with Prohibition setting

- | | |
|---------------------------|---|
| ① Bat.set | ... Can set to permit/prohibit all items from ② to ⑬ at once. |
| ② Run/Stop | ... Run/Stop operation is prohibited. |
| ③ Change set temp | ... Change set temp operation is prohibited. |
| ④ Change operation mode | ... Change operation mode operation is prohibited. |
| ⑤ Change flap direction | ... Change flap direction operation is prohibited. |
| ⑥ Individual flap control | ... Administrator password is required for this control. |
| ⑦ Change the fan speed | ... Change fan speed operation is prohibited. |
| ⑧ High power operation | ... High power operation is prohibited. |
| ⑨ Energy-saving operation | ... Energy-saving operation is prohibited. |
| ⑩ Timer | ... Timer setting operation is prohibited. |
| ⑪ Weekly timer | ... Administrator password is required for these settings. |
| ⑫ Select the language | ... Administrator password is required for this selection. |
| ⑬ Anti draft setting | ... Administrator password is required when setting anti draft and anti draft ON/OFF. |
| ⑭ Auto anti draft ctrl | ... Administrator password is required for these settings. |

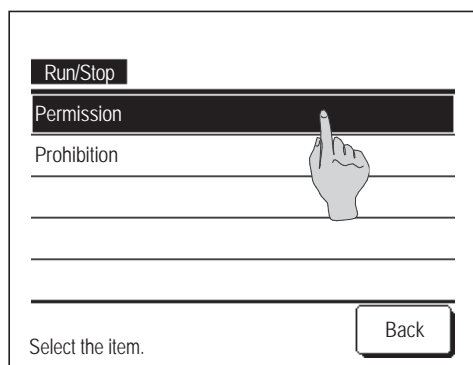

3 Tap **Permission** or **Prohibition** for each item.

■Outdoor unit silent mode timer

Set the period of time to operate the OU with prioritizing the quietness.

When the Outdoor unit silent mode timer setting is Enabled, the silent mode operation starts and ends everyday at the same time until the setting is Disable.


Silent mode operation can be started from an R/C operation without using the timer.

Use Silent mode cont. (page 72) for the **F1** and **F2** switches.

Advice

- When the Outdoor unit silent mode timer is used, the Clock setting (page 38) must be made.
- The Outdoor unit silent mode timer can be set from the main R/C only.
- The air-conditioner cannot be operated at the maximum capacity during the silent mode operation.

1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **Outdoor unit silent mode timer**.

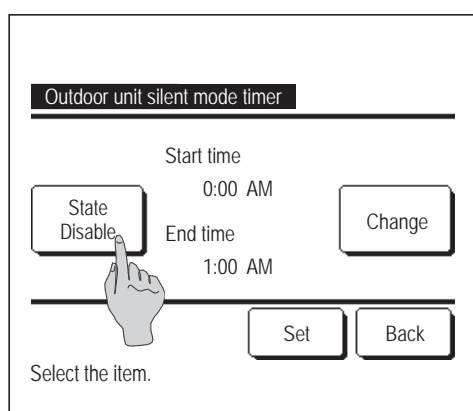


2 The Outdoor unit silent mode timer setting screen is displayed.

If it is OK that the Silent mode operation is performed at the start and end time displayed on the screen, tap the **State** button to select "State Enable".

■ When the **State** button indicates "State Disable", the Outdoor unit silent mode timer is not controlled.

After changing to a desired setting, tap the **Set** button.


To change the start time or the end time, tap the **Change** button.

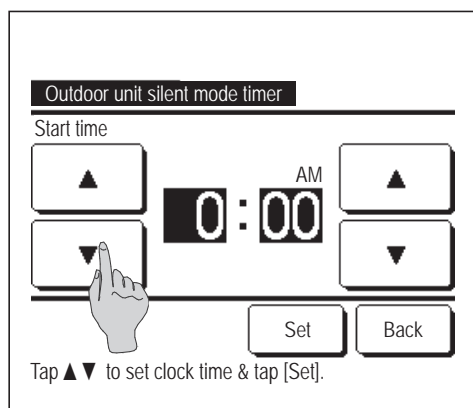

3 Set the start time for the Outdoor unit silent mode timer.

Select a desired time (at 5-min intervals) with the ▲ ▼ buttons.


If the [Set] button is tapped after setting the start time, the display changes to the end time setting screen. Set a desired time (at 5-min intervals) for the end time and tap the [Set] button.

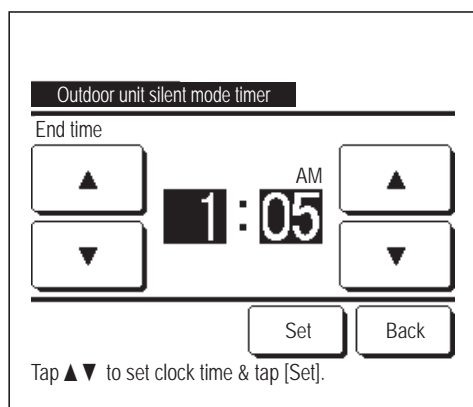

■Setting temp range


Limited range of setting temperature in the heating or the cooling operation can be selected.

- 1 Tap the [Menu] button on the TOP screen and select [User setting] ⇒ [Administrator settings] ⇒ [Setting temp range].

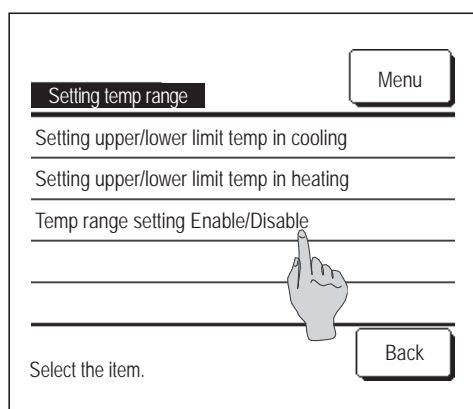

2 Setting temp range menu screen is displayed.


- ① Setting upper/lower limit temp in cooling (👉3)
... Set the range of setting temperature in the cooling operation.
(Including the Dry and Auto operations)
- ② Setting upper/lower limit temp in heating (👉4)
... Set the range of setting temperature in the heating operation.
- ③ Temp range setting Enable/Disable (👉5)
... Set whether the limit on the setting temperature range is enabled or disabled.

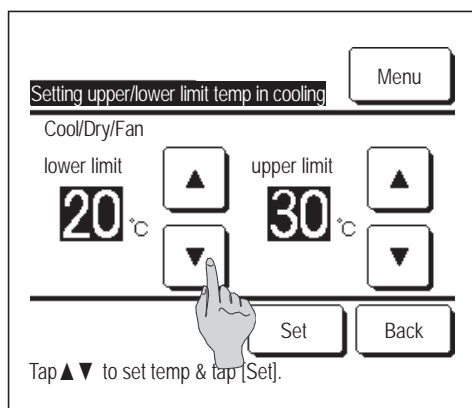



3 Set the range of setting temperature in the cooling operation.

Select at desired lower and upper limit temperatures (at 1°C intervals) with the   buttons.

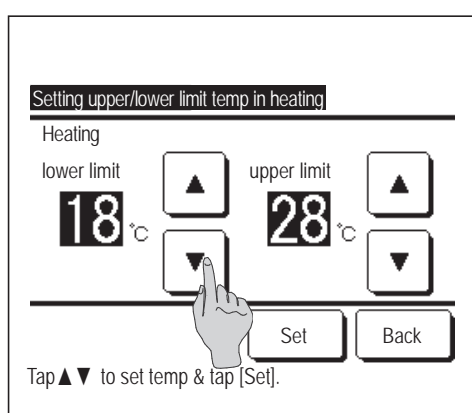After Selecting the desired settings, tap the  button.




4 Set the range of setting temperature in the heating operation.

Select desired lower and upper limit temperatures (at 1°C intervals) with the   buttons.

After selecting the desired settings, tap the  button.

■ Setting temperatures can be set in the following ranges.

	Lower limit value	Upper limit value
Cooling/Dry/Auto	16 to 28°C	30 to 35°C
Heating	10 to 22°C	22 to 30°C
Mid temperature cooling	10 to 18°C	22 to 30°C

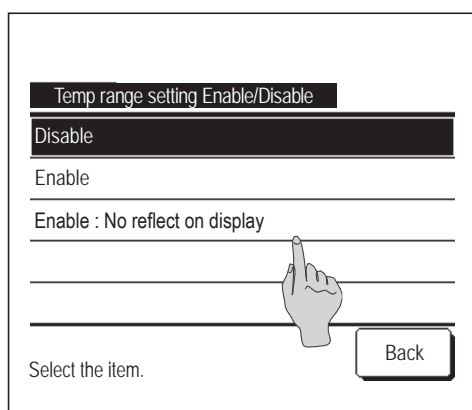

5 Select the control contents of restriction on the setting temperature range.

① Disable

... Restriction on the setting temperature range is disabled.

② Enable

... The operation is restricted within the set temperature range.

③ Enable: No reflect on display

... The set temperature on the R/C can be displayed beyond the set temperature range but actual operation is restricted within the set temperature range.


Advice

- Over-cooling during the cooling operation or over-heating during the heating operation is not economical.
- It is recommended to set the temperature range a little higher in the cooling operation or a little lower in the heating operation.

■Temp increment setting

Temperature increment for the change of the set temp can be changed.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **Temp increment setting**.

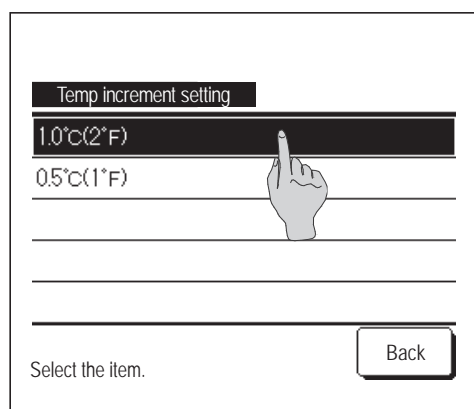

- 2 The Temp increment setting screen is displayed.


Tap a desired temperature increment.

- ① 1.0°C..... Setting temperature can be set at 1.0°C intervals.
(ex. ...⇔ 24.0°C ⇔ 25.0°C ⇔ 26.0°C ⇔...)
- ② 0.5°C..... Setting temperature can be set at 0.5°C intervals.
(ex. ...⇔ 24.0°C ⇔ 24.5°C ⇔ 25.0°C ⇔...)

■Set temp display


Set temp displayed on the TOP screen can be changed.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **Set temp display**.

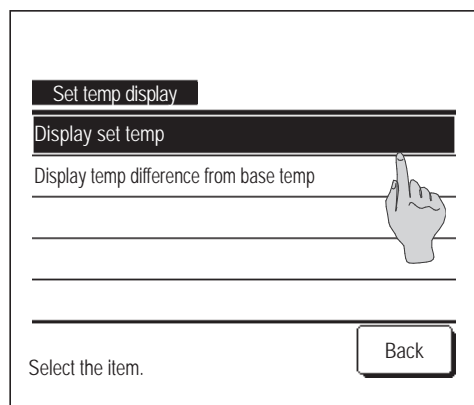

- 2 The Set temp display menu is displayed.

- ① Display set temp
... Set temp is displayed.
- ② Display temp difference from base temp
... The difference from the base temperature is displayed. When you select the Display temp difference from base temp, the Base temp setting screen is displayed (p. 2).

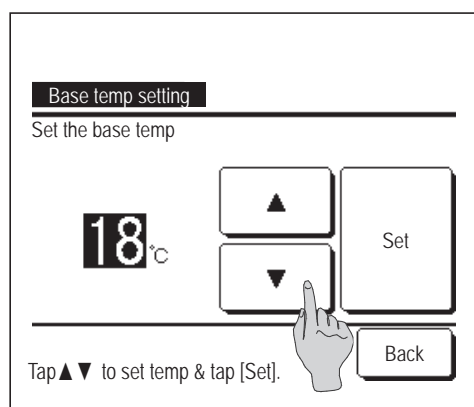

- 3 Set the base temperature.

■ R/C display setting

Contents of display on the R/C can be changed.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting**.

R/C display setting

Room name

Name of IU

Indoor temp display

Error code display

Heating standby display

Next Back

Select the item.

- 2 The R/C display setting menu screen is displayed.

- ① Room name ... page 67
- ② Name of I/U ... page 67
- ③ Indoor temp display ... page 68
- ④ Error code display ... page 69
- ⑤ Heating standby display ... page 69
- ⑥ Defrost operation display ... page 70
- ⑦ Auto cooling/heating display ... page 70
- ⑧ Display temp of R/C, Room, Outdoor ... page 71
- ⑨ Zone name ... page 14

R/C display setting

Defrost operation display

Auto cooling/heating display

Display temp of R/C, Room, Outdoor

Zone name


Previous Back

Select the item.

① Room name

Set the room name to be displayed on the TOP screen.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Room name**.

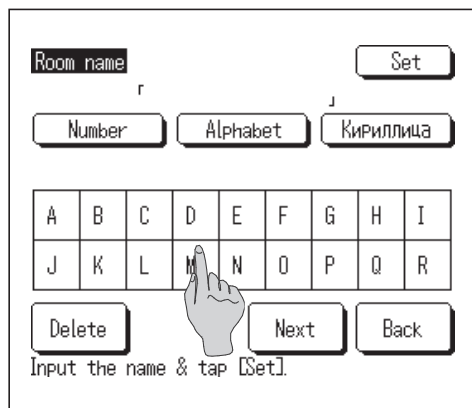

- 2 The Room name input screen is displayed.


The room name can be set with up to 9 2-byte letters (18 1-byte letters).

You can enter alphanumeric, Japanese Kana, Kanji, Cyrillic, or Chinese characters.

Tap the **Previous** or **Next** button to display next character group.

When you have finished inputting the room name, tap **Set**.


The room name is displayed on the TOP screen.

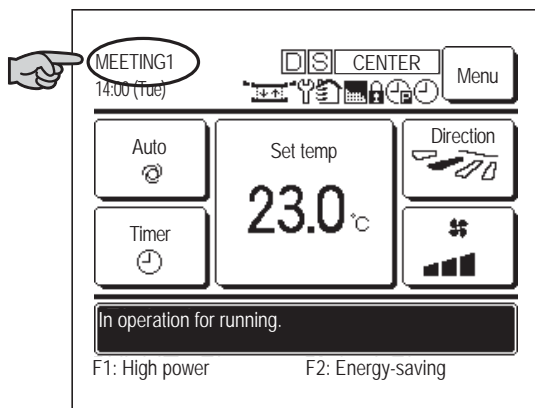

② Name of IU


Set the name of IU to be added to the IU address button.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Name of IU**.

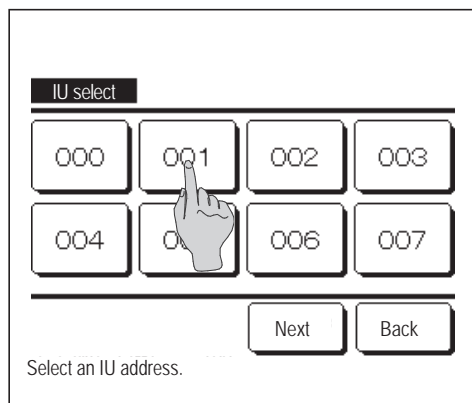

- 2 The IU select screen is displayed.

When two or more IUs are connected to the R/C, a list of IUs is displayed. Tap the button for the IU (address number) to set the name.

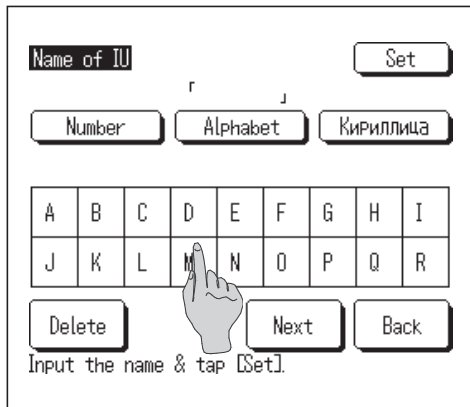

- 3** When the letter selection screen is displayed same as at the setting of the name of R/C (page 67), enter letters.


The name of IU can be entered up to 4 2-byte (8 1-byte) letters.

When the input is over, tap the **Set** button. The text "The registration is completed." is displayed, and the settings are completed.

③ Indoor temp. display

Select ON/OFF for the room temperature display.

- 1** Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Indoor temp display**.

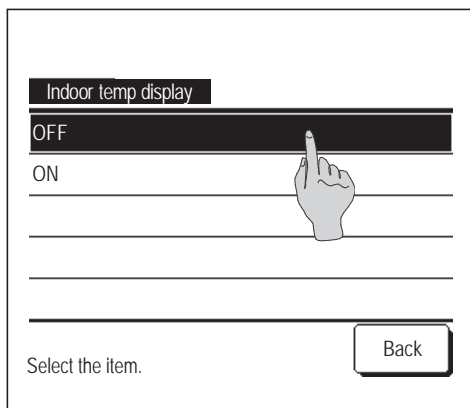


- 2** The Indoor temp display screen is displayed.


On the Indoor temp display screen, select ON/OFF of the display. When R/C sensor setting is enabled, the room temperature (R/C) is displayed (refer to the installation manual on how to make these settings).

OFF ... Room temperature is not displayed on the TOP screen.

ON ... Room temperature is displayed on the TOP screen.

When R/C sensor setting is disabled, the room temperature ○°C is displayed.

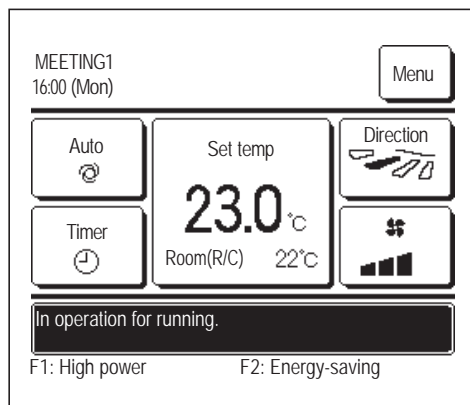

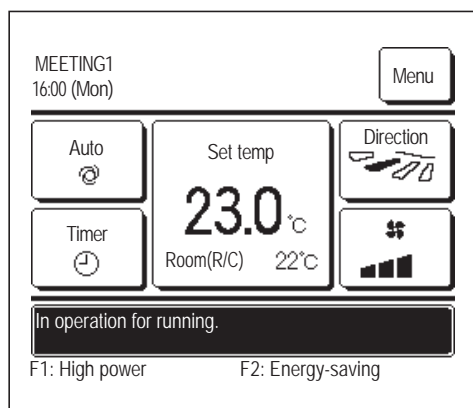


When R/C sensor setting is enabled, the room temperature (R/C) °C is displayed (refer to the installation manual on how to make these settings).

④ Error code display

Select ON/OFF for the Error code display.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Error code display**.

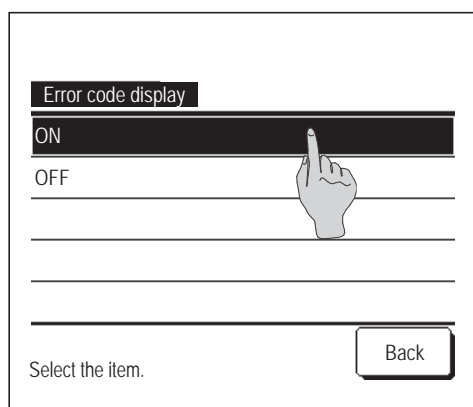

- 2 The Error code display screen is displayed.

On the Error code display selection screen, select ON/OFF of the display.


ON ... When there is any error on the unit, the message "Prot.stp.ON E○ Touch here for contact. History can be checked from Menu." is displayed on the TOP screen message display.

OFF ... The message is not displayed even if there is any error.

⑤ Heating standby display

Select ON/OFF for the Heating standby display.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Heating standby display**.

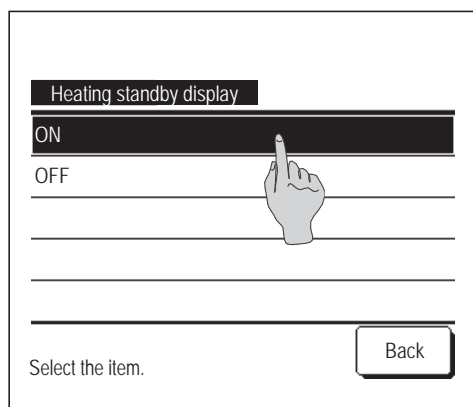

- 2 The Heating standby display selection screen is displayed.

On the Heating standby display selection screen, select ON/OFF of the display.

The heating standby control is operated to prevent blowing of cold air at the start of heating operation.


ON ... The message "Heating standby" is displayed during the heating standby control.

OFF ... The message "Heating standby" is not displayed.

⑥ Defrost operation display

When frost on the OU heat exchanger is accumulated and the conditions for start defrosting are established, the defrost operation control is performed automatically. Select ON/OFF for the Defrost operation display.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Defrost operation display**.

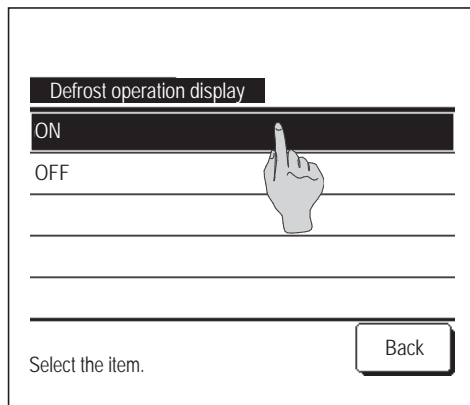

- 2 The Defrost operation display selection screen is displayed.

On the Defrost operation display selection screen, select ON/OFF of the display. The heating standby control is operated to prevent blowing of cold air at the start of a heating operation.


ON ... The message "Defrost operation" is displayed during the defrost operation.

OFF ... The message "Defrost operation" is not displayed.

⑦ Auto cooling/heating display

Select ON/OFF for the display of the Auto cooling or heating.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Auto cooling/heating display**.

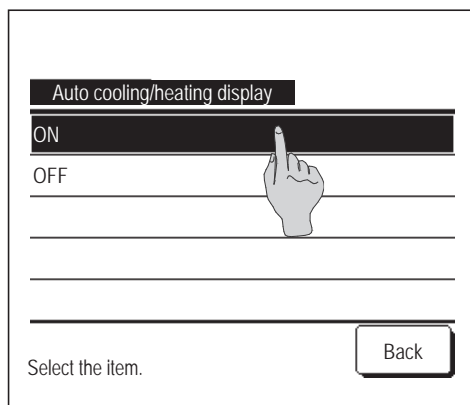

- 2 The Auto cooling/heating display selection screen is displayed.

On the Auto cooling/heating display selection screen, select ON/OFF of the display.


ON ... The message "Auto Cooling" or "Auto Heating" is displayed on the "Change operation mode" button at the TOP screen during the auto mode operation.

OFF ... The message "Auto" is displayed on the "Change operation mode" button at the TOP screen.

⑧ Display temp of R/C, Room, Outdoor

Select ON/OFF for the display of the R/C sensor temperature, room temperature and outdoor temperature.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **R/C display setting** ⇒ **Display temp of R/C, Room, Outdoor**.

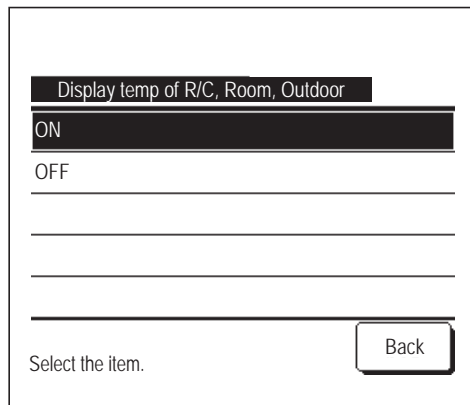

- 2 The Display temp of R/C, Room, Outdoor selection screen is displayed.

On the Display temp of R/C, Room, Outdoor selection screen, select ON/OFF of the display.


ON ... Each temperature is displayed on the TOP screen.

OFF ... These temperatures are not displayed on the TOP screen.

■Change administrator password


Administrator password can be changed.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **Change administrator password**.

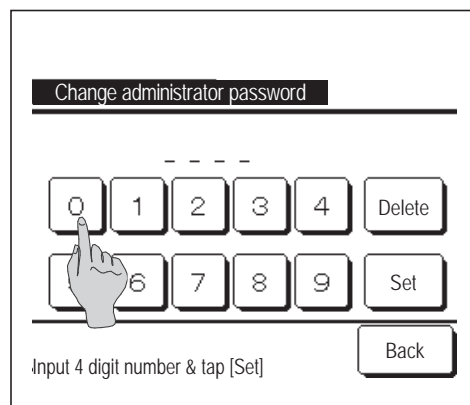

- 2 The Change administrator password screen is displayed.

Enter the password (4-digit number) and tap the **Set** button.

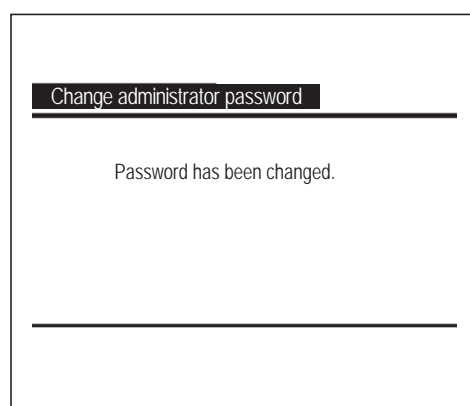

- 3 The password change confirmation screen is displayed for 3 seconds, and the display returns to the administrator settings menu screen.


■F1/F2 function setting

Use the **F1** and **F2** switches to change the functions to operate.

Advice

- When using a standard FDT/FDTC panel (a panel without anti draft function), set functions other than the Anti draft ON/OFF function to the **F1** and **F2** switches.
If anti draft is turned on (operated) during the use of a standard FDT/FDTC panel, louvers may not automatically swing, which is not a malfunction.


- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **F1/F2 function setting**.

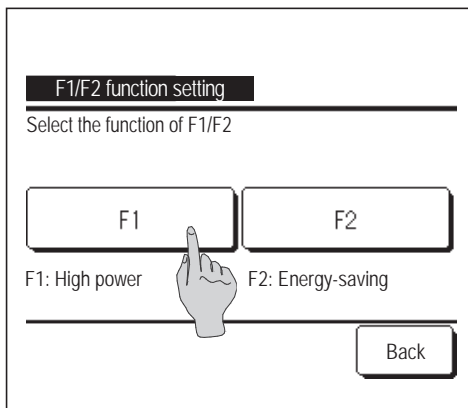

- 2 The F1/F2 function setting screen is displayed.

On the F1/F2 function setting screen, tap the side (**F1** or **F2** switch) you desire to change.


The currently set functions are displayed below the buttons.

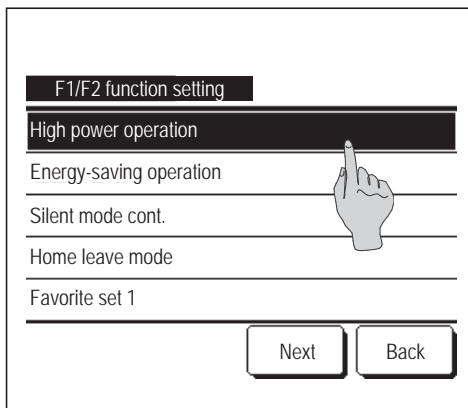

- 3 Select the function to set to the **F1** or **F2** switch.

The following functions can be selected.

- High power operation ... page 17
- Energy-saving operation ... page 18
- Silent mode control ... page 75
- Home leave mode ... page 55
- Favorite setting operation ... page 59
- Filter sign reset ... page 82
- Anti draft ON/OFF ... page 16
- Auto anti draft ctl ... page 77

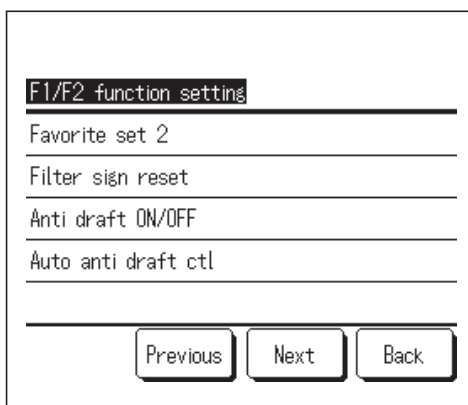


■Refrigerant leak detector setting

Set the various settings related to the refrigerant leak detector.

- 1 Tap the **Menu** button on the TOP screen and select **User setting** ⇒ **Administrator settings** ⇒ **Refrigerant leak detector setting**.


Advice

- The Refrigerant leak detector setting can be set from the main R/C only.
- If no refrigerant leak detector, a message "Invalid request." is displayed on the R/C screen.

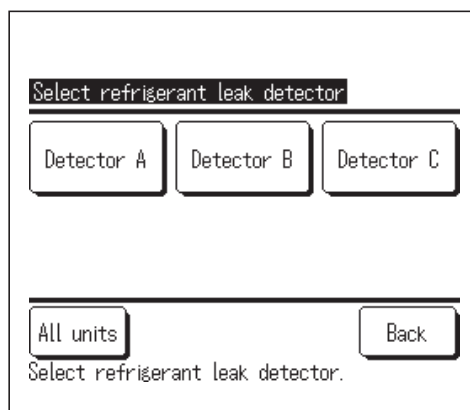


- 2 When two or more refrigerant leak detectors are connected to the IU, a list of refrigerant leak detectors is displayed. Tap the refrigerant leak detector to be set.

■ You can set all refrigerant leak detectors at once by tapping the **All units** button.

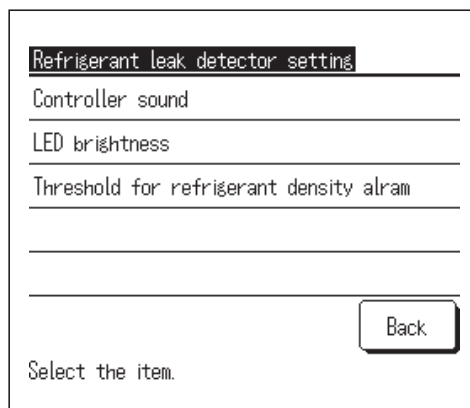

- 3 Refrigerant leak detector setting menu screen is displayed.

- ① Controller sound ... Set the level of alarm sound for refrigerant leak. (🔍4)
- ② LED brightness ... Set the brightness of Operation light (Green) that turns on in the detector's operation. (🔍5)
- ③ Threshold for refrigerant density alarm ... Set the concentration at which the alarm sound and the flash of Error light (Red) change after refrigerant leakage is detected. (🔍6)

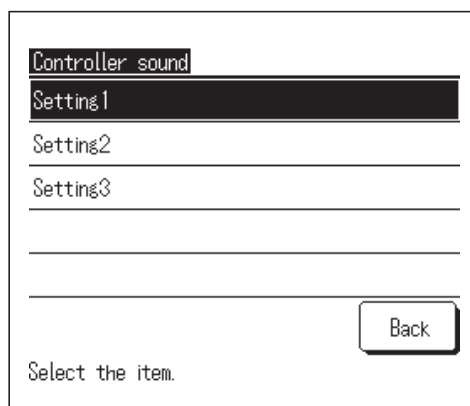

- 4 Set the controller sound.

If you set it, the alarm will sound for 3 seconds in the selected sound.

- ① Setting1 ... The biggest sound.
- ② Setting2 ... The sound slightly smaller than Setting1.
- ③ Setting3 ... The sound smaller than Setting1.

LED brightness

Normal

Low 1

Low 2

Back

Select the item.

5 Set the LED brightness.

- ① Normal ... 100% brightness.
- ② Low 1 ... 75% brightness.
- ③ Low 2 ... 50% brightness.

Threshold for refrigerant density alarm

High

Normal

Low

Back

Select the item.

6 Set the threshold for refrigerant density alarm.

- ① High ... The same level as the concentration when refrigerant leak is detected.
- ② Normal ... The level of concentration is between High and Low.
- ③ Low ... The level of concentration close to the lowest concentration that the detector can sense.

■ After detecting refrigerant leak, the alarm sound and the flash of Error light (Red) change to notify a decrease in the concentration.

The patterns of the alarm sound and Error light (Red) are as follows.

	Alarm sound	Error light (Red)	Operation light (Green)	Intermittent sound: Synchronized with flash of Error light (Red).
When refrigerant leak is detected	Continuous	Continuous flash	OFF	
When the concentration of refrigerant inside room decreases	Intermittent	5 flashes	OFF	

Silent mode control


The OU is controlled with priority on quietness. You can start/stop the silent mode control.

[Starting control with Menu button]

- 1 Tap the Menu button on the TOP screen and select Useful functions ⇒ Silent mode control

The administrator password input screen is displayed.


Enter the administrator password.

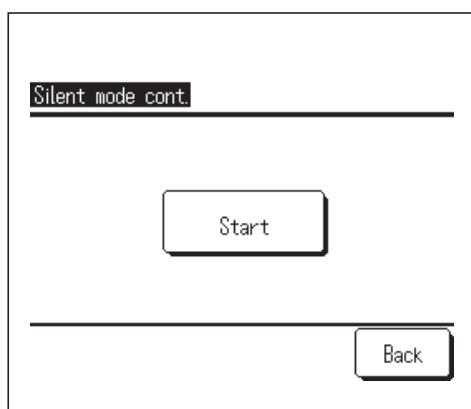

- 2 The Silent mode control (Start/End) screen is displayed.

Tap the Start button to start the silent mode control.

To terminate the silent mode control, tap the End button.

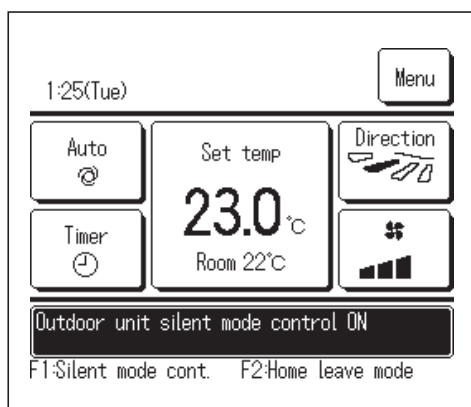

- 3 During silent mode control, "Outdoor unit silent mode control ON" will be displayed on the message display.

- Silent mode control will not be disabled even if you press the Run/Stop switch.
- When the sub R/C is set, the silent mode control cannot be used.
- During silent mode control, operation with maximum capacity is not allowed.

[Starting control with F1 or F2 switch]

Change the F1 (F2) switch function to the silent mode control in the F1 (F2) function setting.

When you press the F1 (F2) switch, the administrator password input screen is displayed. After you enter the password, the silent mode control will start.


To terminate the silent mode control, press the F1 (F2) switch again.


- This operation is to select enable/disable of silent mode control. You cannot start the operation with the F1 (F2) switch during stop. Start the operation with the Run/Stop switch.

Select the language


Select the language to be displayed on the R/C.

[Selecting the language with the button]

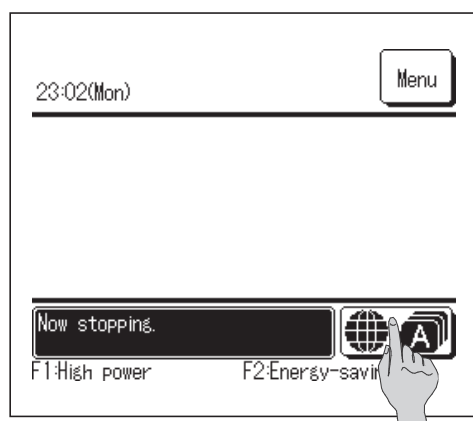


1 Tap the  button on the TOP screen while the air conditioner is stopped.

■ Depending on how the Permission/Prohibition setting (page 61) is set, the administrator password input screen may be displayed.

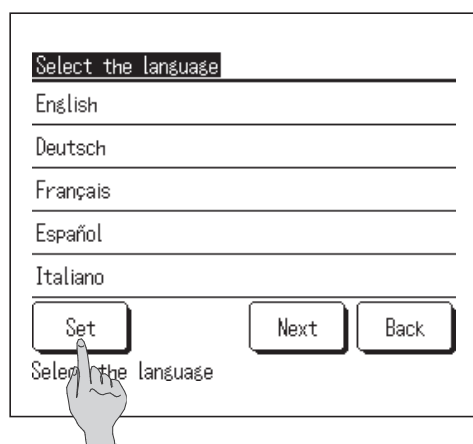

2 The menu for select the language is displayed.




Select the language to be displayed on the R/C and tap the  button.

You can select from the following languages:

RC-EX3D: English/German/French/Spanish/Italian/Dutch/Turkish/
Portuguese/Polish

RC-EXZ3D: English/German/French/Spanish/Italian/Dutch

[Selecting the language with the button]

1 Tap the  button on the TOP screen and select  ⇒ 

■ Depending on how the Permission/Prohibition setting (page 61) is set, the administrator password input screen may be displayed.

2 The menu for setting the language selection is displayed.

Select a language to be displayed on the R/C and tap the  button.

Auto anti draft ctl

You can set each blow outlet operation for auto anti draft ctl and can also enable/disable for allow to air flow volume up.

■ When the R/C is set as the sub R/C, the auto anti draft ctl cannot be set.


1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Auto anti draft ctl**.

You can also use the **F1** and **F2** switches to perform this operation.


Set the auto anti draft ctl to the **F1** (**F2**) switch using the Switch function to perform this operation.

■ If no IU equipped with auto anti draft ctl function is connected, a message "Invalid request." is displayed on the R/C screen.

■ Depending on how the Permission/Prohibition setting (☞ page 61) is set, the administrator password input screen may be displayed.

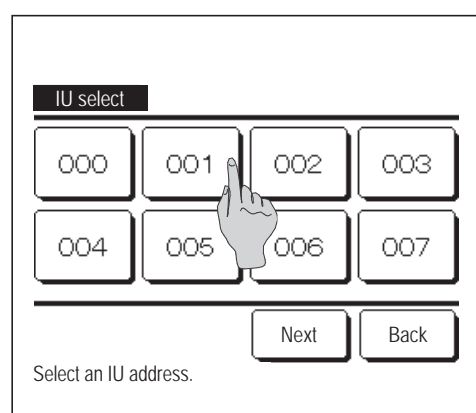

2 When two or more IUs are connected to the R/C, a list of IUs is displayed. Tap the IU to be set.

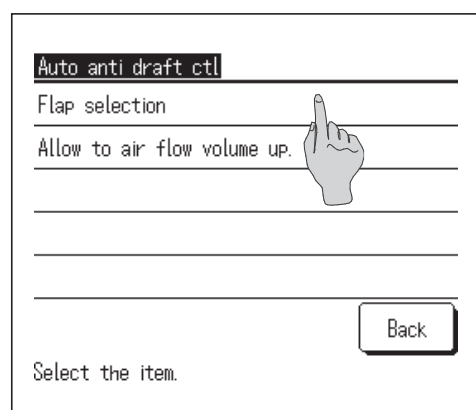

3 Tap a desired item.



① Flap selection

... You can set each blow outlet operation for auto anti draft ctl.
(☞ page 78)


② Allow to air flow volume up

... You can set Enable/Disable for allow to air flow volume up.
(☞ page 78)

■Flap selection

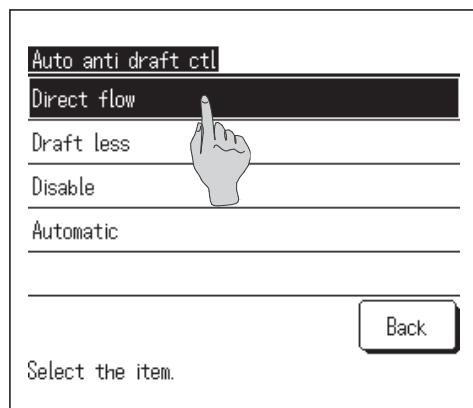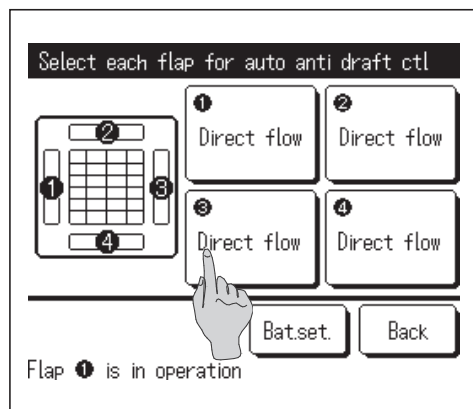

■Allow to air flow volume up.

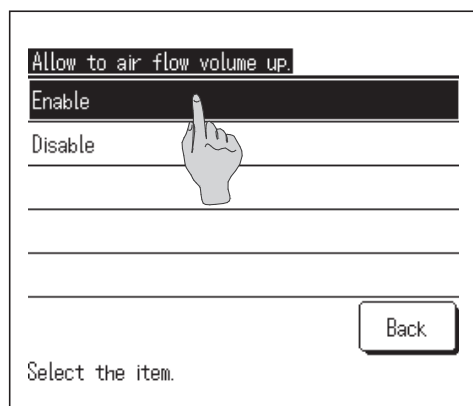


1 Select the blow outlet number to set auto anti draft ctl.

■The flap at blow outlet No. ① will keep moving while the blow outlet selection screen is displayed. Select the flap based on this figure. When you have selected the blow outlet, the flap with the number you selected will move. The figure displayed on the screen shows the installed unit viewed from the floor side.

Advice

- This operation will not be performed when auto anti draft ctl is set during operation.

■You can set all blow outlets at once by tapping the **Bat.set.** button.

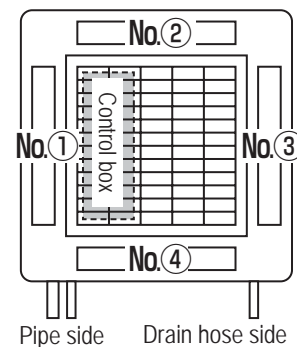

**Blow outlet No.
[For FDT]**

2 Select the operation for each blow outlet.

Direct flow ...Changes the flap direction toward the detected subject.

If you select direct flow while anti draft is running, anti draft will stop.

Draft less ...Does not change the flap direction set using the R/C when anti draft is activated.

When anti draft is not activated, the flap direction changes to horizontal.

Disable ...Does not change the flap direction set using the R/C.

Automatic ...It automatically changes the flap direction and anti draft ON/OFF depending on the room temperature and floor temperature.

1 Select Enable/Disable.

■Air flow volume up is only available for the blow outlet for which direct flow or automatic is selected in flap selection.


Wireless interface setting

Set the various settings related to the wireless interface.


■ When the R/C is set as the sub R/C, the wireless interface setting cannot be set.

1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Wireless interface setting**.

■ If no IU equipped with wireless interface function is connected, a message "Invalid request." is displayed on the R/C screen.

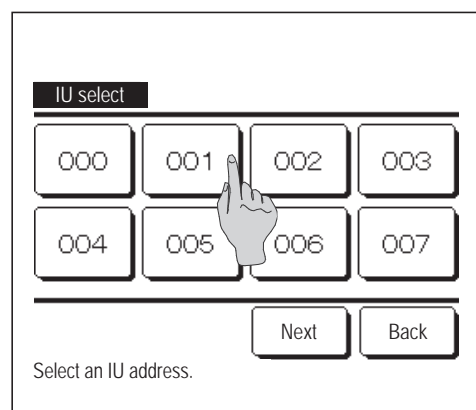


2 When two or more IUs are connected to the R/C, a list of IUs is displayed. Tap the IU to be set.

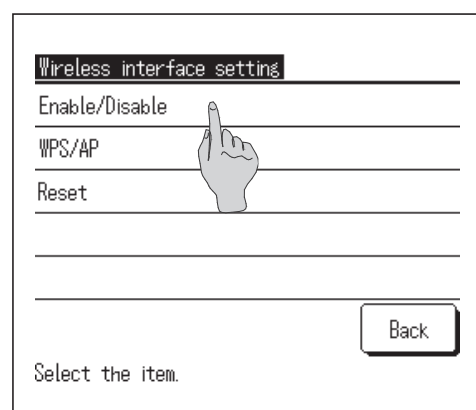

3 Tap a desired item.

- ① Enable/Disable ... You can set Enable/Disable for wireless interface setting. (→ page 80)
- ② WPS/AP ... You can set the communication mode for wireless interface. (→ page 80)
- ③ Reset ... You can resets the wireless interface setting. (→ page 80)


■Enable/Disable

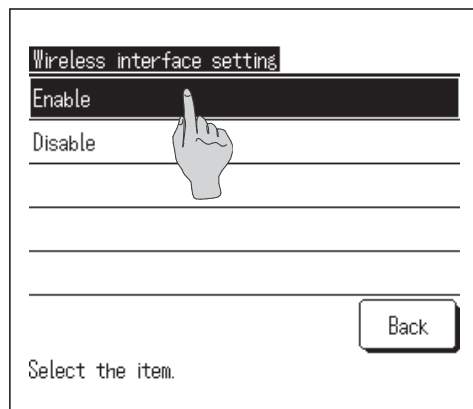

1 Select Enable/Disable.

- Even if enable is selected, when the communication setting with the server is not configured by the application, wireless interface communication will not occur.

■WPS/AP

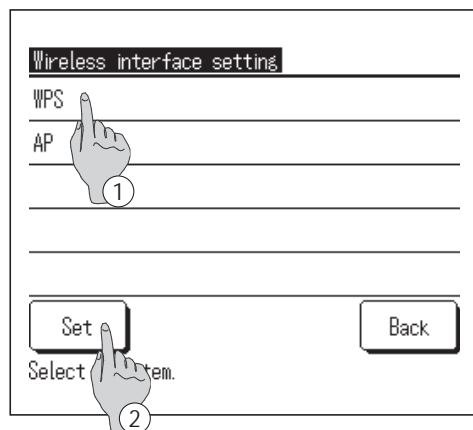

1 Select WPS/ AP. The selected communication mode will be displayed in black.

2 After you select the communication mode, tap the **Set** button.


- * If you do not tap the **Set** button on this screen, the communication mode will not be set.

- After setting using the R/C, you need to set from the application "Smart M-Air". For information about how to install and operate "Smart M-Air", refer to the "WF-PAC-E" manuals on the MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD. website.

HP: http://www.mhi-mth.co.jp/en/products/detail/air-conditioner_users_manual.html



■Reset

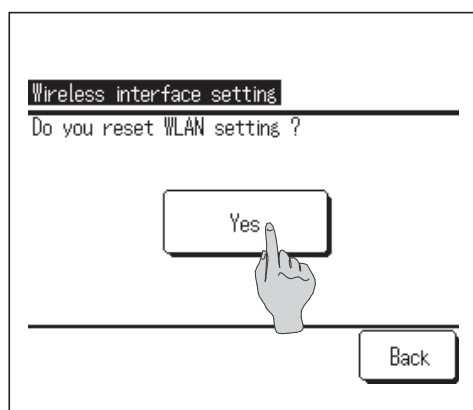

1 Tap the **Yes** button.

- If the reset operation is performed, all the wireless interface settings will be reset. To perform wireless interface communication again, you need to configure the settings from the R/C and application.


Control mode & Eco level

Automatically controls the capacity depending on the R/C set temperature and the indoor temperature, which enables the energy-saving operation without sacrificing comfort.


■ When the R/C is set as the sub R/C, the control mode & eco level cannot be set.

1 Tap the **Menu** button on the TOP screen and select **Useful functions** ⇒ **Control mode & Eco level**.

■ If no OU equipped with control mode & eco level function is connected, Control mode & Eco level will not be displayed.

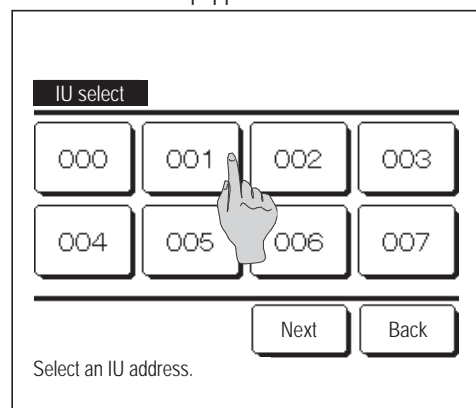

2 When two or more IUs are connected to the R/C, a list of IUs is displayed. Tap the IU to be set.

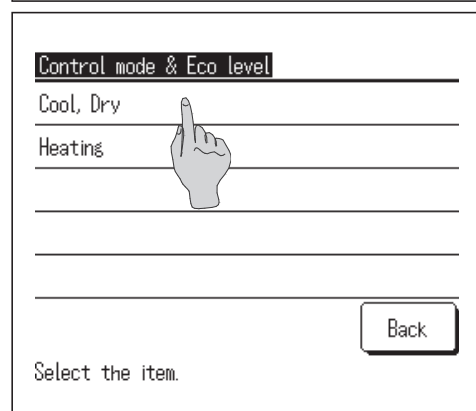


3 Tap a desired item.

① Cool, Dry ... You can set the control mode for Cooling or Dry.

② Heating ... You can set the control mode for Heating.

■ The rest of the procedure is the same for both items.

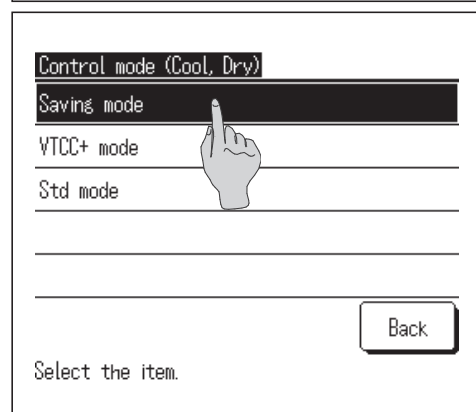

4 Select the control mode.

① Saving mode ... Most energy saving mode.
Suitable for low cooling/heating demand in the building.


② VTCC+ mode ... Most balanced mode between capacity control and energy saving.
Suitable for cooling/heating demand varies among the room in the building.

③ Std mode ... Capacity is maximised.
Suitable for high cooling/heating demand in the building.

5 Select the eco level.


Eco level: U-High > High > Mid > Low

■ The eco level can be set only when "Saving mode" or "VTCC+ mode" is selected in control mode.

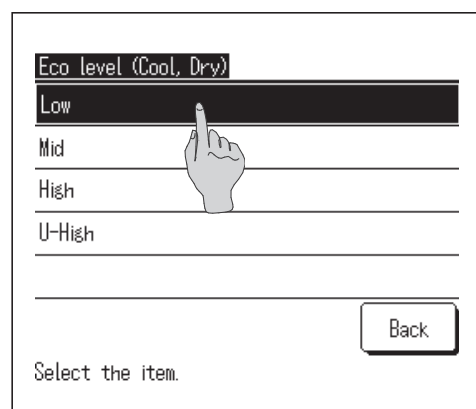

Filter sign reset

In order to announce the time for cleaning of the air filter, the message of "Filter cleaning. Touch here." is displayed when the cumulative operation time of the IU reaches the preset time. After you clean the filter, you must reset the operation time.

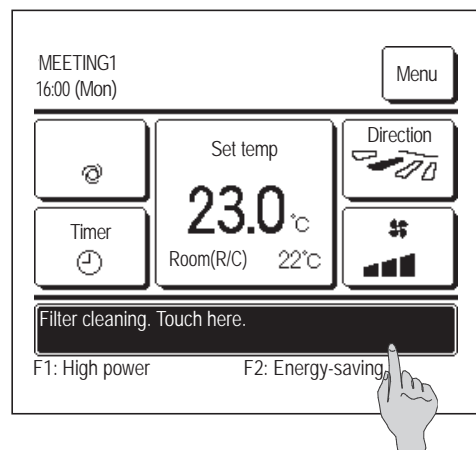


- 1 Tap the message display on the TOP screen.

You can also perform filter sign reset from the menu before the message "Filter cleaning. Touch here." is displayed.

Tap the **Menu** button on the TOP screen and select **Filter** ⇒ **Filter sign reset**.

You can also use the **F1** and **F2** switches to perform this operation.


Set the filter sign reset to the **F1** (**F2**) switch using the Switch function (☞ page 72) to perform this operation.

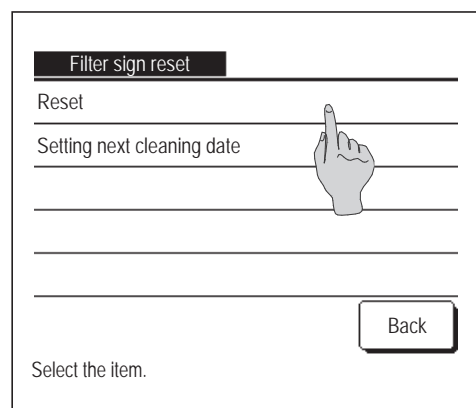

- 2 The filter sign reset menu screen is displayed.

To reset the filter sign, tap **Reset**. (☞ 3)


To set next cleaning date, tap Setting next cleaning date. (☞ 4)

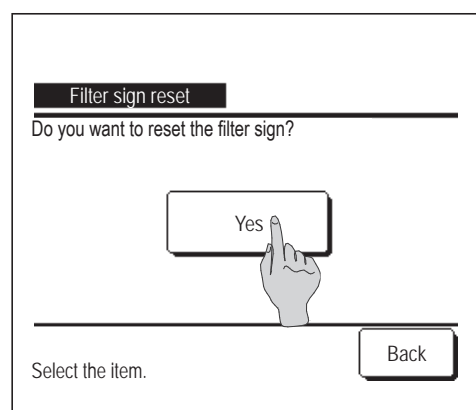

- 3 Acknowledge screen for the Filter sign reset screen is displayed.

Tap the **Yes** button.

If you do not want to reset, tap the **Back** button.

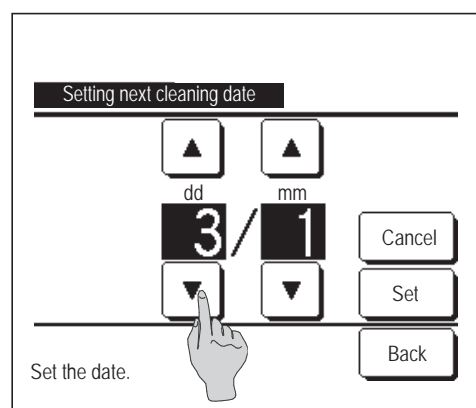

- 4 The Setting next cleaning date screen is displayed.

Select a desired date with the **▲** **▼** buttons and tap the **Set** button.

The message of "Filter cleaning. Touch here." will be displayed on the set date.

Advice

- When setting next cleaning date, the Clock setting must be made. (☞ page 38)

5. Maintenance of unit and LCD

Maintenance of unit and LCD

- Wipe the surface of LCD and main body of the remote control with a dry cloth when cleaning is required.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth then.

Note

Do not use any paint thinner, organic solvent, or strong acid.

Warning



Do not use flammable materials (e.g. hairspray or insecticide) near the unit.


Do not clean the unit with benzene or paint thinner.

It could cause crack damage to the unit, electric shocks, or fire.

6. Useful information

Contact company & Error display


If any error occurs on the air conditioner, the "Unit protection stop" is indicated on the message display. Take the following measures, stop the operation and consult your dealer.

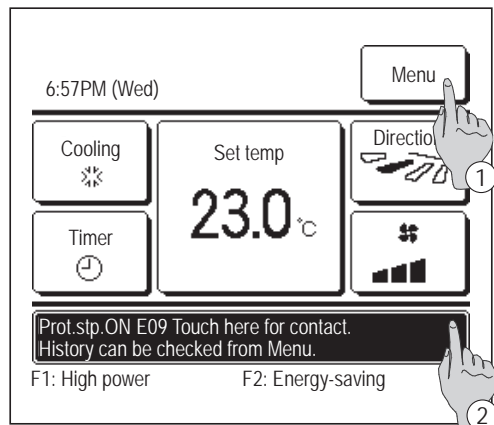

1 "Prot.stp.ON E09 Touch here for contact. History can be checked from Menu." will be displayed on the message display.


① To check the error contents, tap the **Menu** button. (→ **2**)

② To check the company information, tap the message display. (→ **3**)

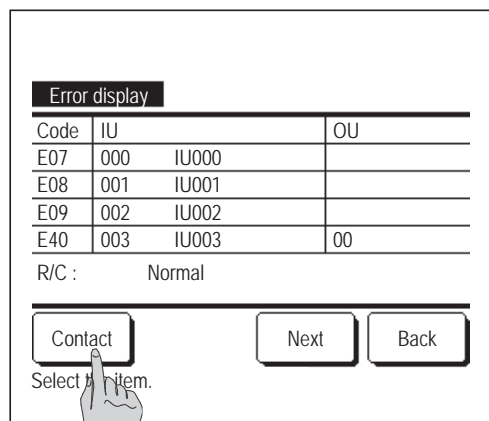

2 Contents of error are displayed.

After checking the error contents (Code), tap the **Contact** button.

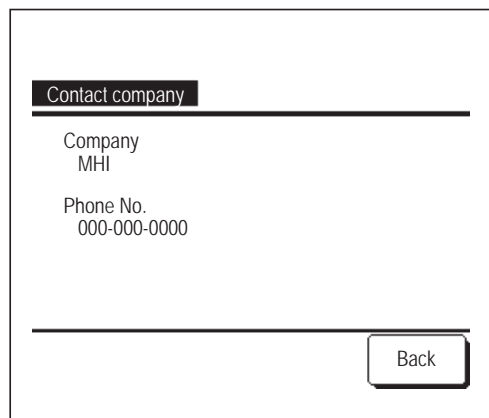



3 Company information (Name and phone No. of contact) is displayed.

This is displayed when it has been preset by your dealer.

7. Notice of inspection date

If the next service date is set on the Service & Maintenance menu by your dealer, the following screen is displayed for 5 seconds at the start of operation and for 20 seconds from the end of operation on the beginning of the month which includes the set date.

When this screen is displayed, contact your dealer.

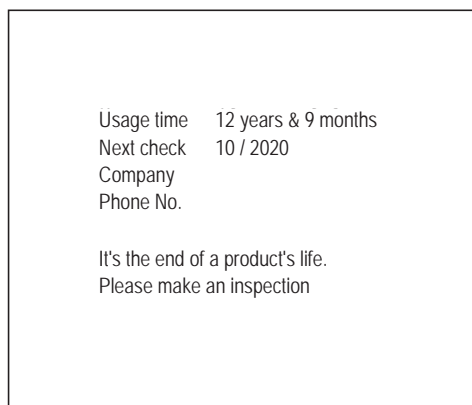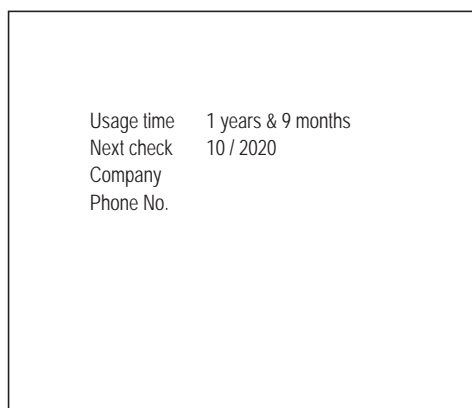


When the period of use exceeds 10 years, the screen shown at left is displayed.

When this screen is displayed, contact your dealer.

8. Message display

During operation, the following messages will be displayed on the message display to notify the current condition of the unit.


■ "Standby. Wait a while." displayed

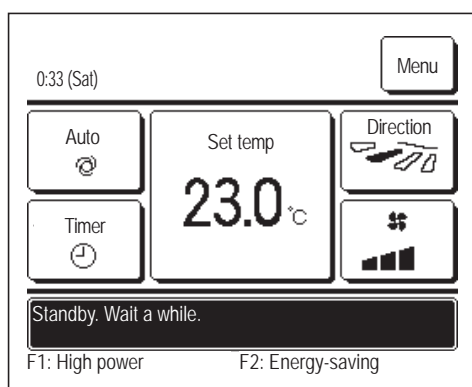

The message "Standby. Wait a while." may be displayed (maximum of 30 minutes) on the R/C during the first operation following a breaker power on or power loss.

This does not indicate a failure; it is caused by the cooling machine oil protect control that is activated in order to protect the compressor. Please wait until the message "Standby. Wait a while." disappears.


■“In operation for defrosting.” display

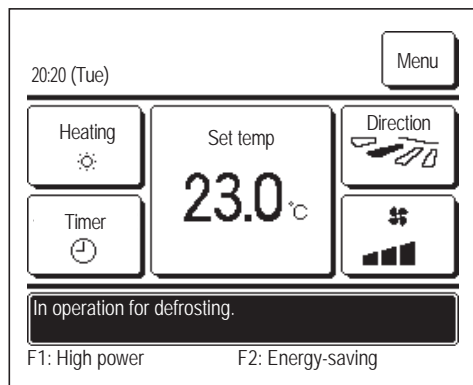

When frost forms on the OU, the heating performance will decrease. This will cause the unit to automatically switch to defrost operation, and hot air will stop blowing out from the IO.

The message “In operation for defrosting.” will be displayed on the message display. After the defrost operation has completed, “In operation for defrosting.” will disappear, and the unit will switch back to its normal heating operation.


■“In operation for heating standby.” displayed

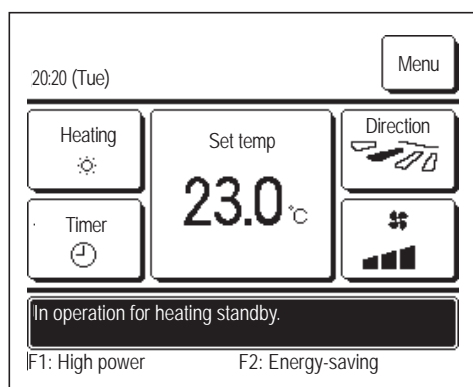

To prevent any cold air blowing out from the IO at the start of a heating operation, the unit stops the fan and displays “In operation for heating standby.” on the message display.

When the unit is ready to blow out hot air, the message “In operation for heating standby.” disappears, and the unit will start heating operation.


■“Operation mode is invalid.” display

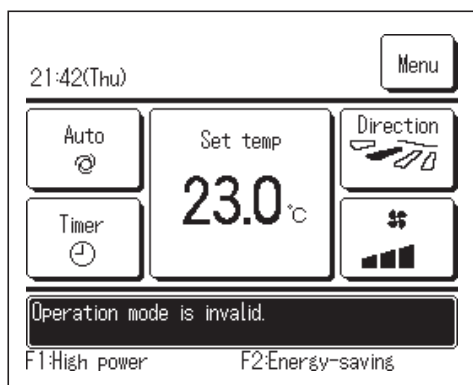

If the air conditioner is a multi-type building air conditioning system, cooling/heating functions cannot be mixed for each of the connected IUs in certain cases (all the connected IUs will be in the same operation mode depending on the OU model).


When an operation mode different from that of other IUs is selected, the fan will begin operating, and the message “Operation mode is invalid.” is displayed.

■“During condensation prevention control.” display

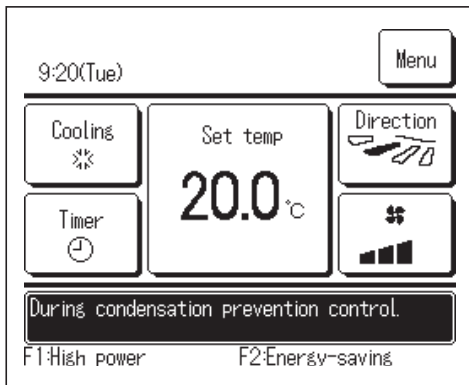

If the humidity around the IU is high, the fan speed and flap direction may differ from the set fan speed and flap direction in order to prevent condensation forming on the IU, and the anti draft may close. In that case, the message "During condensation prevention control." will be displayed. When the humidity drops, the fan speed and flap direction return to normal, and the anti draft opens.

■“In operation for warming up.” display

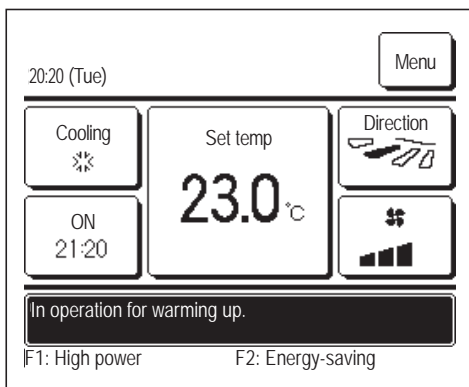


When you select to enable warming up by the Set ON timer by hour (page 44) or Set ON timer by clock (page 47), the operation will start 50 to 60 minutes earlier, which is predicted based on the previous warm up operation, so that the room will be close to the set temp by the time it reaches the operation start time.

During the warm up operation, the message "In operation for warming up." will be displayed on the message display.

This message will disappear at the time set for operation start.

The warming-up operation will be stopped by stopping the A/C, starting high power and energy-saving operations and disabling the timer.


■“In operation for rotation.”, “In operation for capacity back-up”, “In operation for fault back-up” displays

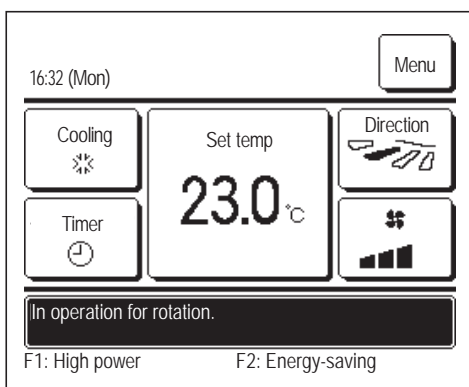

When rotation, capacity back-up, or fault back-up operation is enabled during installation, a message indicating the operation that is set and running will be displayed on the message display.

Refer to the installation manual on how to make these settings.


■“Power control ON” display

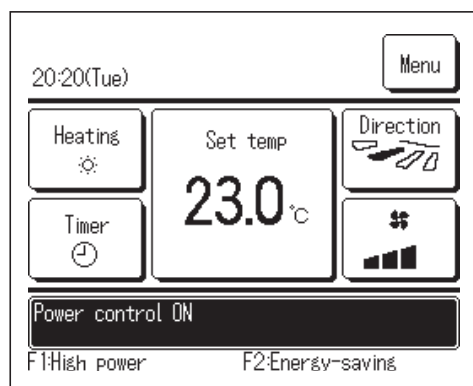

This is displayed in the message display area when power control of the motion sensor control (page 29) is enabled and power control is executed.

Also, the corrected temperature is displayed for Set temp by power control.

■“In auto-off mode” display

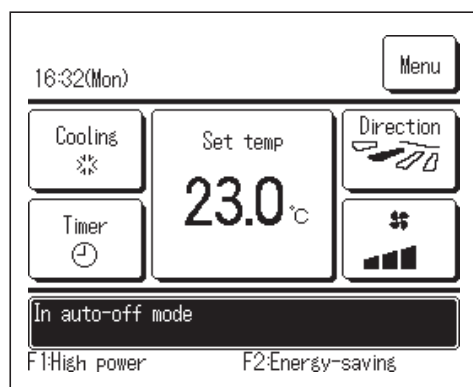


This is displayed in the message display area when the auto-off control of the motion sensor control (page 29) is enabled and the auto-off control is executed in the “operation wait” state.

The air conditioner stops during “operation wait”, and will restart operating when people return.

■“Invalid request. Central control active.” display

When the unit is controlled through a central control device (not included), and you performed an operation other than the followings, the message “Invalid request. Central control active.” is displayed.

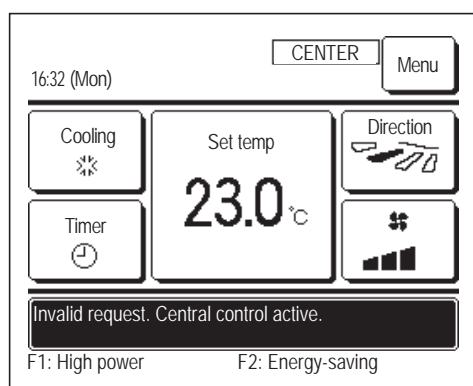


This does not indicate a failure; the message indicates that the unit is controlled through a central control device.

[Operations allowed during central control]

- Filter sign reset
- Administrator settings

■“In temporary stop mode”, “In forced thermostat OFF”, “In setting temperature shift” displays

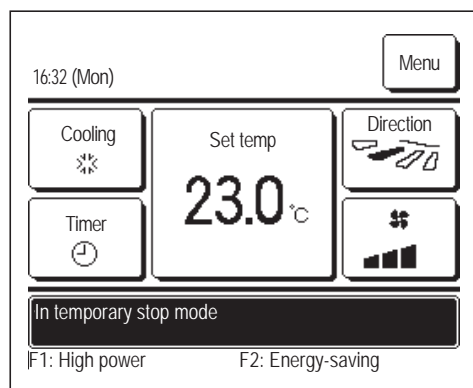


These messages will be displayed when the unit is operated through IU external input.

This does not indicate a failure; the message indicates that the unit is operated through IU external input.

■“OU silent operation by external input” display


The message “OU silent operation by external input” will be displayed when silent mode control is operated through a central control device (not included) or an IO external input (not included).

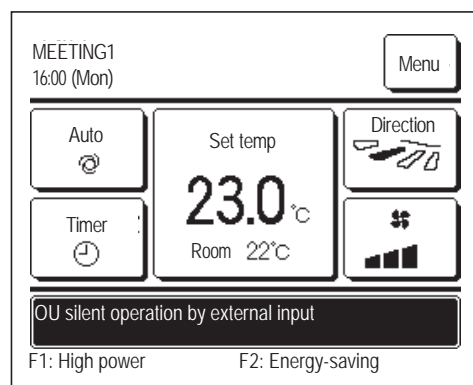

When “OU silent operation by external input” is displayed, the operation performed will be the same as the silent mode control (see page 75) performed from the R/C.

During silent mode control, operation with maximum capacity is not allowed.

■“There is a information of maintenance. Check the content from [Menu].” display

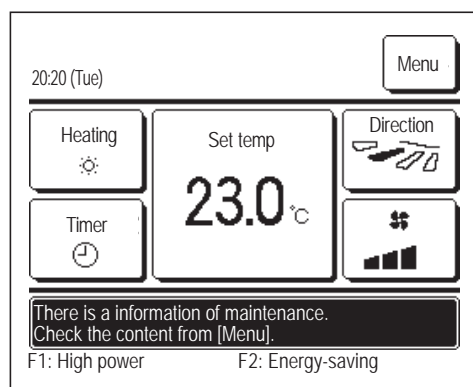


To notify any maintenance information related to the product, the message “There is a information of maintenance. Check the content from [Menu].” may be displayed in the message display.

When this message is displayed, tap the Menu button. The maintenance description will be displayed.

Contact the dealer/company shown as the Contact company (see page 84) and notify the details (code) of required maintenance.

■“Periodical check” display (for equipment PAC)

“Periodical check” may be displayed on the message display area when the total number of operation hours of the IU reaches the set time to notify you that it is time to replace the fan belt.

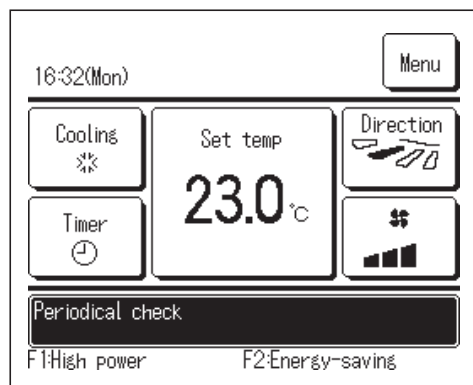


If “Periodical check” is displayed, contact the contact shown in Contact company (page 84) or the store where you purchased the product to request replacement of the belt.

After the belt has been replaced, reset the periodical check.

For details about how to reset the periodical check, refer to the Installation Manual.

■“Periodical check1” “Periodical check2” display (for GHP)

“Periodical check1” or “Periodical check2” may be displayed in the message display area to notify you of the periodical check period of the OU.

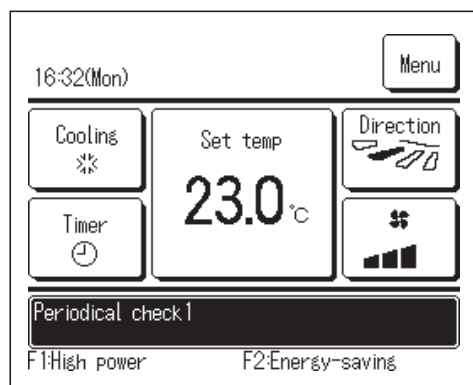


If “Periodical check1” or “Periodical check2” is displayed, contact the contact shown in Contact company (page 84) or the store where you purchased the product to request a periodic check.

■If the product is used as is without periodical checks being carried out, it may lead to an engine failure.

■“Back-up” display


When any error occurs on the OU but its operation is continued as an emergency measure, the message of “Back-up” will be displayed.

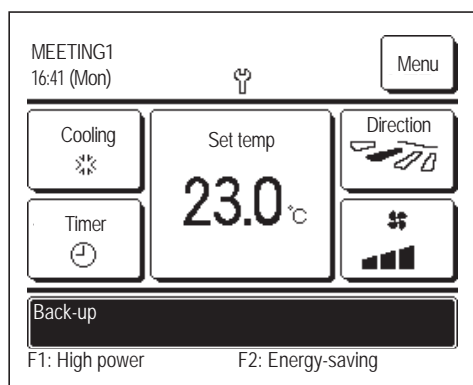

When the “Back-up” is displayed, contact dealer/company shown as the Contact company (page 84) immediately for checking.

■If the operation is continued without checking, it could result in breakdown.

■“Refrigerant is leaking. Ventilate room.” message display

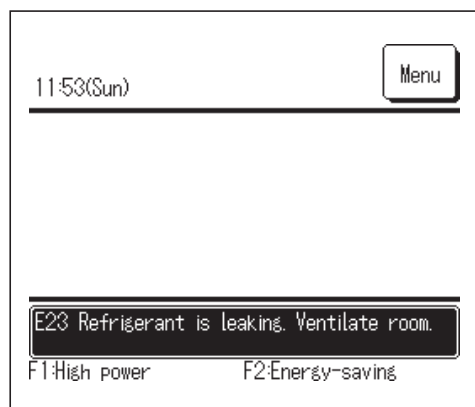

This message is displayed if the refrigerant sensor detects a refrigerant leak.

Extinguish fire on combustion appliances, then ventilate the room.


Please note that the IU fan may operate automatically.

Call the phone number shown to inform us of the content of the message.

When the Remote controller alarm sound setting is enabled, the alarm sounds and the display flashes. To stop the alarm and the flashing display, push the **Run/Stop** switch.

■This display is also displayed when connection confirmation of the safety equipment is performed.

■“Refrigerant sensor replace time has passed.” message display

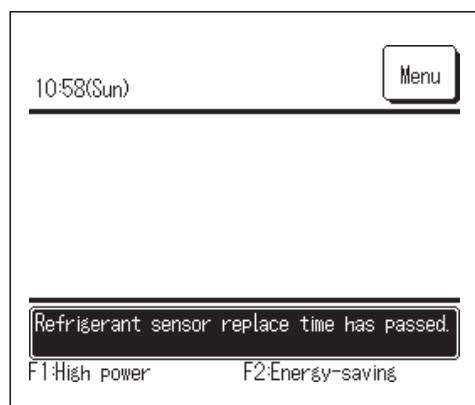

The refrigerant sensor is a component that requires regular maintenance.

When the time arrives for maintenance to be carried out on the refrigerant sensor, the message shown on the left appears.


Call the phone number shown to request a replacement of the refrigerant sensor.

If the sensor is not replaced, the display cannot be turned off.

CAUTION

If you continue to use the refrigerant sensor beyond the replacement period, a fire may result if the refrigerant leaks.

■“Refrigerant sensor replace time is coming.” message display

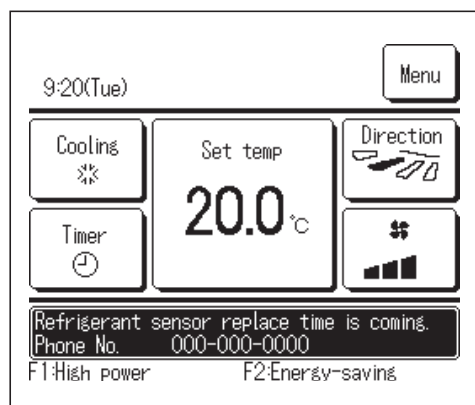


The refrigerant sensor is a component that requires regular maintenance.

When the time arrives for maintenance to be carried out on the refrigerant sensor, the message shown on the left appears.

Call the phone number shown to request a replacement of the refrigerant sensor.

CAUTION

If you continue to use the refrigerant sensor beyond the replacement period, a fire may result if the refrigerant leaks.

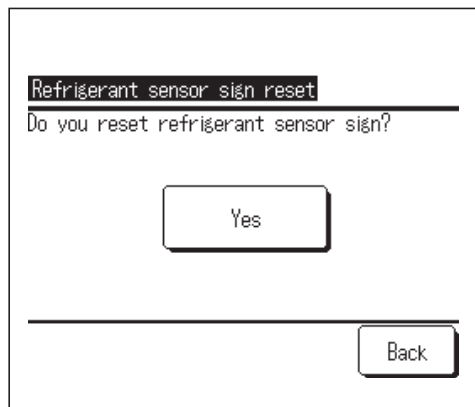

If you want to turn off the message, tap the message display area while the message is being displayed.


The Refrigerant sensor sign reset screen is displayed.

Tap the **Yes** button.

If you do not want to reset, tap the **Back** button.

If you do not replace the sensor, the message reappears after 720 hours.

■“Refrigerant sensor is disconnected.” message display

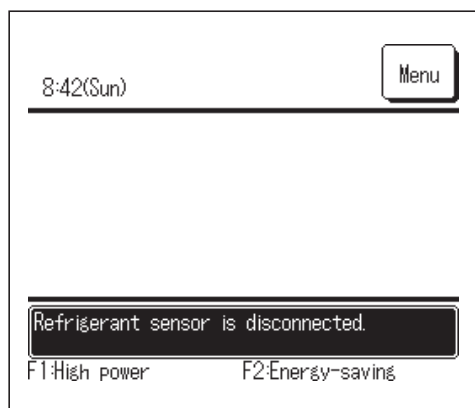


This message is displayed if the refrigerant sensor is disconnected.

Call the phone number shown to inform us of the content of the message.

When the Remote controller alarm sound setting is enabled, the alarm sounds and the display flashes. To stop the alarm and the flashing display, push the **Run/Stop** switch.

■“Refrigerant sensor is faulty.” message display

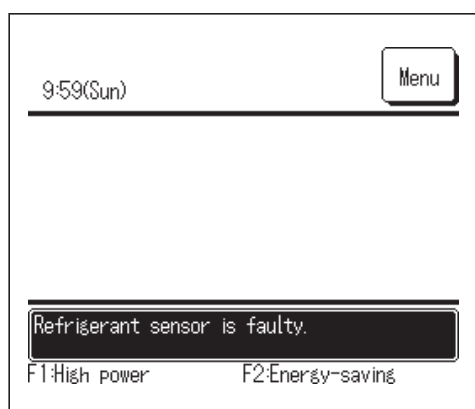

This message is displayed if the refrigerant sensor fails.

Call the phone number shown to request a replacement of the refrigerant sensor.

When the Remote controller alarm sound setting is enabled, the alarm sounds and the display flashes. To stop the alarm and the flashing display, push the **Run/Stop** switch.

9. After-sale service

● Inform your dealer

- Model name
- Date of installation
- Failure conditions: As precise as possible.
- Your address, name, and telephone number

● Moving

The moving of the unit requires special technology. Consult your dealer.
Necessary expenses for the moving of the unit will be charged.

● Repairs after Warranty Period

Consult your dealer. Fare-paying services may be possible at the request of customer.
(The warranty period is one year counting from the date of installation.)

● Inquiry about After-sale Service

Contact your dealer or the service contact.