Superlink WEB & BACnet Gateway WEB MONITORING

SC-WBGW256

This gateway complies with EMC Directive 2014/30/EU, LV Directive 2014/35/EU, RoHS Directive 2011/65/EU. CE marking is applicable to the area of 50 Hz power supply.

Cette passerelle est conforme à la directive CEM 2014/30/UE, à la directive basse tension 2014/35/UE et à la directive RoHS 2011/65/UE.

La marque CE s'applique aux régions alimentées en courant de 50 Hz.

Dieses Gateway erfüllt die Richtlinien zur elektromagnetischen Verträglichkeit 2014/30/EU, die Niederspannungsrichtlinien 2014/35/EU und die RoHS-Richtlinie 2011/65/EU. Die CE-Marke gilt für Bereiche mit einer Netzstromversorgung von 50 Hz.

Questo gateway è conforme alla Direttiva EMC 2014/30/UE, alla Direttiva LV 2014/35/UE e alla Direttiva RoHS 2011/65/UE. Il marchio CE è applicabile alla fascia di alimentazione 50 Hz.

Esta puerta de enlace cumple con la Directiva de Compatibilidad Electromagnética 2014/30/UE, con la Directiva de Baja Tensión 2014/35/UE y con la Directiva RoHS 2011/65/UE. La indicación CE solo corresponde al área de suministro eléctrico de 50 Hz.

Deze gateway voldoet aan EMC-Richtlijn 2014/30/EU, LV-Richtlijn 2014/35/EU, RoHS-Richtlijn 2011/65/EU. CE-markering is van toepassing op het gebied met een netstroom van 50 Hz. Este gateway está em conformidade com a Diretiva EMC 2014/30/UE, a Diretiva LV 2014/35/UE e a Diretiva RoHS 2011/65/UE.

A marca CE aplica-se à zona de fornecimento de energia a 50 Hz.

Αυτή η gateway συμμορφώνεται προς την Οδηγία 2014/30/ΕΕ περί ηλεκτρομαγνητικής συμβατότητας , προς την οδηγία 2014/35/ΕΕ περί χαμηλής τάσης και προς την Οδηγία 2011/65/ΕΕ περί RoHS. Το σήμα CE ισχύει μόνον σε περιοχές όπου η τροφοδοσία είναι 50 Hz.

Этот шлюз соответствует требованиям директивы по электромагнитной совместимости 2014/30/EU, директивы по низковольтному оборудованию 2014/35/EU, директивы RoHS 2011/65/EU. Маркировка СЕ нанесена в области источника питания, работающего на частоте 50 Гц.

Bu ağ geçidi, 2014/30/EU sayılı EMC Direktifi, 2014/35/EU sayılı LV Direktifi ve 2011/65/EU sayılı RoHS Direktifi ile uyumludur. CE işareti, 50 Hz güç kaynağı için geçerlidir.

本网关符合EMC指令2014/30/EU、LV指令2014/35/EU和RoHS 指令2011/65/EU。 CE标志适用于使用50 Hz电源的地区。



Thank you for purchasing the Gateway SC-WBGW256.

Before using the product, read this manual thoroughly to ensure you learn how to operate it correctly. After reading this manual, store it in a safe location for future reference. It will be helpful to reference this manual should you have any questions or problems. Also read the user's manual included with the air conditioner.

PRECAUTIONS FOR WASTE DISPOSAL



Your gateway may be marked with this symbol. It means that waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) should not be mixed with general household waste. This gateway should be treated at an authorized treatment facility for reuse, recycling and recovery and not be disposed of in the municipal waste stream.

Please contact the installer or local authority for more information.



This symbol printed on the batteries in your gateway is information for end-users according to the EU directive 2006/66/EC article 20 annex II.

Batteries, at their end-of-life, should be disposed of separately from general household waste.

If a chemical symbol is printed beneath the symbol shown above, this chemical symbol means that the batteries contain a heavy metal at a certain concentration. This will be indicated as follows: Hg:mercury (0.0005%), Cd:cadmium (0.002%) and Pb:lead (0.004%). Please dispose of batteries correctly at your local community waste collection or recycling center.

Table of contents

■Before you use	3
■Safety precautions	3
General precautions	
	5
Svstem outline	5
Personal computer environment	
	6
Personal computer initial configuration	6
External dimensions	8
	0 g
Basic operation	
●Logging In	
Overview Monitor screen	
Common operations in each screen	
Individual Monitor screen	
Control operation	
Control Command screen	
System Stop/Release screen	
Schedule Control screen	
System administrator setting	
Configuration Menu screen	
Basic Configuration Menu screen	
Air-conditioner Cell Configuration screen	
Air-conditioner Cell Configuration File Upload/Download screen	
Network Configuration screen	
Date and Time Configuration screen	
Security Configuration screen	
Pulse count & DI status Check screen	
Web Configuration Menu screen	32
Web Configuration screen	
Link Configuration screen	
Calendar Configuration screen	
Master Schedule Configuration screen	
Calendar/Schedule Backup File Upload/Download screen	
Accounting File Download screen	
Accounting Period Time screen	
Troubleshooting	
■After Sales Service	

■Safety precautions

• Please read the precautions written here carefully to operate the gateway properly.

You are required to observe these fully because every item of these instructions is important for safety.

AWARNING	Failure to follow these instructions may result in serious consequences such as death, severe injury, etc.
ACAUTION	Failure to follow these instructions may cause injury, property damage, or serious consequences depending on the circumstances.

• Failure to follow these instructions may cause injury, property damage, or serious consequences depending on the circumstances.



\mathbf{S}	Never do.	Always follow the instructions given.
	Absolutely keep water away.	Absolutely keep wet hands away.

• Keep this manual in a safe place where you can reference it whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the gateway is transferred, this manual and installation manual should be given to a new owner.

• Electrical wiring work must be performed only by qualified specialists.

WARNING Consult your dealer or a professional contractor to install the unit. Improper installation made on your own may cause electric shocks, fire or break-down of the unit. Consult your dealer when moving, disassembling or repairing the unit. Never modify the unit. Improper handling may result in injury, electric shocks, fire, etc. Avoid using combustible substances (hair spray, insecticide, etc.) near the unit. Do not use benzene or paint thinner to clean the unit. It could cause electric shocks or fire. Stop operation in case of abnormal operation. If continued, it could result in break-down, electric shocks, fire, etc. If any abnormal condition (burnt odor, etc.) occurs, stop operation, turn off the power switch and consult your dealer. Place this gateway in a location that can be locked for the sake of security, and lock it. The gateway is equipped with an external power supply terminal block. Please be sure to place it in a protected location to prevent electric shock and wrongful operation of the power switch. Do not take the lid off this gateway. This gateway has several precision circuit boards.

If you take the lid off, and make a mistake, this gateway could be broken.

≜CAUTION



Do not use or let others use the gateway as play equipment.

Improper operations could cause ill health or health disorders.



Never disassemble the gateway.

If you touch internal parts accidentally, you could get electric shocks or cause trouble. Consult your dealer when it is necessary to inspect its interior.



Do not wash the gateway with water or liquid.

It could cause electric shocks, fire or break-down.



Do not touch electric parts or operate buttons or switches with wet hands. It could cause electric shocks, fire or break-down.



Do not dispose of the gateway by yourself. It could harm the environment. Ask your dealer when it is necessary to dispose of the gateway.

Note

The gateway should not be installed where it is exposed to direct sunlight or the ambient temperatures become higher than 40 deg C or lower than 0 deg C. It could cause deformation, discoloration or break-down.

Do not use benzene, paint thinner, wipes, etc., to clean the gateway. It could discolor or break-down the gateway. Wipe it with a piece of cloth which is squeezed tightly after wetting with diluted neutral detergent. Finish up the cleaning by wiping with a piece of dry cloth.



Do not pull or twist the cables of the gateway. It could cause break-down.

General precautions

We cannot compensate when monthly calculation was not possible by the trouble of the gateway.

Warning

This is a class A product. In a domestic environment, this gateway may cause radio interference in which case the user may be required to take adequate measures. This gateway is not for domestic use.

Sales, lease, or any other form of transfer of this product to countries specified in export control laws (currently, Cuba, Iran, North Korea, Sudan, and Syria) is prohibited, as they are subject to the export control laws of the United States. Additionally, sales, lease, or any other form of transfer of this product to a third party (a third party recorded on a "list of organizations subject to embargo" for the U.S. Department of Commerce Bureau of Industry and Security) is strictly prohibited.

Introduction

This gateway does centralized monitoring and control of air conditioners from a computer.

System outline

The diagram below shows the system configuration. The gateway connected to air conditioners is connected to the personal computer used for monitoring and control by an Ethernet cable.

A logical unit of monitoring and control is the "Air-conditioner Cell" which consists of air conditioners and corresponds to a remote control group.

By connecting an electric energy meter or gas meter to this gateway, there is a calculating function that proportionally divides gas and electricity energy consumption according to the air conditioning usage for each air conditioning cell.

The calculation is performed on the control and monitoring computer using the included software "WGW256Utility."



Personal computer environment

•Please check that the computer meets the following specifications •CPU

- : 500MHz or higher (2GHz or higher is recommended)
- : 512MB or higher (1GB or higher is recommended) •Memorv
- •Screen size : 1366×768 or higher

OS and browser

The combination of the OS and Web browser of the control monitoring computer is as follows.

	Internet Explorer 10	Internet Explorer 11
Windows 7	OK	OK
Windows 8.1	NG	OK
Windows 10	NG	NG

OK: Can be used. NG: Cannot be used

Connections

If a private Ethernet connection is used (recommended)

This method is used to set up a **private** connection between the gateway and the personal computer used for monitoring and control.

Connection Method

Connect the gateway and personal computer directly using a 10BASE-T or 100BASE-TX Ethernet cable (cross cable).

If a hub is used, do not connect other devices to that hub.

•If an Internet or intranet connection is used

If the gateway is connected via the Internet or an intranet (office LAN) environment, please consult with the dealer. It is possible for them to arrange for connections on a charged work basis.

Personal computer initial configuration

Configuration in the case of a private Ethernet connection

Communication settings (TCP/IP settings) in the monitoring and control personal computer are necessary. For details, please read the operation manual supplied with your personal computer.

If the gateway is used as the factory set IP address, the settings for the computer are as shown below.

 IP Address : 192.168.0.1 - 192.168.0.254

(However, the gateway uses 192.168.0.110, so use an IP address other than this.)

- Subnet Mask : 255.255.255.0
- ·Default Gateway : Not specified
- Preferred DNS Server : Not specified
- Alternate DNS Server : Not specified

Configuration in the case of Internet or intranet connections

Please consult with the dealer. It is possible for them to arrange for connections on a charged work basis.

•Browser (Internet Explorer) Configuration Open Internet Explorer, then select "Internet Options" from the "Tools" menu at the top of the screen and carry out the following settings.

Internet Options
General Security Privacy Content Connections Programs Advanced
Home page To create home page tabs, type each address on its own line.
http://192.168.0.110/en/
Use <u>c</u> urrent Use de <u>f</u> ault <u>U</u> se new tab
Startup
Start with tags from the last session Start with home page
Tabs
Change how webpages are displayed in tabs.
Browsing history
Delete temporary files, history, cookies, saved passwords, and web form information.
Delete browsing history on exit
Delete
Appearance
Colors Languages Fonts Accessibility
OK Cancel Apply

 ∙In "General" Home Page 	http://192.168.0.110/en/ (If you changed the IP address of the gateway, you have to input that IP address instead of 192.168.0.110 in the address column. By entering the IP address of the gateway, the gateway login screen will open when your browser is started.)
In "Security"	
Internet	Default Level "Medium" After clicking the Internet tab, click the "Default Level" button.
Local Intranet	Default Level "Medium-low" After clicking the Local Intranet tab, click the "Default Level" button.
∙In "Privacy"	Default Level "Medium" Click the "Default" button. If the privacy setting is set to "Medium-high" or higher, the gateway cannot be used, so be sure to set the default value to "Medium."
 In "Connections" 	Set it so a proxy server is not used.
·In "Advanced"	Default Value It is recommended that the browser be used with the default values. Click the "Restore Defaults" button.

When you are finished with all the settings, click the "Apply" button, then click the "OK" button.

External dimensions



■Unit specifications

Item	Description
Product dimensions	260 (W) X 140 (H) X 93 (D) mm
Weight	2 kg
Power supply	AC100 / 220–240 V, ±10%, 50/60 Hz
Power consumption	6 W
Usage environment	Temperature: 0 to 40 deg C, Relative Humidity: Below 85% (without condensation)
Material	Casing: SECC
Storage environment	Temperature: -20 to 70 deg C, Relative Humidity: 40%–90%

Menu item



■Basic operation

•Logging In

The login screen is the starting screen for the gateway. The login screen is displayed by inputting the URL of the gateway from the computer's web browser.

- 1. Start the computer's browser (Internet Explorer).
- 2. Input the following URL, http://192.168.0.110/en/, in the address bar, then press the Enter key.

If your gateway's IP address has been changed, the above IP address "192.168.0.110" should be replaced by the new IP address.



Login screen

3. Input the User ID and Password

This screen is a screen for logging in to this gateway and authenticating the user who performs control monitoring operation with the user ID and password.

There are differences in authority depending on the user who logs in, with the following three categories of authority.

- System Administrator : Can operate all screens.
- Control and Monitoring User : Cannot oper
- Monitoring User
- : Cannot operate the Configuration menu. : Is authorized to use the monitoring screen only and
 - cannot perform any control operations.
- ·Factory default user ID and password of each user

User Category	user ID	password
System Administrator	Admin	123456
Control and Monitoring User	Controller	123456
Monitoring User	User	123456

4. <u>Click the "Login" button.</u>

Note

The User ID and Password can be changed in the Authentication Configuration screen. (See page 29.) Click the "日本語に切替" button to switch to the Japanese display.

•Overview Monitor screen

This screen is displayed when you log in.

This screen is for monitoring the overview of the whole air conditioner system. It is capable of monitoring up to 256 Air-conditioner Cells (air conditioner remote control group connection units). It displays the name of each Air-conditioner Cell, an error display icon, and the On/Off/Operation Mode icon.

Note

• The Overview Monitor screen is refreshed automatically (automatic update) at regular intervals. Refreshing the screen may take several seconds depending on the network's status and the computer's performance.

The refresh interval can be set to 10-180 seconds. (See page 33.)

• The characters and icons on the screen might move slightly when the screen is refreshed, but this is a characteristic of Internet Explorer.

WBGW1 Overview Monitor	Control Command	WBGW2 Schedule Control	Sw	WBGW3	WBGW4 Configuration Menu	Logout
<u>overview Molillor</u>	Control Command	<u>Schedule Control</u>	<u></u>	sem stop/recease	<u>Configuration Metho</u>	Logour
		Overview	w Monitor			. ∟
	_	_	_	_		1
Room 000	Room 001	Room 002	Room 003	Room 004	Room 005	
<u>Room 006</u>	Room 007	Room 008	<u>Room 009</u>	Room 010	Room 011	
<u>Room 012</u>	Room 013	Room 014	Room 015	Room 016	<u>Room 017</u>	
<u>Room 018</u>	Room 019	Room 020	Room 021	Room 022	Room 023	
<u>Room 024</u>	Room 025	Room 026	<u>Room 027</u>	Room 028	<u>Room 029</u>	
<u>Room 030</u>	Room 031	Room 032	Room 033	Room 034	Room 035	
<u>Room 036</u>	Room 037	Room 038	Room 039	Room 040	<u>Room 041</u>	
Room 042	Room 043	Room 044	Room 045	Room 046	Room 047	
<u>Room 048</u>	Room 049	Room 050	Room 051	Room 052	Room 053	
<u>Room 054</u>	Room 055	Room 056	Room 057	Room 058	Room 059	
Room 060	Room 061	Room 062	Room 063	Room 064	Room 065	
Room 066	Room 067	Room 068	Room 069	Room 070	Room 071	
Room 072	Room 073	Room 074	Room 075	Room 076	Room 0//	
Room 078	Room 0/9	Room 080	Room 081	Room 082	Room 083	
Room 084	Room 085	Room 086	Room 087	Room 088	Room 089	
Room 090	Room 091	Room 092	Room 093	Room 094	Room 095	
14	×	1		.	. ?	_

Overview Monitor screen

•Common operations in each screen

1. Displaying a different gateway (when multiple gateways are connected) Currently, the Overview Monitor screen of the gateway on the left end is displayed. To display the screen of other gateways, click the name of the gateway.

2. Displaying a different function screen

To display each function screen, click the function screen name ("Control Command", "Schedule control", etc.) from the menu at the top of the screen.

3. To log out

Click "Logout" from the menu at the top of the screen. You will be logged out and return to the login screen. • When "Buzzer ON" is selected on the WEB Configuration screen, the alarm buzzer function that gives the warning by sounding the buzzer when any error has occurred in an Air-conditioner Cell, is enabled. (See page 33.)

The alarm buzzer function works not only on this screen but also on any screen of this gateway. When the buzzer is sounding, the Buzzer Off button is shown at the left side of the screen on all screens.

	A http://192.168.0.110/e	n/statuscells	ي - د 1 - ۲	S WBGW	×			
File	Edit View Favorites Tools	s Help						
	WBGW1		WBGW2		WBGW3	WBGV	<u>V4</u>	
	Overview Monitor	Control Comma	nd Schedule Control	l <u>Sv</u>	stem Stop/Release	Configuration Menu	Logout	
	Suzzor Off		Overvie	ew Monitor		MITSU	BISHI	4
		Room 001	Room 002	Room 003	Room 004	Room 005	OUSTRIES	
	Room 006 Room 012	Room 007 Room 013	Room 008 Room 014	Room 009 Room 015	Room 010 Room 016	Room 011 Room 017		
	Room 018 Room 024	Room 019 Room 025	Room 020	Room 021 Room 027	Room 022 Room 028	Room 023 Room 029		
	Room 030 Room 036	Room 031 Room 037	Room 032	Room 033 Room 039	Room 034 Room 040	Room 035 Room 041		F
	Room 042 Room 048	Room 043 Room 049	Room 044 Room 050	Room 045 Room 051	Room 046 Room 052	Room 047 Room 053		— o
	Room 054	Room 055 Room 061	Room 056 Room 062	Room 057 Room 063	Room 058 Room 064	Room 059 Room 065		
	Room 066 Room 072	Room 067 Room 073	Room 068 Room 074	Room 069 Room 075	Room 070 Room 076	Room 071 Room 077		
	Room 078 Room 084	Room 079 Room 085	Room 080 Room 086	Room 081 Room 087	Room 082 Room 088	Room 083 Room 089	Ų	
	Room 090	Room 091	Room 092	Room 093	Room 094	Room 095		
	Auto	Heat 🗱	Cool 🗮 Fan	Dry	loff !	Failure	?No Data	

Overview Monitor screen when the buzzer is sounding

4. To stop the buzzer

- Click the "Buzzer Off" button. This stops the buzzer sounding on the Overview Monitor computer connected to this gateway.
- Since the volume of buzzer sound is set on the Overview Monitor computer, adjust the volume, if necessary, on the computer.
- When the buzzer sounds while this screen is minimized, maximize the screen, and then click the Buzzer Off button.
- When the window for another application is in front of the Internet Explorer window, bring this screen to the front, and then click the Buzzer Off button.

Note

If the login screen is displayed when you click the link on the screen such as "<u>Control Command</u>", that means the power of the gateway was turned off and on again. Please log in again. (See page 10.)

Individual Monitor screen

This screen is for indicating the detailed information on one Air-conditioner Cell in a pop-up window on the Overview Monitor screen.

5. Click the name of the Air-conditioner Cell you would like to monitor on the Overview Monitor screen.

The individual monitor screen will be displayed in a pop-up window.

Note

• The Individual Monitor screen is refreshed automatically (automatic update) at regular intervals. Refreshing the screen may take several seconds depending on the network's status and the computer's performance.

The refresh interval can be set to 10-180 seconds. (See page 33.)

• The characters and icons on the screen might move slightly when the screen is refreshed, but this is a characteristic of Internet Explorer.

After the pop-up window opens, clicking a different Air-conditioner Cell name will cause the previously opened pop-up window to close and a new pop-up window to open in the same place.

@ WBGW - Internet Explorer		
Indivi	dual Monitor	
Room 000		
This room is Cell 000.		
Operation Status	Auto On	
Failure Status	Normal	
Fan Speed	High	
Set Point	25.00 deg.	
Room Temperature	25.00 deg.	
Louver	Stop1	
Remocon Lock	Unlock	
Filter Sign	Off	
Error Code		

Individual Monitor screen

Operation Status

On

: At least one air conditioner is running in the Air-conditioner Cell.

Off : All air conditioners have stopped in the Air-conditioner Cell.

The operation mode of the running air conditioner with the smallest address in the Air- conditioner Cell is shown.

Failure Status

Normal : All air conditioners in the cell are not malfunctioning. Failure : One or more air conditioners in the cell are malfunctioning.

•FAN, SET TEMP., ROOM TEMP., LOUVER, LOCK

The current state of the running air conditioner with the smallest address in the Air- conditioner Cell is shown.

Filter sign

On	: At least one air conditioner's filter sign is on in the Air-conditioner Cell.
Off	: All air conditioners' filter signs are off in the Air-conditioner Cell.

•ERROR CODE

The error code for the air conditioner with the smallest address in the Air- conditioner Cell is shown.

■Control operation

You can use the control operation only when you log in as "System Administrator" or "Control and Monitoring User".

•Control Command screen

Use this screen to set the control commands for each Air-conditioner Cell.

In some models of air conditioners, it is not possible to set and display "POWERFUL".

If you select anything other than blank in an item in the ALL row, the settings will be applied to all registered Air-conditioner Cells.

1. Click "Control Command" from the menu at the top of the screen.

The Control Command screen will be displayed. (Displaying the screen may take several seconds depending on the state of the network, etc.) The current setting status is displayed.

2. Select control command values from the pull-down menus for each control item. Select each control command value, if necessary.

The setting range of the set temperature is limited as follows depending on the operation mode.

•On/Off	: On / Off
•Mode	: Auto / Cool / Dry / Fan / Heat
 Fan Speed 	: Powerful / High / Medium / Low
Set Point	: 16-30 deg C (Mode : no setting)
(0.5 deg C intervals)	10-30 deg C (Mode : Heat)
	16-35 deg C (Mode : other than Heat)
•Louver	: Swing / Stop1 / Stop2 / Stop3 / Stop4
Remocon Lock	: Lock / Unlock
Filter Sign	: RESET (turn off the filter sign)
•Failure	: If an error occurs, an error code is displayed. Operation is not possible.

3. Click the Set button.

The contents set in step 2 above are transmitted to the Air-conditioner Cells.

								- • ×
Attp://192.168.0.110/en/controlcells			א 🎒 ט- א	BGW	×			↑ ★ ₽
dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp								
WBGW1		WBGW2			WBGW3		WBGW4	
Overview Monitor	Control Command		Schedule Control	Sy	stem Stop/Release	Config	guration Menu	Logout
			Control C	ommand				
			Control C	ommanu				11 ts
Air-conditioner Cell Name	On/Off	Mode	Fan Speed	Set Point	Louver	Remocon Lock	Filter Sign	Failure
ALL		× Nioue	× ×	Set I tomt	V	×		^
Room 000	On 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 001	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 002	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 003	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 004	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 005	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 006	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 007	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 008	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 009	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 010	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 011	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 012	Off 🗸	Auto 🗸	High 🗸	25.0 🗸	Stop1 🗸	Unlock 🗸	Off 🗸	
Room 013	0# 🗸	Auto 🗸	High 🗸	25.0 🗸	Ston1 V	Unlock V	Off 🗸)
			Set This screen is not upo	Refresh Screen) lated automatically.				-

Control Command screen

•System Stop/Release screen

Use this screen to stop or release all the air conditioners connected to the gateway.

<System Stop>

1. Click "System Stop/Release" from the menu at the top of the screen.

The System Stop/Release screen will be displayed.

2. Click the "System Stop" button.

All the air conditioners under this gateway immediately stop and are set to the Remote control Lock mode. Then, the screen will return to the Overview Monitor screen.

Even if a system stop command is received from the host computer by BACnet communication, or when the contact connected to the system stop input terminal (DI1) becomes "closed" by a fire alarm device, etc., it will be forcibly stopped.

		Ø + Q 🥖	NBGW ×		<u>↑</u> ★ ☆
<u>File Edit View Favorites Tools Help</u>	117	POW	WDCI1/2	IUPCI	1/4
Overview Monitor	Control Command	Schedule Control	Switem Stop/Release	Configuration Menu	Logout
Overview Monitor	<u>contor command</u>	<u>Schedule Control</u>	System Stop reclease	<u>configuration went</u>	Logour
		System St	op/Release	🔶 MITSU	BISHI
				HEAVY INC	DUSTRIES
	C .	System is in the	normal operation.		
	Cautior	m Stop command will be se n! Please do not depress the	nt by depressing the button below. button below except for emergency.		
		System	m Stop		
	C) //	tom Stop/F			

System Stop/Release screen

<System Release>

1. Click the "System Release" button during a System Stop.

The stop setting for all air conditioners will be released, the Overview Monitor screen will be displayed, and the scheduled operation from that point on will be enabled.

The remote control operation returns to the state before the System Stop.

Note

- While the contact connected to the system stop input terminal (DI1) is "closed", the stopped state cannot be released by this screen. The system stop condition becomes released when the contact connected to the system stop input terminal (DI1) becomes "open" in the state where two minutes or more has passed since the system stop condition by terminal (DI1) was started.
- Even when the system stop condition becomes released, the air conditioners will not start operating automatically. Start the operation manually.

					×
	nstop	ନ କ 🖉 WB	GW ×		↑ ★ ‡
<u>File Edit View Favorites Tools Help</u>					
WBGW1		WBGW2	WBGW3	WBGW4	
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout
	instan Stannad	System Sto	p/Release		
	area stopped	J .	L		s
		Sustem Ston	is active		
		Release command will be sent by	y depresing the button below.		
		_	_		
		(Syste Relea	m)		
	0 1 01	/B		01	

System Stop/Release screen during a System Stop

•Schedule Control screen

This screen displays the Schedule Control composed of the Master Schedule and calendar for each Air-conditioner Cell, and is used to input data and edit the Schedule Control. Every day, at the change of the date, the data of the Schedule Control is shifted by one day, and one day's data is copied from the Master Schedule to the 7th day's schedule data of the Schedule Control.

Note

- If you want to change the schedule within 7 days from the current day, change the schedule in this Schedule Control screen.
- If you jump to the screen for another month without clicking the Set button, or if you click the "Undo" button, all the contents input in this screen will be deleted, so exercise caution.
- If you click the "Undo" button, the contents input will be deleted and the saved content is displayed again.
- Clicking the "Load Master" button causes the schedule to be loaded from the annual calendar and Master Schedule and displayed on the screen. If the "Set" button is then clicked, the Schedule Control is set from the Master Schedule.
- The instructions and display contents in this screen can be copied to another Air-conditioner Cell or another date. Select the Air-conditioner Cell name and corresponding schedule date that is the destination, then click "Copy". When "ALL" is selected, the settings are copied to all the Air-conditioner Cells.
- This gateway updates the Schedule Control once a day at 00:00 in the middle of the night.
- The actual operation schedule is in accordance with the Schedule Control displayed in this screen, but when the system is operated using the remote control, etc., it may not run in accordance with the schedule.
- When all the air conditioners stop by system stop, not only does operation stop, but the entire Schedule Control will not be executed.
- · In some models of air conditioners, it is not possible to set and display "POWERFUL".

1. Click "Schedule Control" from the menu at the top of the screen.

In the initial screen, the Schedule Control of the cell with the lowest cell No. is displayed. (It may take several seconds to display this screen depending on network conditions.)



Schedule Control screen

2. Select the Air-conditioner Cell name and corresponding schedule date.

Select the Air-conditioner Cell name and corresponding schedule for the Air-conditioner Cell that is being displayed and edited. A seven-day Schedule Control from the current day to 6 days in advance can be displayed and edited.

3. Select and input each schedule item.

The following items can be set as schedule items in this screen.

- •Time : 00:00–23:59 (1-minute intervals)
- •On/Off : Blank (not specified), On, Off
- •Mode : Blank (not specified), Auto, Heat, Cool, Fan, Dry
- •Fan Speed : Blank (not specified), Powerful, High, Medium, Low
- •Set Point : Blank (not specified), Depending on the operation mode, it can be selected within the following ranges. (0.5°C increments)
 - •16-30 deg C (Mode : no setting)
 - ·10-30 deg C (Mode : Heat)
 - •16-35 deg C (Mode : other than Heat)

·Remocon Lock/Unlock : Blank (not specified), Lock, Unlock

One time can be set with a combination of up to 5 items (On/Off, Mode, Fan Speed, Set Point, Remocon Lock). Up to 20 settings can be set.

4. Click the "Set" button.

■System administrator setting

You must log in as a system administrator to make these settings.

•Configuration Menu screen

This screen is displayed when "Configuration Menu" is clicked from the menu at the top of the screen. The following Configuration menus are available.

- Basic Configuration Menu
- Web Configuration Menu
- BACnet Configuration Menu

Note

The BACnet function setting screen is not used. Click the return button to return to the setting menu screen.

000					- • • × •
(C) (A) (A) (A) (A) (A) (A) (A) (A) (A) (A	on	w 🎒 ۲۰۹	3GW ×		nt ★ ☆
<u>File Edit View Favorites Iools Help</u>		NIRCHIO	WDCW2	NDCN/4	
wbGw1	0.10.1	WDGW2	wbgws	WDGW4	
Overview Monitor	Control Command	Schedule Control	System Stop Release	Configuration Menu	Logout
		Configurat	ion Menu		
					s
		Basic Config Web Config	uration Menu		
		BACnet Confi	guration Menu		

Configuration Menu screen

•Basic Configuration Menu screen

This screen is displayed when the "Basic Configuration Menu" link is clicked on the Configuration Menu screen.

The following Basic Configuration menus are available.

- Air-conditioner Cell Configuration
- Air-conditioner Cell Configuration File Upload/Download
- Network Configuration
- Date and Time Configuration
- Security Configuration
- Authentication Configuration
- Language Configuration
- Pulse count & DI status Check

← → Ø http://192.168.0.110/en/configurationbasic	<u>چ</u> ۵-۹	WBGW ×		↑ ★ ☆
<u>File E</u> dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp				
WBGW1	WBGW2	WBGW3	WBGW4	
Overview Monitor Co	ntrol Command Schedule Control	System Stop/Release	Configuration Menu	Logout
	Basic Config	guration Menu		
	Air-condition	er Cell Configuration		
	Air-conditioner Cell Cont	figuration File Upload/Download		
	Network	c Configuration		
	Date and T	ime Configuration		
	Security	Configuration		
	Authentica	tion Configuration		
	Languag	e Configuration		
	Pulse count	& DI status Check		
		PI		
		Dack		

Basic Configuration Menu screen

Air-conditioner Cell Configuration screen

This screen is used to define the air conditioners that comprise each Air conditioner Cell and to set the name for each Air conditioner Cell, such as "Conference Room A".



Air-conditioner Cell Configuration screen

1. Click "Air-conditioner Cell Configuration" in the Basic Configuration Menu screen.

(See page 20.)

A list of air conditioners constituting each Air conditioner Cell will be displayed. (Displaying the screen may take several seconds depending on the network state.)

2. Assign Air-conditioner Cell numbers by giving each one an SL (Superlink) System

No. and SL (Superlink) Address.

Inputting the same Air-conditioner Cell No. for multiple air conditioners (SL Addresses) defines them as being in the same group (Air-conditioner Cell). Make sure that the Air-condition Cell corresponds to a remote control group. An Air-conditioner Cell can be defined with only one air conditioner.

The maximum number of air conditioners, which can be registered in an Air-conditioner Cell, is 16.

3. Input the Air-conditioner Cell names and descriptions.

You can input the Air-conditioner Cell name and description on the line of the air conditioner with the lowest SL Address in the Air-conditioner Cell.

Note

- It is possible to input an Air-conditioner Cell name with up to 16 one-byte characters.
- It is possible to input a description with up to 64 one-byte characters, and display it on the individual monitoring screen.
- The contents of the Air-conditioner Cell Configuration can be saved in CSV files or XML files and uploaded. (See page 23.)

4. Select the Accounting Type and Capacity.

The Accounting Types are shown below.

- MULTI1 : Calculating according to the amount of refrigerant flow. Used for KX Series.
- MULTI2 : Calculating according to Thermo ON/OFF. Used for KX Series.
- RUN/STOP : Calculating according to the operating time. Used for KX series, and single split PAC series connected by a Superlink adapter.

Note

Wrong settings may cause a significant error in the calculating results for electricity or gas.

5. Click the Set button.

The settings are updated using the revised information.

Note

*The meter connection information and meter information (WATT/GAS and unit quantity per pulse) of each air conditioner are set using WGW256Utility, so setting on this screen is unnecessary. It is also unnecessary to set the Calculation Interval.

•Air-conditioner Cell Configuration File Upload/Download screen

This screen is used to download the Air-conditioner Cell Configuration information which was set on the Air-conditioner Cell Configuration screen to a computer, or upload an Air-conditioner Cell Configuration File from a computer for control and monitoring to this gateway.

An Air-conditioner Cell Configuration file is a CSV file or XML file containing a list of the SL system No., SL address, Accounting Type, Capacity, Air-conditioner Cell name, Description, meter information, and Calculation interval of each air conditioner in Air-conditioner Cells indexed by the Air-conditioner Cell No. When either the CSV or XML format is selected and the file is exported, the Air-conditioner Cell Configuration File "PACinfo256.csv" or "PACinfo256.xml" will be saved to the computer. It is possible to edit files with spreadsheet software, etc.

If a CSV file (PACinfo256.csv) or XML file (PACinfo256.xml) on a computer is uploaded to this gateway, the contents of this file will be used for the Air-conditioner Cell Configuration screen.

CELL_ NO	PLACE	PLACE_ SHORT	SL_LINE	SL_ ADDRESS	KAKIN_ TYPE	ABILITY	P1	T1	C1	•••	P8	Т8	C8	INTERVAL
C000	This room is Cell 000.	Room 000	S1	U000	MULTI1	5.6								1
C001	This room is Cell 001.	Room 001	S1	U001	MULTI1	7.1								1
C001	This room is Cell 001.	Room 001	S1	U002	RUN/ STOP	7.1								1
C001	This room is Cell 001.	Room 001	S1	U004	RUN/ STOP	14								1
•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••

<Examples of Air-conditioner Cell Configuration>

<How to interpret the above table.>

· Items are as follows.

- Air-conditioner Cell Number	: CELL_NO
- Description	: PLACE
- Air-conditioner Cell Name	: PLACE_SHORT
- SL System Number	: SL_LINE
- SL Address	: SL_ADDRESS
- Accounting Type	: KAKIN_TYPE
- Capacity[kW]	: ABILITY
- Meter Connection Information	: P1~P8
- Meter Information	
WATT/GAS	: T1~T8
Unit Quantity Per Pulse	: C1~C8
- Calculation Interval	: INTERVAL

- The air conditioner with the SL address U000 in the Superlink system SL1 is set in Air-conditioner Cell No. C000.
- Air conditioners with SL address U001, U002 and U004, respectively, in the Superlink system SL1, are set in Air-conditioner Cell C001, and these three air conditioners are grouped together as a single logical object. The air conditioner with the lower SL address becomes the representative unit in the Air-conditioner Cell, and the Air-conditioner Cell name and Description are set.
- The address U003 is omitted, but this indicates that air conditioner U003 is not currently connected.

<To create / edit the Air-conditioner Cell Configuration File on a computer>

- When the air conditioner which has been listed is not connected, it's possible to delete each row. Even if the corresponding line is deleted, it shows that the air conditioner is not connected.
- Air-conditioner Cell No. designation does not have to be in serial order, but in the Overview Monitor screen, the Air-conditioner Cells are displayed in the order of their cell No.
- Set the Accounting Type to "MULTI1", "MULTI2", or "RUN/STOP" using one-byte uppercase characters.
- Set the Capacity from 0.0 to 224.0 using one-byte numerals to one decimal place.
- Do not use ", & < >" "for each input item. If you enter these characters and upload the file, the screen may not be displayed correctly. In this case, turn off the power of this gateway, turn on the power again, and upload the file without ", & < >" ".
- 1. In the Basic Configuration Menu screen, click "Air-conditioner Cell Configuration File Upload/Download". (See page 20.)

Image: With Provides 100k Help MEGW2 WEGW3 WEGW4 Overview Monior Control Command Schedule Control System Stop Release Configuration Menu Logout Download Please select the file format and push the download button. Image: CSV XML XML XML (Please select the upload file with reference button, and then press the upload button. Image: Cell Configuration File Upload Please select the upload file with reference button, and then press the upload button. Image: Cell Configuration File Upload Please select the upload file with reference button, and then press the upload button. Air-conditioner Cell Configuration File: Image: Cell Configuration File					- • ×
Please select the upload file with reference button, and then press the upload button. Please select the upload file with reference button, and then press the upload button.		د 🖉 WBC	sw ×		↑ ★ ☆
WBGW1 WBGW2 WBGW3 WBGW4 Overview Monitor Control Command Schedule Control System Stop Release Configuration Menu Locout	<u>ile E</u> dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp				
Overview Monitor Control Command Schedule Control Logout Air-conditioner Cell Configuration File Upload/Download Download Please select the file format and push the download button. @ CSV @ XML @ XML @ Download Upload Please select the upload file with reference button, and then press the upload button. Air-conditioner Cell Configuration File: Upload Upload Upload Upload 	WBGW1	WBGW2	WBGW3	WBGW4	
Air-conditioner Cell Configuration File Upload/Download Download Please select the file format and push the download button. CSV CXML CXML XML Download Upload Please select the upload file with reference button, and then press the upload button. Air-conditioner Cell Configuration File: Upload	Overview Monitor	Control Command Schedule Control	System Stop/Release	Configuration Menu	Logout
Download Please select the file format and push the download button. CSV XML XML(Factory Setting) Download Upload Please select the upload file with reference button, and then press the upload button. Air-conditioner Cell Configuration File: Upload		Air-conditioner Cell Configura	ation File Upload/Downloa		41 IS
Upload	Download	Please select the file format an	d nuch the download button		
VML (Factory Setting) Download Upload Upload Please select the upload file with reference button, and then press the upload button. Air-conditioner Cell Configuration File: Upload Upload Upload		● csv			
Upload Upload Please select the upload file with reference button, and then press the upload button. Air-conditioner Cell Configuration File: Upload Upload		○ XML ○ XML(Factory Setting)			
Upload Please select the upload file with reference button, and then press the upload button. Air-conditioner Cell Configuration File: Upload Upload		Download			
Air-conditioner Cell Configuration File: Upload	Upload	Please select the upload file with reference	button, and then press the upload button.		
Upload		Air-conditioner Cell Configuration File:	Browse		
		Upload			
		Back			
Back					
Back					

Air-conditioner Cell Configuration File Upload/Download screen

<To download>

2. Select a file format to download.

3. Click the Download button

Specify the save destination, and then save the file.

- •CSV : "PACinfo256.csv" file will be saved.
- •XML : "PACinfo256.xml" file will be saved.
- •XML(Factory Setting) : "defaultPACinfo256xml" file will be saved.

Note

If spreadsheet software, etc., is installed on your computer, you can open the downloaded file in the software and edit it directly.

<To upload>

4. Click the "Browse" button and select "PACinfo256.csv" or "PACinfo256.xml" saved on the computer.

5. Click the "Upload" button.

The setting contents of the file are reflected in the Air-conditioner Cell configuration.

Note

The Air-conditioner Cell Configuration File of the SC-WGWNB(256)-A/-B and SC-WGWNB(256)-A/-B gateways and earlier cannot be uploaded.

Network Configuration screen

This screen is used to set the IP address of web browser.

- 1. In the Basic Configuration Menu screen, click "Network Configuration". (See page 20.)
- 2. When the IP Address was changed.
- 2-1. Input the desired IP Address and the Subnet Mask.

Caution

- If a wrong IP Address is input, you will not be able to access the gateway anymore.
- 2-2. If necessary, input the Default Gateway IP address.

Note

Consult with the network administrator to determine if a Default Gateway setting is necessary or not.

3. Select the Superlink version "New" or "Previous".

4. Click the "Set" button.

Note

The gateway will be rebooted automatically when the "Set" button is clicked. After that, the gateway cannot be accessed for about 5 minutes. Please log in again with the changed IP Address after about 5 minutes.

C Attp://192.168.0.110/en/confignetwork	c	ک ()	NBGW ×		<u>↑ ★ ₽</u>	
<u>File Edit View Favorites Tools Help</u>						
WBGW1		WBGW2	WBGW3	WBGW4		
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout	
		Network Co	onfiguration			
			gar		11 Es	
		IP Address	192.168.0.110			- 2-1
		Subnet Mask	255.255.255.0			
		Default Gateway				- 2-2
						0
		Superlink version	OPrevious	-		-3
		Set	Back			
						- 4

Network Configuration screen

•Date and Time Configuration screen

This screen is used to set the internal time clock of the gateway or match it automatically according to the NTP server on the network.

The Schedule Control is executed in accordance with this clock setting, so in order to assure correct operation, it is necessary to correct the setting on this clock regularly.

1. In the Basic Configuration Menu screen, click "Date and Time Configuration".

(See page 20.)

In the initial screen, the gateway's current time is set in the time input column.

(-) (2) http://192.168.0.110/en/con	figdatetime	۵ - د 💋 we	gw ×		- □ - ×
<u>File Edit View Favorites Iools He</u>	lp				
WBGW1		WBGW2	WBGW3	WBGW4	
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout
		Date and Time	Configuration		HI
		Currently s	et time		~
		2017/04/07	14:35:52		
P1	ease enter the time difference of in	stallation location.			
	Time zone (Time	difference from UTC): UTC+09:00	 Please be sure to enter the time difference 	c.	
Man	ual adjust				
P1	ease enter the time to change.				
	Date (YYYY/MM/DD): 2017	/ 04 / 07 Time (HH:M	M): 14 : 35		
P1	ease be aware that significant chan	ges in time may affect billing data.			
	-				
Auto	matic adjust				
	Using NTP: NTP Server IP Ad	iress:			~
		(Set)	Back		

Date and Time Configuration screen

2. Select the Time zone (Time difference from UTC) of the area where the gateway is

used.

Caution Be sure to set the Time zone.

If the "Time zone" is not set correctly, the gateway's clock will be set to the wrong time.

<For Manual adjust>

3. Input the current date and time.

The Date and Time can be input within the following ranges.

Batto and this	le call be input maint alle fene
 AD Year 	: 2000 ~ 2038
 Month 	: 1 ~ 12
•Day	: 1 ~ 31
•Hour	: 0 ~ 23 (24-hour notation)
 Minute 	: 0 ~ 59

<For Automatic adjust>

4. Select the "Using NTP" check box and input the IP address of the NTP server.

Note

Consult with the network administrator about the IP address of the NTP server.

When you enable NTP, you cannot input the current date and time setting manually in **step 3.** above.

5. Click the "Set" button.

Note

- The time is refreshed automatically once every 2 seconds, but there is a variance of several seconds. The time needed for a refresh screen may take several seconds.
- · Leap year processing is also executed automatically.
- A significant change in the time may affect the calculating data.
- The gateway will be rebooted automatically when the "Set" button is clicked. After that, the gateway cannot be accessed for about 5 minutes. Log in again after about 5 minutes.

•Security Configuration screen

This screen is for specifying the IP address of the computer that allows the gateway to log in. **Caution**

Be careful not to make any mistakes in setting the IP address.

No addresses are set at the factory, so any computer with any IP address can access the gateway. However, if even one IP address is entered in this screen for which access is permitted, the gateway can be accessed from only the computer with that address.

1. In the Basic Configuration Menu screen, click "Security Configuration". (See page 20.)

2. Input the IP address of the computer for which access is permitted.

3. Click the Set button.

(-) Ø http://192.168.0.110/en/configsecurity	y	ନ + ୯ 💋 wBGW	×			
<u>File Edit View Favorites Tools Help</u>	WBG	3W2	WEGW3	WBGW4		
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout	
		Security Config	guration		SMI Rifes	
						2
		Set .	Back)			3

Security Configuration screen

•Authentication Configuration screen

This screen is used to set and change the User ID and Password for logging in to the gateway.

1. In the Basic Configuration Menu screen, click "Authentication Configuration".

(See page 20.)

2. Input the User ID and Password of each Authentication. (See page 10.)

Input the User ID using 4-16 one-byte alphanumeric characters and the Password using 6-16 one-byte alphanumeric characters.

3. Click the "Set" button.

	thentication	<u>@</u> ۲-۵	WBGW ×		• • • × ↔	
<u>File Edit View Favorites Iools Help</u>						
WBGW1		WBGW2	WBGW3	WBGW4		
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout	
		Authentication	n Configuration		SHI Ries	
		Authentication User	ID Password			
		Administrator Admin	•••••			•
		Controller	•••••			<u> </u>
		User	•••••			
						3
	En	Set ter as a pair of User ID and Password) Back for authentication that you want to change.			3

Authentication Configuration screen

•Language Configuration screen

This screen is used to switch the display language, and to upload or download the language configuration file ("language.xml").

The language configuration file is in the XML file format. This file is a comparison list of English and the user's language. It is possible to edit this file with spreadsheet software, etc.

Note

Do not use ", & < >" "in the language setting file. If you enter these characters and upload the file, the screen may not be displayed correctly. In this case, turn off the power of this gateway, turn on the power again, and upload the file without ", & < >" ".

1. From the Basic Configuration Menu screen, click "Language Configuration".

(See page 20.)

Eile Edit View Favorites Iools Help WBGW1	W	BGW2	WBGW3	WBGW4	
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout
		Language Cont	figuration		SHI Ries
Upload language file					
Download					
Upload	Upload language file:	language file ODownload factory	Browse U	pload	
Select Language		©English OUser	Set)		
			_		
		Back			

Language Configuration screen

<To download>

- 2. Select "Download language file" or "Download factory language file".
- 3. Click the "Download" button.

The "language.xml" file will be saved.

<To upload>

- 4. Click the "Browse" button and select the "language.xml" file.
- 5. Click the "Upload" button.

<To change the display language>

- 6. Select "English" or "User".
- 7. Click the "Set" button.

The display switches to the display of the selected language.

Note

The language configuration file of the SC-WGWNB(256)-A/-B and SC-WGWNB(256)-A/-B gateways and earlier cannot be uploaded.

• Pulse count & DI status Check screen

You can check the total number of input pulses (updated every 1 minute) of the pulse input terminals (P1 to P8) and the input state (Open / Close) of the contact signal input terminals (DI1 to DI3).

1. From the Basic Configuration Menu screen, click "Pulse count & DI status Check". (See page 20.)

When the "Reset" button is clicked, the display value of the pulse number becomes 0.

This screen is a test screen for checking the operation of the terminals, and resetting the number of pulses displayed does not affect information calculated internally at all.

Click the "BACK" button to return to the Basic Configuration Menu screen.

				- • ×			
Attp://192.168.0.110/en/pulsecounter	P - C ⊘ WBGW ×			☆ ☆ ☆			
File Edit View Favorites Tools Help	umouro.	u pouro					
WBGW1	WBGW2	WBGW3	WBGW4				
Control Command Ove	rview Monitor Schedule Control	System Stop/Release	Configuration Menu	Logout			
	Pulse count & DI status Check						
	PI1 PI2 PI3 PI4 PI5 PI 0 0 0 0 0 0	6 PI7 PI8 DI1 DI2 DI3 0 0 Open Open Open					
	Reset	Back					

Pulse count & DI status Check screen

•Web Configuration Menu screen

This screen is displayed when the "Web Configuration Menu" link is clicked on the Configuration Menu screen.

The following Web Configuration menus are available.

- WEB Configuration
- Link Configuration
- Calendar Configuration
- Master Schedule Configuration
- Calendar/Schedule Backup File Upload/Download
- Accounting File Download
- Accounting Period Time

					- • ×
Attp://192.168.0.110/en/configuration	ationweb	w 🏹 ۲-۹	BGW ×		↑ ★ ₽
<u>File Edit View Favorites Tools Help</u>					
WBGW1		WBGW2	WBGW3	WBGW4	
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout
		Web Configu	ration Menu		11 IS
		Link Cor	ifiguration		
		Calendar C	onfiguration		
		Master Schedu	le Configuration		
		Calendar/Schedule Back	up File Upload/Download		
		Accounting I	File Download		
		Accounting	Period Time		
		Ba	ck)		

Web Configuration Menu screen

•WEB Configuration screen

This screen is for setting the refresh interval of the monitoring screen of the web browser.

- 1. From the Web Configuration Menu screen, click "WEB Configuration". (See page 32.)
- 2. Set the Screen Refresh Interval.

Set the screen refresh interval to 10-180 seconds. (It is set at 30 seconds at the factory.)

Note

The maximum delay time from the time the air conditioner's status changes until the change is reflected on the computer screen is virtually decided by this setting. If the time set for this interval is short, there may be some flickering on the screen from the web browser, so it is recommended that the refresh time be set at about 30 seconds.

- 3. When using the alarm buzzer function, select the "Failure buzzer" check box.
- 4. Click the "Set" button.



•Link Configuration screen

This screen is used to set the web linkages among a number of gateways. The linkages are a function for switching and manipulating multiple gateways in the browser. Up to 4 gateways can be set including the currently logged in gateway.

1. In the Web Configuration Menu screen, click "Link Configuration". (See page 32.)

2. Input the Linkage Gateway Name and IP Address of the destination gateways.

•Input the "Linkage Gateway Name " and "IP Address" together as a set.

- ·It is possible to input "Linkage Gateway Name" with up to 16 one-byte characters.
- •Enter the "IP address" using one-byte numerals and "."
- •The order of the text boxes to be inputted corresponds to the display position in the link tab menu.
- •Be sure to include the currently logged in gateway.

The gateway recognizes the input name as its own Link Name when the input IP address matches its own IP address. Then its own Link Name Tab is displayed in dark blue.

The links cannot be set together with the SC-WGWNB(256)-A/-B and SC-WGWNB(256)-A/-B gateways and earlier.

3. Click the "Set" button.

	0 - 6 6	MIRCHU		ŀ	
Eile Edit View Favorites Iools Help	~~ · · ·]	WBGW			
WBGW1	WBGW2	WBGW3		WBGW4	
Overview Monitor Co	ontrol Command Schedule Control	System Stop/R	lelease	Configuration Menu	Logout
	Link Cor	nfiguration			
	Linkage wit	th other Gateways		_	
Linkage C WBGW1	Gateway Name 1 Linkage Gateway Name 2 WBGW2	Linkage Gateway Name 3 WBGW3	Linkage Gateway Name WBGW4	4	
IP Addres [192.168.0	IP Address 110 192.168.0.112	IP Address 192.168.0.113	IP Address 192.168.0.114		
	Set	Back			

Link Configuration screen

•Calendar Configuration screen

This screen is used to set the special dates for the coming 12 months.

Caution

The schedule within 7 days from the current day cannot be changed, even if Calendar Configuration is changed.

You must change the schedule in the Schedule Control screen. (See page 17.)

1. In the Web Configuration Menu screen, click "Calendar Configuration". (See page 32.)

The calendar for the current month will be displayed.



Calendar Configuration screen

2. Select the month that you would like to set.

The calendar for the month you selected will be displayed. (It may take several seconds to display the calendar screen depending on the network conditions, etc.)

3. Select an item from the pull-down menu.

Weekday	Date for setting the Master Schedule for each day of the week		
Holiday, Special Day 1, Special Day 2	Date for setting a special Master Schedule regardless of which day of the week it is		
All an earth a individual days and human a she to We shaled at the idea. On a sight day 4 as On a sight day 0			

When setting individual days one by one, select Weekday, Holiday, Special day 1 or Special day 2 from the pull-down menus.

4. Click the "Set" button.

Note

- If you jump to the screen for another month without clicking the "Set" button, or if you click the "Undo" button, all the contents input in this screen will be deleted, so exercise caution.
- If you click the "Undo" button, the saved content is displayed again.
- There is one calendar for one gateway. All Air-conditioner Cells in a gateway are run from the same calendar.
- When the month changes, all days of a new month (12th month) will be created as a Weekday.
- The calendar settings of the past day will be erased when the month changes.
- Even if the gateway's power is turned off, the calendar settings are saved to memory.
- If you manually advance the time of this gateway, the past calendar may be deleted.

Master Schedule Configuration screen

The Master Schedule is the data decided by the kinds of days defined in the Calendar (10 types: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday, Holiday, Special Day 1, and Special Day 2). The actual schedule actions are executed by the Schedule Control. (See page 17.)

Every day, at the change of the date, the data of the Schedule Control is shifted by one day, and one day's data is copied from the Master Schedule to the 7th day data of the Schedule Control.

Caution

- The data of the Master Schedule will copied and activated from 7 days after.

- The schedule within 7 days from the current day will not be reflected even if you change this Master Schedule. You must change the schedule in the Schedule Control screen. (See page 17.)

1. In the Web Configuration Menu screen, click "Master Schedule Configuration".

(See page 32.)

In the initial screen, the Monday of the Air-conditioner Cell with the lowest number is displayed in the Air-conditioner Cell column on the left side of the screen.



Master Schedule Configuration screen

2. Select the Air-conditioner Cell Name and the Schedule date.

The display will change to the corresponding Master Schedule Configuration screen.

3. Select and input the desired settings for each schedule item.

In this screen, the following items can be set as schedule items

•Time	: 00:00–23:59 (1-minute intervals)
•On/Off	: Blank (not specified), On, Off
•Mode	: Blank (not specified), Auto, Heat, Cool, Fan, Dry
•Fan Speed	: Blank (not specified), Powerful, High, Medium, Low
•Set Point	: Blank (not specified), Depending on the operation mode, select within the : following ranges. (0.5°C increments)
	•16-30 deg C (Mode : no setting)
	•10-30 deg C (Mode : Heat)

•16-35 deg C (Mode : other than Heat)

•Remocon Lock : Blank (not specified), Lock, Unlock

5 items (On/Off, Mode, Fan Speed, Set Point, Remocon Lock) can be set together for 1 time setting. Up to 20 settings can be set.

4. Click the "Set" button.

Note

- If you jump to the screen for another month without clicking the "Set" button, or if you click the "Undo" button, all the contents input in this screen will be deleted, so exercise caution.
- If you click the "Undo" button, the saved content is displayed again.
- Even if the Master Schedule is changed, it has no influence on the current Schedule Control.
- The Master Schedule can be copied to another Master Schedule. Select the Air-conditioner Cell name and desired schedule date of the destination, then click "Copy". When "ALL" is selected, the settings are copied to all the Air-conditioner Cells.
- In some models of air conditioners, it is not possible to set and display "POWERFUL".
- Even if the gateway's power is turned off, the Master Schedule Configuration is saved to memory.

•Calendar/Schedule Backup File Upload/Download screen

This screen is used to download or upload the backup files for the Calendar Configuration, Master Schedule Configuration and Schedule Control (called hereafter the schedule backup files).

1. From the Web Configuration Menu screen, click "Calendar/Schedule Backup File Upload/Download". (See page 32.)

				- • ×		
→ 🥖 🦽 http://192.168.0.110/en/configschedulefile	D - C 🏉 We	3GW ×		↑ ★ ☆		
ile <u>E</u> dit ⊻iew F <u>a</u> vorites <u>I</u> ools <u>H</u> elp						
WBGW1	WBGW2	WBGW3	WBGW4			
Overview Monitor Control Cor	mmand Schedule Control	System Stop/Release	Configuration Menu	Logout		
(Calendar/Schedule Backu	p File Upload/Download				
Download						
	Click the download butt	on to download the file.				
(Download)						
Upload Please select the upload file with reference button and then clink the upload button. Browse Upload						
Caution: Uploading the file will automatically restart the sateway.						
	Bac	<u>k</u>				

Calendar/Schedule Backup File Upload/Download screen

<To download>

- 2. Click the Download button.
- 3. Specify the saving address and save.

The file "schedule256.tgz" is saved.

<To upload>

4. After clicking the "Browse" button, select the file to upload.

Note

Since a schedule backup file is a binary file special to the gateway, the downloaded file cannot be edited and uploaded.

5. Click the Upload button.

Note

- After the upload of a schedule backup file, the gateway reboots automatically. Please log in again after about 5 minutes.
- The schedule backup files of the SC-WGWNB(256)-A/-B and SC-WGWNB(256)-A/-B gateways and earlier cannot be uploaded.

Accounting File Download screen

This screen is used to download the accounting data files.

Accounting data files are binary files special to WGW256Utility.

Data of the last 12 months including this month is saved in the gateway and downloaded. Data in earlier months is deleted automatically. Once the data is deleted, it can no longer be downloaded.

Accounting data files cannot be deleted or reset manually.

1. From the Web Configuration Menu screen, click "Accounting File Download".

(See page 32.)

Comparison P + C WBGW x A ★ X3 Bit Edit View Fayorite: Loss View Fayorite: Lossout Accounting configurations file Download Schedule Control System Stop Release Configuration Menu Lossout Accounting configurations file Download It will be downloaded with the file name "WGW256config.bin". Image: Control Command Control Command <th></th> <th></th> <th></th> <th>l</th> <th></th>				l	
Die Jahr United Loos UNBOW2 UNBOW3 UNBOW4 Overview Monitor Control Command Schedule Control System Stop Release Configuration Menu Logout Accounting File Download It will be downloaded with the file name "WGW256config.bin". Image: Control Command Image: Control Comman	(=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=) (=)	ר ל ⊘ wbgw	×		<u>↑★</u> #
Overview Monitor Control Command Schedule Control System Stop Release Configuration Menu Logout Accounting File Download Accounting configurations file Download It will be downloaded with the file name "WGW256config.bin". Download Accounting data file Download It will be downloaded with the file name "WGW256costYYMM.bin". May. 2016 Download Jul. 2016 Download Sep. 2016 Download Nev. 2016 Download Value Download Value Download 	WBGW1	WBGW2	WBGW3	WBGW4	
Accounting File Download Accounting configurations file Download with the file name "WGW256config.bin". Download Accounting data file Download It will be downloaded with the file name "WGW256costYYMM.bin". May. 2016 Download Jul. 2016 Download Accounting data file Download Accounting data file Download Accounting data file Download Nev. 2016 Downlo	Overview Monitor Control Comm	Command Schedule Control	System Stop/Release	Configuration Menu	Logout
Accounting configurations file Download It will be downloaded with the file name "WGW256config.bin". Download Accounting data file Download It will be downloaded with the file name "WGW256costYYMM.bin". May. 2016 Download Jul. 2016 Download Aug. 2016 Download Sep. 2016 Download Sep. 2016 Download Nev. 2016 Download Nev. 2016 Download Nev. 2016 Download		Accounting File Down	load		
It will be downloaded with the file name "WGW256config.bin". Download Accounting data file Download It will be downloaded with the file name "WGW256confyYMM bin". May. 2016 Download Jun. 2016 Download Aug. 2016 Download Aug. 2016 Download Sep. 2016 Download Nov. 2016 Download Nov. 2016 Download Nov. 2016 Download	Accounting configurations file Download				~
Accounting data file Download It will be downloaded with the file name "WGW256costYYMM bin". May. 2016 Download Jun. 2016 Download Aug. 2016 Download Aug. 2016 Download Sep. 2016 Download Nov. 2016 Download Nov. 2016 Download Nov. 2016 Download		It will be downloaded with the file name "WGW	256config.bin".		
Accounting data file Download It will be downloaded with the file name "WGW256costYYMM.bin". May.2016 Download Jun.2016 Download Aug.2016 Download Aug.2016 Download Sep.2016 Download Oct.2016 Download Nov.2016 Download		(Download)			
It will be downloaded with the file name "WGW256costYYMM.bin". May. 2016 Download Jun. 2016 Download Aug. 2016 Download Aug. 2016 Download Sep. 2016 Download Sep. 2016 Download Nov. 2016 Download	Accounting data file Download				
May-2016 Download Jun. 2016 Download Jul. 2016 Download Aug. 2016 Download Sep. 2016 Download Oct. 2016 Download Nov. 2016 Download		It will be downloaded with the file name "WGW25(6costYYMM bin"		
Jun 2016 Download Jul 2016 Download Aug 2016 Download Sep. 2016 Download Oct. 2016 Download Nov. 2016 Download		May 2016 Developed	\		
Jul. 2016 Download Aug. 2016 Download Sep. 2016 Download Oct. 2016 Download Nov. 2016 Download		Jun 2016 Download			
Aug. 2016 Download Sep. 2016 Download Oct. 2016 Download Nov. 2016 Download		Jul. 2016 Download			
Sep. 2016 Download Oct. 2016 Download Nov. 2016 Download		Aug. 2016 Download			
Oct. 2016 Download Nov. 2016 Download		Sep. 2016 Download			
Nov. 2016 Download		Oct. 2016 Download			
		Nov. 2016 Download)		~
Back		Back	, ,		
_					

Accounting File Download screen

2. Click the Download button of the Accounting configuration file Download.

Configure the Air-conditioner Cell before the download. (See page 21.)

3. Click the Download button of the Accounting data file Download.

Click the enabled (not grayed out) Download button.

The latest data at the time the Download button is clicked is downloaded.

4. Make the monthly reports.

The monthly reports are created on a computer using "WGW256Utility". Please see "WGW256Utility Operation Manual".

•Accounting Period Time screen

This screen is used to configure the time period to collect the accounting data.

Accounting is calculated by dividing a day into two period times of in-time/out-time. (Common to all air conditioners)

The time period for the "in-time" is configured on this screen.

The time period other than this configuration is calculated as the "out-time".

1. From the Web Configuration Menu screen, click "Accounting Period Time".

(See page 32.)

WBGW1		WBGW2	WBGW3	WBGW4	
Overview Monitor	Control Command	Schedule Control	System Stop/Release	Configuration Menu	Logout
		Accounting Per	riod Time		i HI aus
		Time period of the 1	normal rate		
			Beel		
-		Set	Dack		

2. Input the time.

The input ranges are as follows.

- •Hour : 0-24 (24-hour indication)
- •Minute : 0-59 (1-minute intervals)

3. Click the Set button.

Troubleshooting

Phenomenon	Cause	Way of Coping
IP address was forgotten.		
Incorrect IP address was configured.		Consult with the dealer where
Password was forgotten.		you purchased this product.
Security setting IP address was forgotten.		
The screen flickers.	While the screen is being refreshed, this occurs for an instant until the new screen is displayed. This is an inherent characteristic of Internet Explorer and there is no problem.	If the flickering becomes pronounced, set the screen refresh interval to 60 seconds or more.
The pop-up window cannot be seen.	After a pop-up window opens up to display an individual monitoring screen, if you click the Overview Monitor screen window in the background, the individual monitoring screen will be hidden.	Select the pop-up window again by clicking the button in the taskbar at the bottom of the screen, or select the desired individual monitoring screen from the Overview Monitor screen again.
The screen shows connection errors.	The browser has malfunctioned.	Click the "Update" button in Internet Explorer. Next, restart Internet Explorer.
The computer freezes.	The computer has malfunctioned.	Restart the computer. Restart Internet Explorer regularly. Change the screen refresh interval to 60 seconds or more.

• Have the following information available when requesting repairs.

Model name	
Installation date	
Problem status, as detailed as possible	
Address	
Name	
Telephone number	

Relocation

Since expert techniques are required, always contact your dealer. In such cases, there will be a fee for relocation.

• Repairs after the free service warranty period.

Consult your dealer.

Warranty period is one year from installation. It will be charged when repair is required after the period. Please consult your dealer.

Questions

For after sales service, consult your dealer.

Dealer Information

Please fill in the following information for the after sales service.

Dealer's Name	<u>.</u>
Person in charge	<u>.</u>
Phone Number	
Purchase Date	



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

2-3 Marunouchi 3-chome, Chiyoda-ku, Tokyo 100-8332, Japan http://www.mhi-mth.co.jp

MITSUBISHI HEAVY INDUSTRIES AIR-CONDITIONING EUROPE, LTD.

5 The Square, Stockley Park, Uxbridge, Middlesex UB11 1ET, United Kingdom Te1: +44-333-207-4072 Fax: +44-333-207-4089 http://www.mhiae.com

MHIAE SERVICES B.V.

(Wholly-owned subsidiary of MITSUBISHI HEAVY INDUSTRIES AIR-CONDITIONING EUROPE, LTD.) Herikerbergweg 238, Luna ArenA, 1101 CM Amsterdam, Netherlands P.O.Box 23393 1100 DW Amsterdam, Netherlands Tel : +31-20-406-4535 http://www.mhiaeservices.com/

三菱重工空调系统(上海)有限公司

中国上海市長寧区延安西路2299号 上海世贸商城29楼 邮编:200336 Tel:+86-21-6236-3030 Fax:+86-21-5877-7330 http://www.mhi-ac.com

MITSUBISHI HEAVY INDUSTRIES AIR-CONDITIONERS AUSTRALIA, PTY. LTD.

Block E, 391 Park Road, Regents Park, NSW, 2143 PO BOX 3167, Regents Park, NSW, 2143 Tel: +61-2-8774-7500 Fax: +61-2-8774-7501 http://www.mhiaa.com.au

MITSUBISHI HEAVY INDUSTRIES - MAHAJAK AIR CONDITIONERS CO., LTD.

220 Soi Chalongkrung 31, Kwang Lamplatiew, Khet Lad Krabang, Bangkok 10520, Thailand Te1: +66-2-326-0401 Fax: +66-2-326-0419 http://www.maco.co.th/