

REMOTE CONTROLLER

REMOTE CONTROLLER **ENGLISH**
OWNER'S MANUAL

OWNER'S MANUAL

MANDO A DISTANCIA **ESPAÑOL**
MANUAL DE USUARIO

TELECOMANDO **ITALIANO**
MANUALE DELL'UTENTE

IMPORTANT NOTE:

Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference.

RYD012A554

CONTENTS

Remote Controller Specifications	02
Handling the Remote Controller	03
Buttons and Functions	04
Remote Screen Indicators	06
How to Use Basic Functions	07
How to Use Advanced Functions	10


ENGLISH

Remote Controller Specifications


Model	RG10D16(P2S)/BGEF
Rated Voltage	3.0V (Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C-60°C (23°F-140°F)

Quick Start Guide


1 FIT BATTERIES

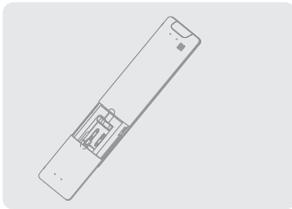


2 SELECT MODE

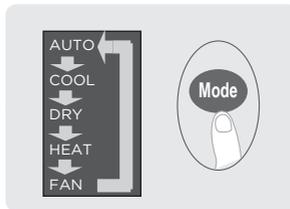


3 SELECT TEMPERATURE

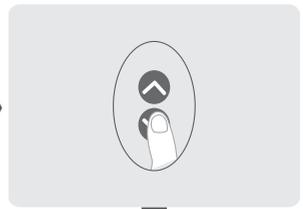


6 PRESS POWER BUTTON

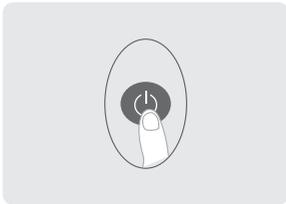

5 POINT REMOTE TOWARD UNIT

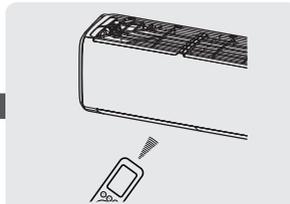

4 SELECT FAN SPEED

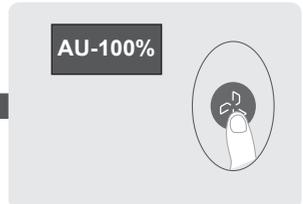

NOT SURE WHAT A FUNCTION DOES?

Refer to the How to Use Basic Functions and How to Use Advanced Functions sections of this manual for a detailed description of how to use your air conditioner.

SPECIAL NOTE


- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing the corresponding button on the remote control will have no effect.
- When there are wide differences between “Remote controller Manual” and “USER’S MANUAL” on function description, the description of “USER’S MANUAL” shall prevail.

Handling the Remote Controller

Inserting and Replacing Batteries

The remote control requires 2 batteries. These may or may not be provided with your model. Put the batteries in the remote control before use.

1. Slide the back cover of the remote control downward, exposing the battery compartment.
2. Insert the batteries, paying attention to matching up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery cover back into place.

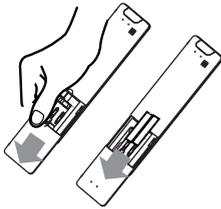

Remote Control

- Direct sunlight can interfere with the infrared signal receiver.
- There must be a clear line of sight between the remote and the appliance.
- If the signals from the remote control happen to control another appliance, move the appliance to another location or contact customer service.

! Battery Disposal

- Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.
- Batteries may have a chemical symbol under the disposal icon. This chemical symbol means that the battery contains a heavy metal that exceeds a certain concentration. An example is Pb: Lead (>0.004%).
- Appliances and used batteries must be treated in a specialized facility for reuse, recycling and recovery. By ensuring correct disposal, you will help avoid possible negative consequences for the environment and human health.



Battery Performance

For optimal product performance:

- Do not mix old and new batteries, or batteries of different types.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.

Notes for Using Remote Control

The device could comply with the local national regulations.

- In Canada, it should comply with CAN ICES-3(B)/NMB-3(B).
- In the USA, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Buttons and Functions

Before you begin using your new air conditioner, make sure to familiarize yourself with the remote controller. The following content is a brief introduction of the remote controller. For instructions on how to operate your air conditioner, refer to this manual of How to Use Basic Functions section.

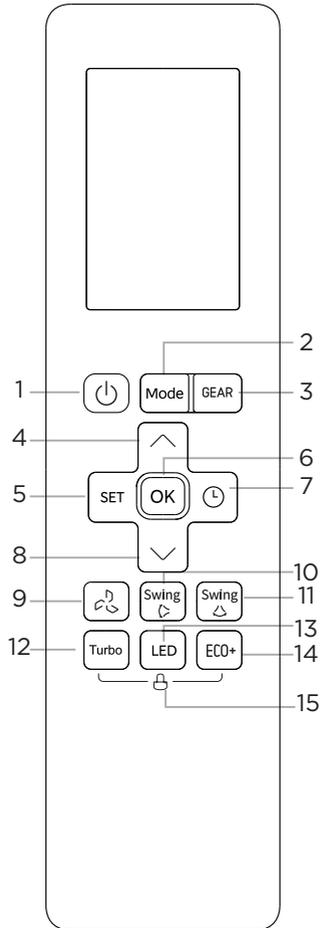

Model:
RG10D16(P2S)/BGEF

Description

- | | |
|----|--|
| 1 |  : Power button. |
| 2 | Mode: Auto > Cool > Dry > Heat > Fan |
| 3 | GEAR: Used to start/stop the GEAR mode.
Note: When the unit is off, press this button will turn the unit on. |
| 4 | Temp Up: Increases temperature in 1°C (1°F) increments.
Max. temperature is 30°C (86°F).
Note: Press  &  buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F. |
| 5 | SET: Sleep > Breeze away > Follow Me > Active clean > Intelligent humidity control* > Fresh/UV lamp* > AP mode
[*]: Not available for this unit. |
| 6 | OK: Used to confirm the selected functions. |
| 7 | Timer: Set timer to turn unit on or off. |
| 8 | Temp Down: Decreases temperature in 1°C (1°F) increments.
Min. temperature is 16°C (60°F). |
| 9 | Fan Speed: AU > 20% > 40% > 60% > 80% > 100%. Press the TEMP  or  button to increase/ decrease the fan speed in 1% increments. |
| 10 | Swing (up and down): Starts and stops the horizontal louver movement. |
| 11 | Swing (left and right): Starts and stops the vertical louver movement. |
| 12 | Turbo: Enables unit to reach preset temperature in shortest possible time. |
| 13 | LED: Turns LED display & air conditioner buzzer on and off. |
| 14 | ECO+: Starts and stops the energy saving operation. |
| 15 | Lock: Long press both Turbo and ECO+ buttons simultaneously for 5 seconds to lock the keyboard. Press together these two buttons again for 2 seconds to unlock the keyboard. |

Remote Screen Indicators

Information is displayed when the remote controller is power up.

Sleep mode **Not available for this unit.** **Breeze away people** **Follow me** **Active clean** **Low battery (If flashes)**

Not available for this unit. **Not available for this unit.** **Turbo** **Not available for this unit.** **Wireless control**

MODE display : Displays the current mode

AUTO **COOL** **DRY** **HEAT** **FAN**

Transmission Indicator **ECO+ feature** **Timer ON** **Timer OFF** **Lock Feature** **Silent Feature** **Not available for this unit.**

Temperature/Timer/Fan speed display
 Displays the set temperature by default, fan speed, or timer setting when using TIMER ON/OFF functions.

FAN SPEED

AUTO	SILENT	LOW	MED	HIGH
 AUTO	 1% 2-20%	 21-40%	 41-60%	 61-80% 81-100%

Note: The fan speed can not be adjusted in AUTO or DRY mode.

Horizontal louver swing **Vertical louver swing** **Not available for this unit**

Note: While using the remote controller, only relevant function indicator will be shown. The indicators above are for reference only.

How to Use Basic Functions



NOTE

Before operation, please ensure that the unit is plugged in and the power is available.

AUTO mode

Select AUTO mode



Set your desired temperature



Turn on the air conditioner



Note:

1. In AUTO mode, the unit will automatically select the COOL, FAN, or HEAT function based on the selected temperature.
2. In AUTO mode, fan speed cannot be set.

COOL or HEAT mode

Select COOL/
HEAT mode



Set the
temperature



Set the
FAN speed



Turn on the air
conditioner



Note: Heat mode is only applicable to the Cooling & Heating models only.

DRY mode

Select DRY mode



Set your desired temperature



 
Turn on the air conditioner



Note: In DRY mode, fan speed cannot be set since it has already been automatically controlled.

FAN mode

Select FAN mode



Set the FAN speed



Turn on the air conditioner




Note: In FAN mode, you can't set the temperature. As a result, no temperature is displayed on the remote's screen.

Setting the TIMER

TIMER ON/OFF - Set the amount of time after which the unit will automatically turn on/off.

TIMER ON setting

Press TIMER button to initiate the time ON sequence.

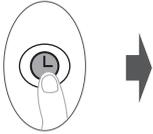


Press Temp. up or down buttons to set the length of time after which you would like the unit to turn ON. Wait for 1 second to activate time to turn on the unit.



TIMER OFF setting

Press TIMER button to initiate the time OFF sequence.

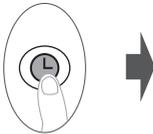

Press Temp. up or down buttons to set the length of time after which you would like the unit to turn OFF. Wait for 1 second to activate time to turn off the unit.




Note:

1. When setting the TIMER ON or TIMER OFF, the time will increase in 30-minute increments with each press, up to 10 hours. After 10 hours and up to 24, it will increase in 1-hour increments (For example, press 5 times to get 2.5h and press 10 times to get 5h). The timer will revert to 0.0 after 24.
2. Cancel either function by setting the timer to 0.0h.


TIMER ON & OFF setting (example)

Keep in mind that the time periods you set for both functions refer to hours after the current time.

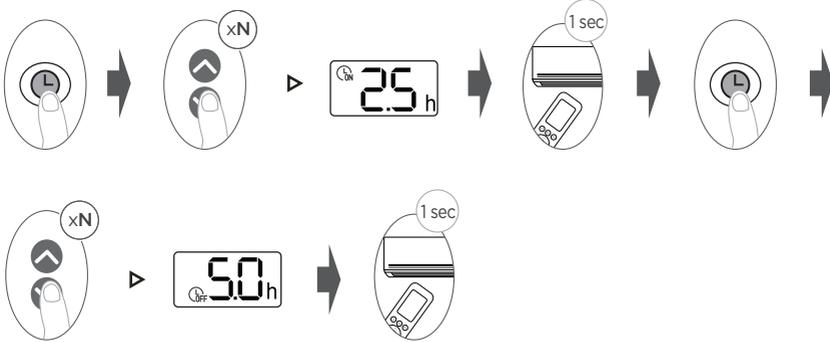


Note: “ x N ” means you can press multiple times until it is set to the time you need.

Example: If current time is 1:00 PM, after setting the timer as above steps, the unit will turn on 2.5h later (3:30 PM) and turn off at 6:00 PM.

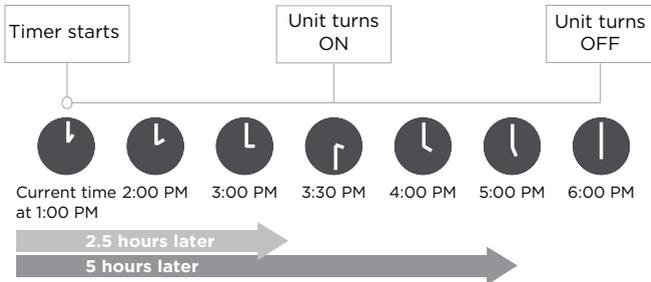


How to Use Advanced Functions

Swing function

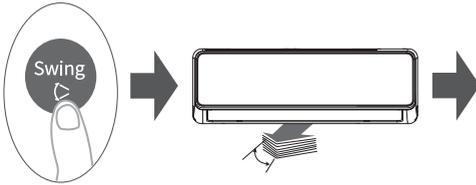


Press this button repeatedly, and if the interval between presses is within 3 seconds, the horizontal louver will operate in the following order: Louver auto swing stop > Louver auto swing start > Louver angle 1 > Louver angle 2 > Louver angle 3 > Louver angle 4 > Louver angle 5.

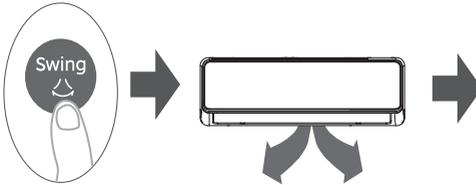

Press this button repeatedly, and if the interval between presses is more than 3 seconds, the horizontal louver will operate in the following order: Louver at a certain angle > Louver auto swing start > Louver auto swing stop.

Press this button, the vertical louvre will swing left and right automatically.

LED display

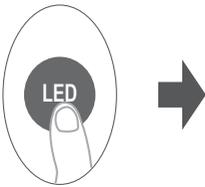


Press this button to turn on and turn off the display on the indoor unit.



Press this button for more than 5 seconds (some units)

After keeping pressing this button for more than 5 seconds, the indoor unit will display the actual room temperature. Pressing the button for more than 5 seconds again will revert back to display the setting temperature.

FP function

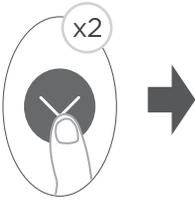


The unit will operate at high fan speed (while compressor on) with temperature automatically set to 8°C/46°F.

Note: This function is for heat pump air conditioner only.

Press this button 2 times during one second under HEAT mode with setting temperature of 16°C/60°F to activate FP function. The indoor unit will display “FP” on the display window.


ECO+ function

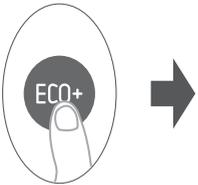

Press this button when in COOL/HEAT mode, the fan speed will change to Auto, the set temperature will remain unchanged which brings more comfortable feelings and power-saving, and reduces temperature fluctuations.

Note: This function is only available when the unit is in COOL or HEAT mode.

Silent function

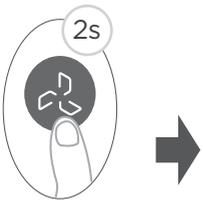

Long press Fan button for more than 2 seconds to activate/disable silent function (some units).

Due to low frequency operation of compressor, it may result in insufficient cooling capacity.

Turbo Function



When you select Turbo feature in COOL mode, the unit will blow cool air with strongest wind setting to jump-start the cooling process.

When you select Turbo feature in HEAT mode, the unit will blow heat air with strongest wind setting to jump-start the heating process (some units).

For units with Electric heat elements, the Electric HEATER will activate and jump-start the heating process.

Gear function




Press Gear button to activate the GEAR function. Press the  or  button to select appropriate GEAR levels (L1, L2, L3, L4, L5) under which you want the unit to operate. The desired level will be registered within a 5 second period after pressing the  or  button. The factory default GEAR level setting is L3.

When the GEAR function is activated, pressing the Gear button to display the current operating level, and pressing it again to stop the GEAR function. The system will automatically memorize the previous operating level after the unit is turned off or the GEAR function is stopped.

Note:


- When the remote controller is turned off and the setting mode is not Heat, pressing the Gear button will turn the unit on and start the Cool mode and GEAR function at the same time.

Louver Reset function (some units)

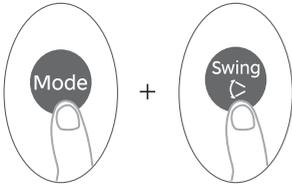

Turn off system from remote control and then press “ Mode ” and “ Swing ” button to together until hear beep sound from indoor. The indoor is into louver re-set mode. Do not press any button and it is completing the process automatically.

SET function

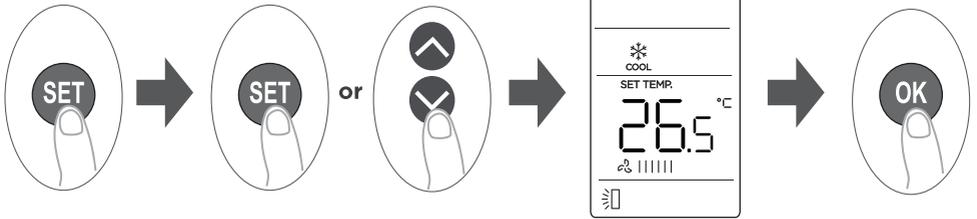

- Press the SET button to enter the function setting, then press SET button or TEMP▼ or ▲ TEMP button to select the desired function. The selected symbol will flash on the display area, press the OK button to confirm.
- To cancel the selected function, just perform the same procedures as above.
- Press the SET button to scroll through operation functions as follows:

Sleep (☾) > Breeze away (🌀) > Follow Me (👤) > Active clean (🧼) >
 Intelligent humidity control * (💧) > Fresh/UV lamp* (🌞) > AP mode (📶)
 [*]: Not available for this unit.

Sleep Function

Use this feature to decrease energy use while you sleep. When the sleep function is activated, the air conditioner will intelligently adjust temperature, fan speed to provide a more comfortable sleeping environment. Under sleep operation, the system will automatically remember the set temperature within 30 minutes. The next time it is activated, it will start running at the temperature of the last memory. After the sleep function is activated, it will automatically be cancelled after 9 hours.

Breeze Away Function

This feature avoids direct air flow blowing on the body and makes you feel indulging in silky coolness.
 Note: This feature is available under cool, Fan and Dry mode only.

Follow Me Function

The FOLLOW ME function enables the remote control to measure the temperature at its current location and send this signal to the air conditioner in 3-minute intervals. When using AUTO, COOL or HEAT modes, measuring ambient temperature from the remote control (instead of from the indoor unit itself) will enable the air conditioner to optimize the temperature around you and ensure maximum comfort.

NOTE: Press and hold Turbo button for 7 seconds to start/stop the memory feature of the Follow Me function.

- If the memory feature is activated, “ On ” displays for 3 seconds on the screen.
- If the memory feature is stopped, “ OF ” displays for 3 seconds on the screen.

Active Clean Function

The Active Clean technology removes dust and mold that may cause odors. Active Clean rapidly freezes and thaws the heat exchanger, to clean away material that has adhered to it. When this function is turned on, the indoor unit displays “ CL ”. After 20 to 130 minutes, the unit will turn off automatically and terminate CLEAN function.

AP Function

Use the SET button to choose AP (Access Point) mode to enable wireless configuration. If this function is not available on this unit, it might be possible to enter AP mode by pressing the LED button 7 times in 10 seconds.

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo, 100-8332, Japan
<https://www.mhi-mth.co.jp/en/>

MITSUBISHI HEAVY INDUSTRIES AIR-CONDITIONING EUROPE, LTD.

5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom
Tel : +44-333-207-4072
<https://mhiae.com>

MHIAE SERVICES B. V.

(Wholly-owned subsidiary of MITSUBISHI HEAVY INDUSTRIES AIR-CONDITIONING EUROPE, LTD.)

Herikerbergweg 238, Luna Arena, 1101 CM Amsterdam, Netherlands
P.O.Box 23393 1100 DW Amsterdam, Netherlands
Tel : +31-20-406-4535
<https://www.mhiaeservices.com/>